Instruction Manual

DISCO POTTY



Read through this entire instruction manual BEFORE using **Disco Potty**. We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials.


For service claims or questions please consult our website **ProtocolDesign.com.**

WARNINGS:

- Do not submerge in water.
- Do not mix old and new batteries.

PARTS INCLUDED:


Set

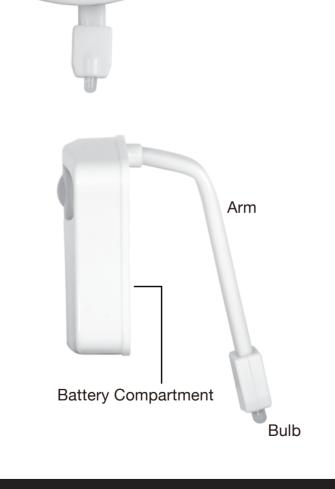

Motion Light/Sensor

SET UP:

- 1. Install 3 x 'AAA' batteries into the battery compartment.
- 2. Bend the arm to fit the rim of the toilet bowl. The arm and bulb go on the inside of the bowl. The set button and sensor go on the outside (Fig. 1). The sensor works best when facing the bathroom's entrance.
- 3. The light will only show in the dark. It is motion sensitive and will stay on for 2 minutes after detecting movement.
- 4. The light cycles through colors. Press the set button to have it stay on a desired color (Fig.2). Press again to have it cycle through.

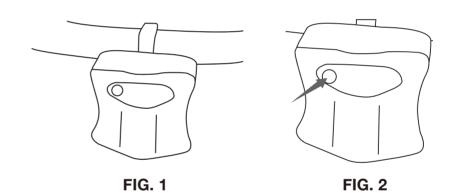

CLEANING:

Wipe the Disco Potty with a damp cloth and cleaner. Do not submerge in water.