


Instruction Manual for Cheerlouder™ Megaphone

Read through this entire instruction manual BEFORE using your Cheerlouder Megaphone.

We're dedicated to bringing you well-designed products that make living fun and easy. We stand behind all our products and warrant this to be free from defects in workmanship and materials for 1 year from the date of purchase. For service claims or questions, please visit our website ProtocolNY.com.




Fig. 1

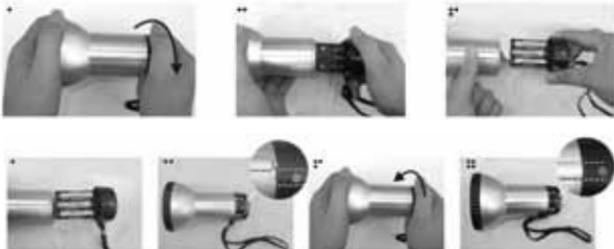

Parts

1. Speaker
2. Power button
3. Siren button
4. Volume knob
5. Battery cover
6. Nylon carrying cord

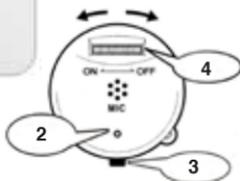

BATTERY INSTALLATION (Fig. 1)

1. To open the battery compartment, unscrew the back cover to pull out the battery compartment. Make sure not to pull too hard as there is a cord connecting the compartment with the rest of the megaphone.
2. Insert 3 'AAA' sized batteries according to indicated polarities. Screw on the back cover until it clicks into place. The ridges on the megaphone's surface should be aligned.

USING THE MEGAPHONE

1. Roll the volume knob towards the "ON" side and you will feel a click and the red light will turn on.
2. Continue rolling the volume knob towards "ON" to increase the volume.

SIREN


1. Press the red "Siren" button to activate the siren.
2. Press the "Siren" button to deactivate the siren

ADJUSTING THE VOLTAGE SWITCH

If you are at the max volume on the megaphone and it is still not loud enough, you can adjust the voltage switch to increase volume.

The voltage switch is located in the megaphone's battery compartment. Using a thin edge, follow the below guide to turn the switch to the desired voltage (Fig. 2).

Fig. 2

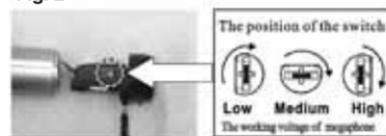

"When you turn the volume to high and the megaphone begins to howl, please make sure to lower the volume or turn down the voltage switch.

WARNINGS

- Remove batteries when megaphone is not used for long periods of time.
- Replace batteries when volume becomes weak.