

Joker MACHINE

LED INTENSIFIER IN-LINE CONVERTER

For technical support contact Joker Machine

2245 Kiowa Blvd N. Ste. 100, Lake Havasu City, AZ 86403

PHONE: 909-596-9690, FAX: 909-596-9693

sales@jokermachine.com, www.jokermachine.com

JOKER LED WIRE COLORS MAY VARY
(shown with Astro turn signal)

JOKER LIGHTS

Purple Wire - Power (+)
Joker power wire color will be
purple, red or white
Black Wire - Ground (-)

CONVERTER

Use when installing Joker lights as
running and turn signal lights on
the front and rear, or as a
run/brake/turn on the rear.

Purple Wire - Brake / Turn Signal (+)
Blue Wire - Running Light (+)
Black Wire - Ground (-)

STOCK WIRES

Purple Wire - Brake / Turn Signal (+)
Blue Wire - Running Light (+)
Black Wire - Ground (-)

WIRES FROM MOTORCYCLE HARNESS

(wire colors will vary on year/make/models. Reference your factory schematic)

Joker Intensifier in-line converter will convert a single function light, into a dual high function, hi/low light.

- Converter has been designed to hide in-line with your factory wiring.
- The high function can be turn signal function or brake function, the low function is for running light.
- Solder your connections as shown in the diagram above, and heat shrink to cover your connections.
- One pair of converters is needed per pair of lights.
- Converters are sold in pairs.
- In-line converter is not for incandescent or halogen bulbs and max rated for 500 milli-amps.

AFTER INSTALLTION

Depending on your bikes year/make/model additional components may be required to make Joker Machine lights operate like factory lights. Most of the extra components needed are inexpensive and easy to get. Please feel free to contact Joker Machine for more information on what is required for your motorcycle.