



STALKER SHIFT LINKAGE ROD INSTRUCTIONS

PART NO. 08-10

For technical support contact Joker Machine

2245 Kiowa Blvd N. Ste. 100, Lake Havasu City, AZ 86403

PHONE: 909-596-9690, FAX: 909-596-9693

sales@jokermachine.com, www.jokermachine.com

TOOLS NEEDED

- 7/16" wrench
- 1/2" wrench
- 3/16" allen key / T-Handle
- Blue Loctite

INSTALLATION

NOTE: Use blue Loctite on all hardware

1. Remove stock shift linkage.
NOTE: Avoid motor fins when removing stock hardware.
2. Before installing on the bike adjust Joker Machine Shift Linkage Rod to match stock length, but don't fully heim joint lock nuts until later.
3. Attach rear heim joint to front side of rear linkage arm first.
4. Attach front heim joint to the back side of the front linkage arm and re-use stock washer.
5. Test and make sure you have the correct length so that the gears shift okay.
6. Make any final adjustment to heim joints and fully tighten down button head screws and heim joint lock nuts.

