

Joker MACHINE

FLIP-UP GAS CAP INSTRUCTIONS

For technical support contact Joker Machine

2245 Kiowa Blvd N. Ste. 100, Lake Havasu City, AZ 86403

PHONE: 909-596-9690, FAX: 909-596-9693

sales@jokermachine.com, www.jokermachine.com

O-Rings: Harley: thick
Triumph: thin


Install gas cap with o-ring supplied for Harley or Triumph applications.

If gas cap stops before desired position, loosen the 3 adjustment set screws with 1/16" hex key and move gas cap into position.

Tighten set screws.

NOTE: Use Blue Loctite on adjustment set screws.

ADJUSTMENT SET SCREW LOCATIONS

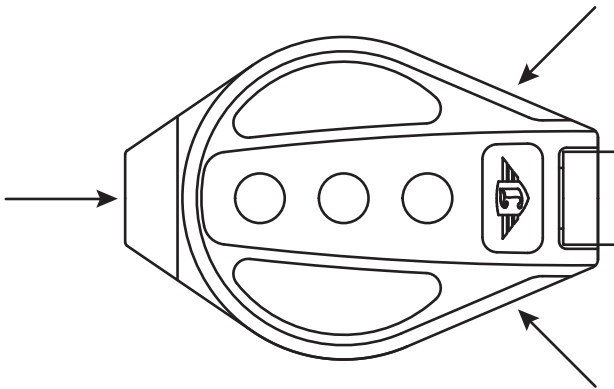

RETRO VERSION

