




# CINESTICKS PN1

## Information Sheet

CineSticks PN1 is a set of resistive joysticks that use a specialised design to give the smooth control that standard little joysticks just aren't capable of. They're designed to fit most DJI Phantom Controller, DJI Inspire Controllers and some other controllers with the same 3mm threaded rod.

The CineSticks PN1 come with Light to Medium rubber boots as well as Medium to Hard silicone rubber boots.

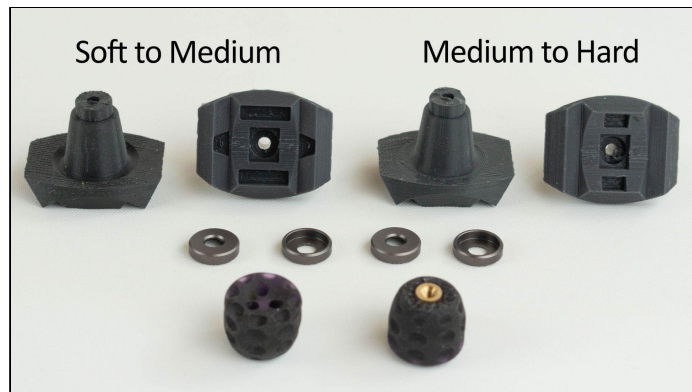

### Attaching to the Controller

1. First unscrew the original joystick knobs and get:-
  - a. Pair of silicone boots
  - b. Two alloy caps for the silicone boots
  - c. Two threaded joystick knobs
2. Push the silicone boot over the threaded rods until the rubber seats itself flat within the controller.
3. Add the alloy caps to the top of the silicone.
4. Finally, screw on the joystick knobs.





**Note:** When using the CineSticks, letting go of the joysticks may not return to the centre exactly. Instead, you should bring the CineSticks back to the centre and then confirm visually that there is no drift. For the majority of controllers that perform a pre-flight stick check, it's best to start up with the CineSticks at low resistance before increasing resistance.

It's recommended that you store the CineSticks with the resistance off to keep your CineSticks performing at their best.

Please avoid making rapid (whip) turns when the resistance is firm.

## Turning the resistance up

To get greater resistance in the CineSticks i.e. increase how firm the CineSticks are, adjust them as follows:-

Turn the knob clockwise. As the knob turns, test out the resistance to get to the perfect resistance for your own preference.



## Turning down the resistance

To decrease the resistance in the CineSticks i.e. increase how soft the CineSticks are, just turn the knob counterclockwise until you find the right amount of softness / resistance.

