Platinum Stages

PERMANENT SPINNING COMPETITION SPINNING

One

WO

Three

our

Use a stud finder and locate a in your ceiling rafter and mark with pencil. Using a plum line or a string with a nut on the end hang the string from the ceiling and mark center of pole on the floor.

The square bolt flange will be used for the ceiling mount and will be mounted into beam in ceiling after the bottom plate is bolted into the floor.

Using one of the 2" screws, secure the base plate to the floor through the washer that is under the bearing without the pole inserted.

*See reverse side for Studio Plate upgrade

Attach square adapter to coupler at top of pole. Set large washer on bearing and use black screw with 5/32" hex key to tighten screw all the way down to secure coupler to top mount in pole. Once the square mount is attached to coupler, insert the pole in the bottom bearing.



Optional Studio

Plate Upgrade



Contact Customer Service for 24 hour support

949-627-8791

www.PlatinumStages.com

Congratulations on purchasing from PLATINUM STAGES!

If you are unsure of the inherent dangers of pole dancing to include injury or death please do not use this product and return to Platinum Stages within the return period, unused and in original condition. You may be subject to a restocking fee and or shipping costs. Upon opening of your Platinum Stage product you are assuming the risk of injury to yourself, others and or adjacent property. Platinum Stages, its employees, sales persons and retail shops are hereby held harmless if the user injures themselves, others or while using this product.

IF YOU DO NOT ACCEPT FULL RESPONSIBILITY FOR THE USE OF THIS PRODUCT PLEASE CALL 949-627-8791 AND RECEIVE AN RA NUMBER FOR THE RETURN OF YOUR PLATINUM STAGES PRODUCT.

Limited Warranty:

Platinum Stages warrants all parts against damage, which impair the structural integrity of the product for 1 year from the date of purchase to the original owner with proof of purchase. All parts covered under this warranty will be replaced free of charge and returned to the customer freight collect. This warranty does not cover normal wear and tear or damages resulting from misuse, abuse, altered or improperly installed equipment.

Bolt the top flange into ceiling rafter using,washers, and the 2" screws. Use smaller" hex key on the side of the bearing to tighten top mount set screws to coupler. If mounting on a beam, mount square flange diagonally. Using one small washer on either side bolt holes on top square mount. Shake pole vigorously to ensure proper installation before use.

Tip: Top mount can pivot to angle into position or be installed on vaulted ceilings.

*See reverse side for Vaulted Ceiling Upgrade

Tive