



# **THE FITNESS EARBUDS**

<https://rayconglobal.com>

# CONTENTS

|                                                |    |
|------------------------------------------------|----|
| <b>INTRODUCTION</b>                            | 01 |
| <b>OVERVIEW ( FEATURES )</b>                   | 02 |
| <b>WHAT'S IN THE BOX</b>                       | 03 |
| <b>UNIT AT A GLANCE</b>                        | 04 |
| <b>FUNCTIONS</b>                               | 05 |
| <b>SOUND FEATURES</b>                          | 06 |
| <b>USING YOUR EARBUDS</b>                      | 07 |
| Connecting via Bluetooth                       | 07 |
| Charging Your Device                           | 08 |
| LED Status                                     | 09 |
| Resetting Device                               | 10 |
| <b>FINDING THE BEST FIT</b>                    | 11 |
| Finding the best fit                           | 12 |
| <b>ADVANCED FEATURES</b>                       | 13 |
| <b>TROUBLESHOOTING / FAQ</b>                   | 14 |
| Troubleshooting / FAQ                          | 15 |
| <b>SAFETY &amp; WARRANTY</b>                   | 16 |
| <b>COMPLIANCE &amp; REGULATORY INFORMATION</b> | 17 |



## INTRODUCTION

---

Introducing your new Fitness Earbuds — an audio companion as strong as you are.

At Raycon, we believe in creating innovative tech designed to embrace and empower your every day. We've teamed up with expert engineers, leading taste-makers, and platinum artists to design wireless audio you'll love to use and every day tech that can take whatever life throws your way. We believe in the early risers and the one-more-milers of the world. Premium audio, inspired by you.

To get the most out of your Fitness Earbuds, we strongly encourage you to fully read through this user guide. You can also visit our support center at [www.rayconglobal.com/support](http://www.rayconglobal.com/support). This web page has more specific guidelines and helpful videos for you to navigate your product. For best performance, charge fully before first use.

## FEATURES AT A GLANCE

---

### BUILT FOR ACTIVITY

Perfect Fit Stabilizers, IPX7 Water Resistance, & 56 Hours of Battery Life

- Take your workouts to the next level with The Fitness Earbuds! These earbuds are designed for the athlete in you, with IPX7 water resistance and a secure, comfortable fit that will keep you motivated and focused during any activity.

### IMMERSIVE AUDIO

Active Noise Cancellation & Awareness Mode

- Experience unparalleled sound quality during your workouts with advanced earbuds equipped with ANC and Awareness Mode! These earbuds are designed to enhance your active lifestyle, with ANC to eliminate external noise and Awareness Mode to amplify sounds in your environment.

 
### VERSATILE CONNECTIVITY

Multipoint Technology


- Never sacrifice productivity for physical activity with earbuds that feature Multipoint technology! Connect to both your laptop and phone simultaneously, ensuring that you never miss an important call or email, while still being able to enjoy your favorite tunes during your workout.

## WHAT'S IN THE BOX


---

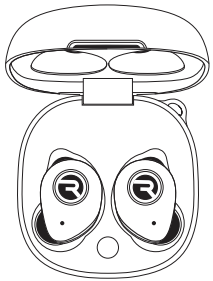

1

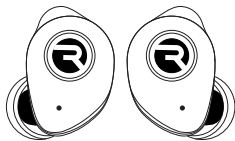 


2

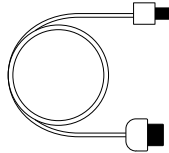 


3



 4

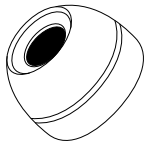

5

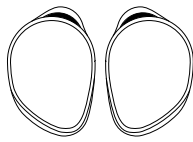 

6



7




8

- |                                           |                           |
|-------------------------------------------|---------------------------|
| 1. Charging Capsule                       | 5. Gel Tips (5 Sets)      |
| 2. The Fitness Earbuds                    | 6. Perfect Fit Stabilizer |
| 3. USB to USB-C Charging Cable            | 7. Lanyard                |
| 4. Quick Start Guide & Compliance Booklet | 8. Carabiner              |

## UNIT AT A GLANCE

 
---

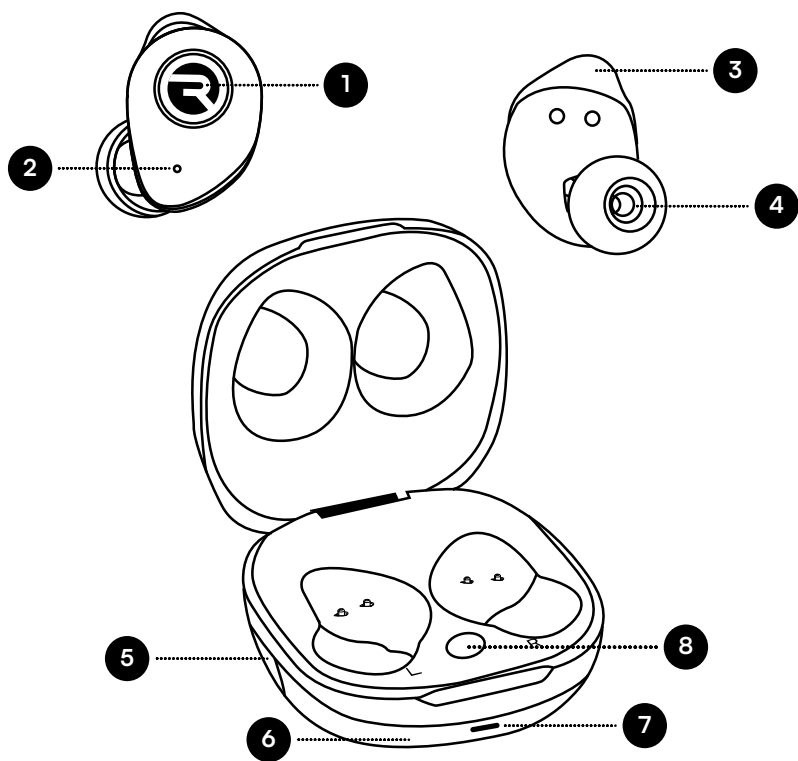

- |                                              |                              |
|----------------------------------------------|------------------------------|
| 1. Touch Control Surface                     | 5. Capsule Charging Port     |
| 2. LED Indicator / Microphone (4 Mics total) | 6. Wireless Charging Surface |
| 3. Perfect Fit Stabilizer                    | 7. Battery Indicator         |
| 4. Gel Tip                                   | 8. Reset Button              |

## FUNCTIONS / TOUCH CONTROL

 ---

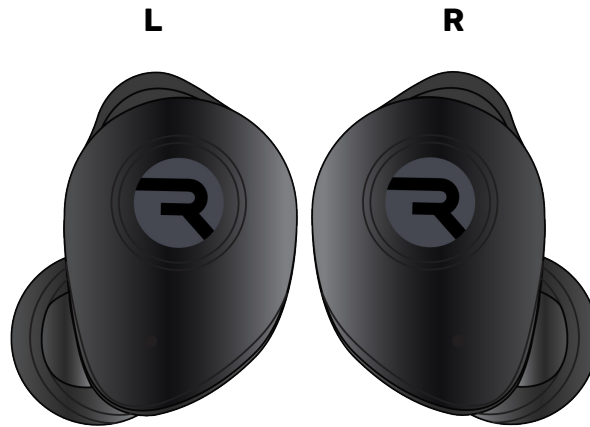

### LEFT EARBUD CONTROLS:

-  Volume Down *Tap Once*
-  Previous Track *Tap 3 times*
-  Balanced Sound *Hold for 3 Seconds*
-  Bass Sound *Hold for 3 Seconds*
-  Pure Sound *Hold for 3 Seconds*

### RIGHT EARBUD CONTROLS:

 
-  Volume Up *Tap Once*
-  Skip Track *Tap 3 times*
-  ANC On *Hold for 3 Seconds*
-  ANC Off *Hold for 3 Seconds*
-  Awareness Mode *Hold for 3 Seconds*

### LEFT/RIGHT EARBUD CONTROLS:

-  Play/Pause *Tap twice*
-  Voice Command *Tap 4 times*
-  Answer Call *Tap Twice*
-  End Call *Tap Twice*
-  Reject Call *Hold for 3 Seconds*  
(While receiving a call)
-  Power On *Hold for 3 Seconds*
-  Power Off *Hold for 10 Seconds*

## SOUND FEATURES

---

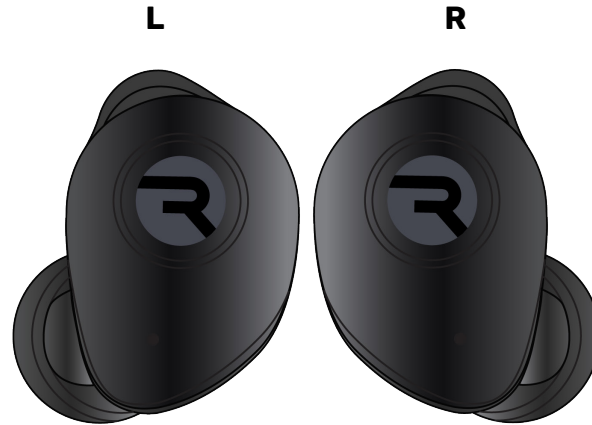

### EQUALIZER CONTROLS AND NOISE CONTROLS

#### LEFT EARBUD

Hold for 3 seconds to toggle between EQ profiles

-  **Balanced Sound:** A leveled sound that is great for all around performance and warmth
-  **Bass Sound:** Our bass boosted sound, great for songs with strong beats and a go-to for bass lovers.
-  **Pure Sound:** Our most refined sound, perfect clarity to hear every single note.

#### RIGHT EARBUD

Hold for 3 seconds to toggle between Noise Cancellation and Awareness Mode

 
-  **Active Noise Cancellation (ANC):** Uninterrupted focus by blocking out unwanted noise
-  **Awareness Mode:** Enhance and stay connected to the world around you by amplifying external noise.




## USING YOUR EARBUDS

### CONNECTING VIA BLUETOOTH

1. Take your earbuds out of the capsule. Both earbuds will connect to each other automatically.

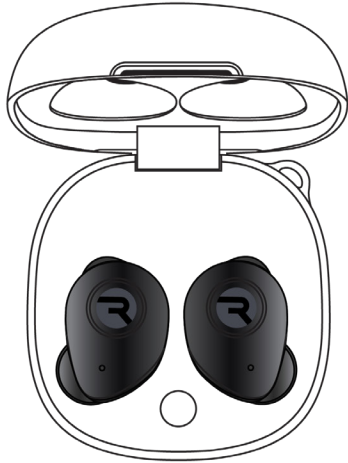


 2. From the source device, go to Bluetooth settings and ensure Bluetooth is on. Search for “The Fitness Earbuds” and select it to pair.

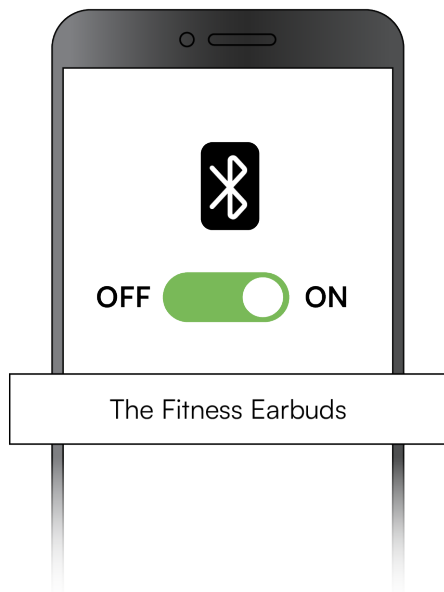

## CHARGING YOUR DEVICE

 
1. Plug the USB-C connector in the Capsule Port or place on Wireless Charging Pad.

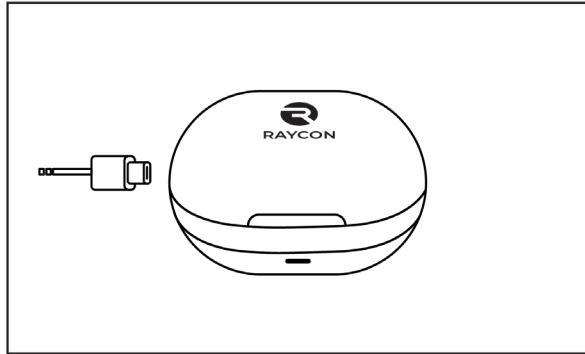


2. When charging, the Capsule LED will start to breathe. The LED color will indicate capsule battery. Once fully charged, the LED will turn off.

|                                                                                     |                   |
|-------------------------------------------------------------------------------------|-------------------|
|  | <25% Battery      |
|  | 25% - 75% Battery |
|  | >75% Battery      |
|  | Fully Charged     |

 3. When placing or removing the earbuds in the Capsule, the LED will blink Green.

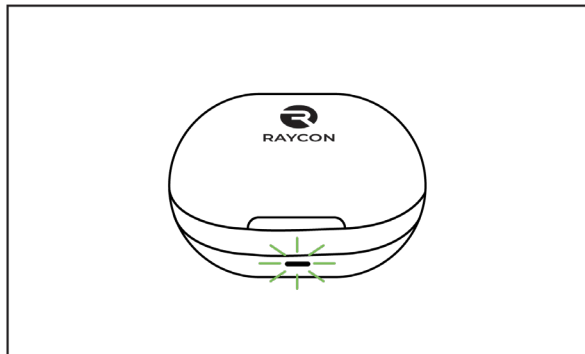

 4. A blinking Amber LED indicates that the earbuds are charging.

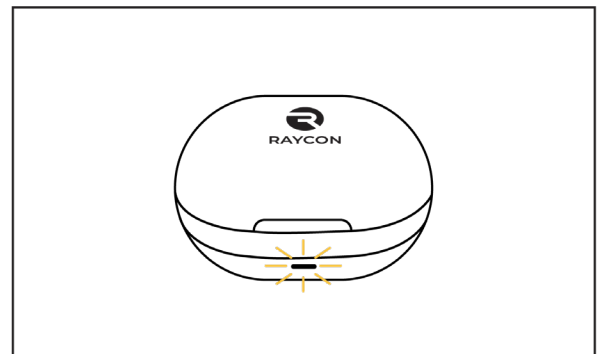

## LED STATUS —————

### CAPSULE LED

| LED INDICATION                                                                    | STATUS              | MEANING                                           |
|-----------------------------------------------------------------------------------|---------------------|---------------------------------------------------|
|  | Blinking Red LED    | Capsule battery is less than 5%                   |
|  | Solid Red LED       | Capsule battery is less than 25%                  |
|  | Solid Amber LED     | Capsule battery is between 25% - 75% battery life |
|  | Breathing Amber LED | Earbuds are charging in the capsule               |
|  | Solid Green LED     | Capsule battery is greater than 75%               |

 
### EARBUD LED

| LED INDICATION                                                                     | STATUS                          | MEANING                     |
|------------------------------------------------------------------------------------|---------------------------------|-----------------------------|
|   | Alternating Blue and Red Lights | Earbuds are in Pairing Mode |
|  | Solid Blue LED                  | Earbuds are connected       |

Note: Capsule LED indicates only Capsule Battery and does not reflect Earbud Battery

## RESETTING DEVICE ---

### FACTORY RESET / UNPAIRING

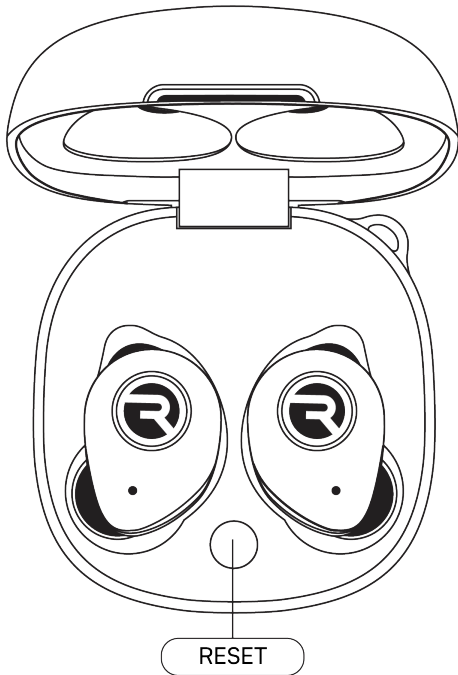

First, delete the “Fitness Earbuds” from the Bluetooth settings on your device, and place your earbuds back in the charging capsule.

While earbuds are in the capsule, hold the center Reset button for 5 seconds or until the capsule LED flashes yellow 3 times. Close the capsule to complete the reset function.

You are now able to reconnect to your source device - please follow the instructions earlier in the manual for set up instructions.




## FINDING THE BEST FIT
   
### CHANGING GELTIPS:

Install the geltip that gives you the most comfortable and secure fit.




Note: Your ears can vary in size, so using different size geltips for each ear may be necessary.

1. Flip the geltip inside out.
2. Align new geltip with the earbud nozzle and insert until a click is heard.
3. Flip the gel tip back to its original position and ensure it is securely attached before use.

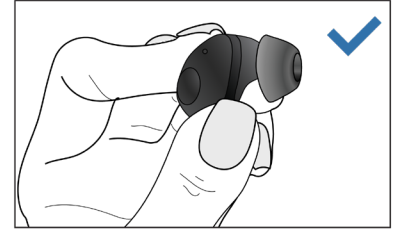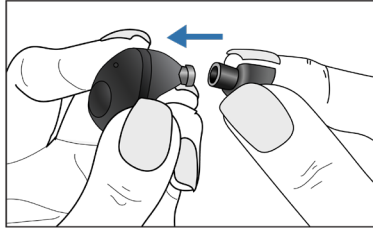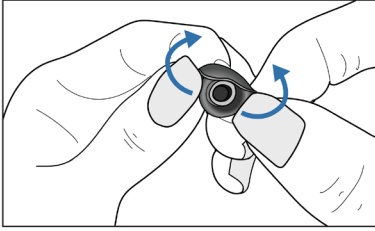

### CHANGING STABILIZERS:

   1. Ensure the stabilizer corresponds with the correct earbud.
2. Secure the inner hook of the stabilizer into the groove at the top of the earbud.
3. Guide the stabilizer into place and ensure it is fully secure before use.

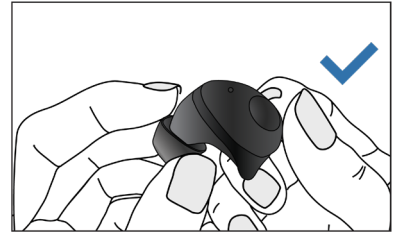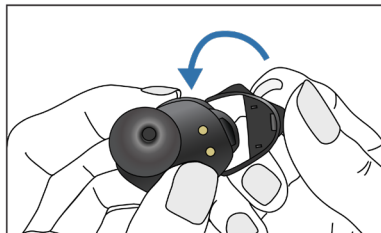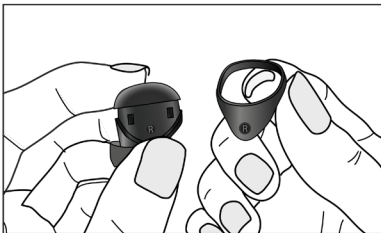



## FINDING THE BEST FIT

XS



S



M



L



XS



S



M

 


L




Select the right size gel tip for your ear. Keep gel tips clean to ensure a great listening experience.

Select the right size stabilizer for your ear.

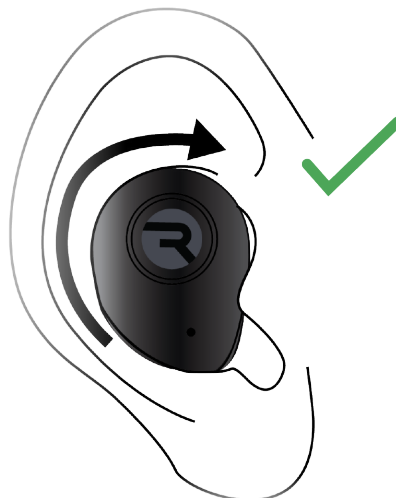

## ADVANCED FEATURES ---
 
### MULTI-LINK

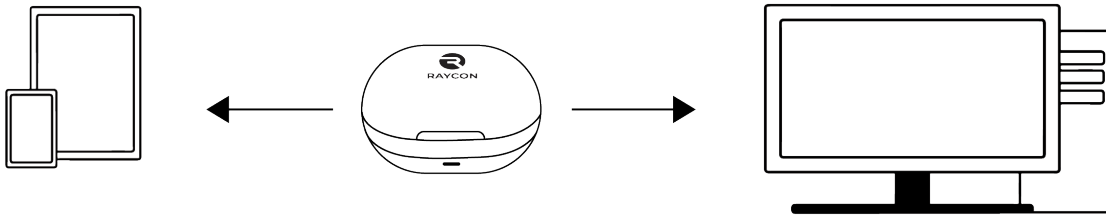

### WHAT IS MULTI-LINK?

Multi-Point allows you to connect your earbuds to up to two devices simultaneously, such as your smartphone, laptop, or tablet - the combinations are endless!. This means you can easily switch between devices without having to disconnect and reconnect each time. Once you have paired your Fitness Earbuds with both devices, they will automatically switch to whichever device is playing audio. With Multi-Point, you can connect your earbuds to both your phone and your laptop, allowing you to easily switch between your workout playlist and work calls without any interruptions.

### HOW DO YOU SET UP MULTIPPOINT?

To use this feature, make sure both devices are within the Bluetooth range and have Bluetooth enabled.

1. Pair the earbuds with your first device (e.g. your smartphone).
2. Disconnect the earbuds from your first device using the Bluetooth settings on the device. The earbuds will re-enter Pairing Mode.
3. Pair the earbuds with your second device (e.g. your laptop) via its Bluetooth settings.
4. Put the earbuds back into the charging case and close the lid to turn them off.
5. Remove the earbuds from the case.
6. The earbuds will now be able to connect to both of your devices when turned back on.

### **BLUETOOTH CONNECTION / SOUND INTERFERENCE?**

- Ensure speaker is within 10 meters (33 feet) of connected Bluetooth device
- Check the battery level: If the battery level of either the earbuds or your connected device is low, it can cause the connection to be weak or to drop.

### **CAPSULE WILL NOT CHARGE?**

- Using the provided USB-C charging cable, make sure that the cable is firmly plugged into the charging case and USB-C power adapter.
- If using a wireless charging pad, ensure that the cable is firmly plugged into the charging pad and that the other end is correctly plugged into a power outlet.

### **EARBUDS WILL NOT CHARGE?**

- Ensure the charging case is charged, indicated by LED on the front: should be an amber or green color.
- Confirm there is nothing blocking the earbuds from the connection to the case.
- Insert earbuds into the case, and confirm a blinking amber LED on the front of the case, which indicates that the earbuds are charging.

### **MULTIPOINT IS NOT WORKING?**

- Confirm both earbuds are charged and that they are disconnected from any Bluetooth device.
- Confirm Earbuds are in pairing mode and reconnect devices to Bluetooth.

### **RESETTING YOUR EARBUDS?**

- Delete “The Fitness Earbuds” from the bluetooth settings on your device, and place the earbuds back in its case.
- While earbuds are in the capsule, hold the center Reset button for 5 seconds or until the capsule LED flashes yellow 3 times. Close the capsule to complete the reset function.

### **CLEANING INSTRUCTIONS:**

#### **GEL TIPS AND STABILIZERS:**

- Remove the attachments from earbuds and wash them with mild detergent and water, then rinse and dry before reattaching. Avoid using harsh chemicals.

#### **EARBUD NOZZLES:**

- Use a soft-bristled brush or a dry cotton swab to remove any visible debris or earwax. Avoid using liquid or wet cleaning agents as they may damage the inner electronics of the earbuds.

#### **CHARGING CAPSULE:**

- Use a soft, dry cloth or a slightly damp cloth and wipe the surface gently. Avoid using harsh chemicals, water, or excessive moisture, which can damage the electronic components.

## **SAFETY & WARRANTY** ---

### **SAFETY GUIDELINES**

- Be wary of any edges, uneven surfaces, and metal parts, including on accessories and product packaging, to prevent any possible injury or damage.
- Listen to music at proper volume to avoid damaging your hearing and earbuds
- Do not store in high temperatures, such as in a hot vehicle or in direct sunlight
- Do not expose the earbuds or any of its supplied parts to rain or other liquids for extended periods of time.
- Do not drop or cause undue impact to the earbuds
- Do not modify, repair, or dismantle the product on your own
- Do not use any diluent or volatile liquid to clean the product
- Do not use the product in a hazardous location.
- Ensure all port covers are securely closed if exposing charging capsule to liquid
- Do not expose the speaker to water while charging, as doing so may result in damage to the speaker or the power source
- When cleaning this speaker, use a soft dry cloth. For more severe stains, dampen the cloth with water only. Anything else increases the chance of dissolving the paint or damaging the plastic

### **SUPPORT**

If your device is not functioning properly, please visit [www.rayconglobal.com/support](http://www.rayconglobal.com/support) for customer support, and we will be more than happy to help you.

### **LIMITED WARRANTY**

Your Fitness Earbuds are covered by a limited warranty. Please visit our website at [www.rayconglobal.com/warranty](http://www.rayconglobal.com/warranty) for more details.

### **PRODUCT SPECIFICATIONS**

Model: RBE745  
Pairing ID: The Fitness Earbuds  
Bluetooth Version: 5.3  
Power Input: DC 5V / 1A  
Capsule Battery Capacity: 600 mAh  
Call / PlayTime: About 12 Hours  
Charging Time: About 1 hours  
Total Play Time: About 56 Hours  
Support Profiles: HSP / HFP / A2DP / AVRCP  
Sensitivity: 102 ± 3dB  
Frequency Response Range: 20 - 20000 Hz  
Bluetooth Range: Up to 10 Meters

## COMPLIANCE & REGULATORY INFORMATION

---

### FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- The device must accept any interference received, including interference that may cause undesired operation. Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the device.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. Those limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit on a circuit different from that to which the receiver is connected.
- Consult the dealer on an experienced radio/TV technician for help. The device has been evaluated to meet general RF exposure statements. The device can be used in portable exposure condition without restriction.

### IC WARNING

This device contains license-exempt transmitter(s)/receiver(s) that complies with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- This device may not cause interference.
- This device must accept any interference, including interference that may cause undesired operation of the device.

### RF EXPOSURE STATEMENT:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.