 


Smart Landscape Camera

Instructions for AC Adapter Installation

The AC adapter for the Smart Landscape Camera allows for the use of the unit when a low-voltage AC transformer is not available, and can be used indefinitely with the camera.

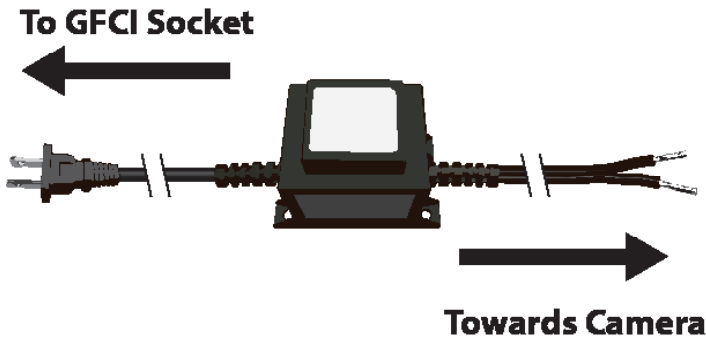

Safety Information

READ AND FOLLOW ALL SAFETY INSTRUCTIONS

For your protection and safety, carefully read and understand the information provided in this manual completely before attempting to assemble, install, or operate this product. Failure to do so could lead to electrical shock, fire, or other injuries that could be hazardous or even fatal.

- Before touching any wire, use a voltage tester to make sure it is not live.
- Use tools with insulated handles and ladders made of wood or fiberglass.
- To protect children, place a safety cover over any unused outlets, and place caps or insulation on any exposed electrical wire.
- DO NOT submerge underwater.
- Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

- Install only using the mounting means provided.
- Do not use this product for other than its intended use.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- SAVE THESE INSTRUCTIONS

CAUTION: CONSULT A QUALIFIED ELECTRICIAN IF YOU HAVE ANY ELECTRICAL QUESTIONS.

If you have any non-electrical questions about this fixture, please call our Customer Service at 1-800-933-7188 or visit www.shopNovolink.com. Please reference your Model (LS-101B-IPC).

IMPORTANT

- Protect the wiring by routing it in close proximity to the light fitting, or next to a building structure such as a house or a deck.
- The landscape wire and connector can also be hidden under stone or buried under grass at a maximum depth of 6 in. (15.24 cm).
- Do not install the fixture within 10 ft. of a pool, spa, or fountain.
- Do not submerge the fixture in water.

1-Year Limited Warranty

WHAT IS COVERED

Novolink, Inc. warrants the Low-Voltage AC Adapter for Smart Landscape Camera (the "Device") is guaranteed to be free of factory defective parts and workmanship for a period of 1 year from date of purchase. This warranty applies only to the original consumer purchaser and only to the Device used in normal use and service. Purchase receipt is required for all warranty claims.

WHAT IS NOT COVERED

This guarantee does not include repair service, adjustment and calibration due to misuse, abuse or negligence. Unauthorized service or modification of the Device or of any furnished component will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, setup time, loss of use, unauthorized service, or return shipping charges. This warranty is not extended to other equipment and components that a customer uses in conjunction with this Device, including batteries, LED bulbs, low voltage wiring, hardware and accessories.



If this Device is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the Device at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alteration, neglect, or mishandling.

Where to Install


To use the AC adapter, you'll need access to an outdoor, GFCI socket. The Landscape Camera must be installed within 13 ft (4 meters) of the adapter.

Attaching Your Smart Landscape Camera


1. Make sure the AC Adapter is not plugged into a powered outlet.
2. On the Smart Landscape Camera, remove the cap from the Wire Connector.

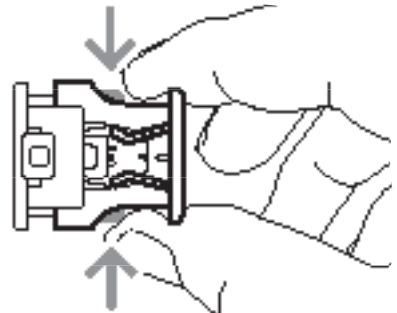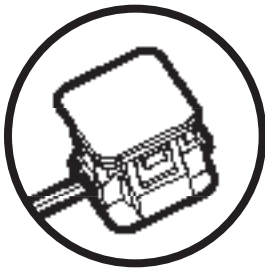


3. Place the low voltage wire coming from the AC Adapter into the upper cap of the Connector, flat against the channel running across the inside of the cap. Make sure the wire goes completely across the cap, and is aligned with the channel.

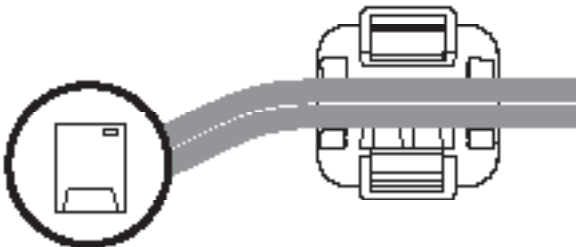

4. Replace the cap over the wire, ensuring that the wire remains flat in the cap channel.
5. Press until the two parts clip and snap into position.

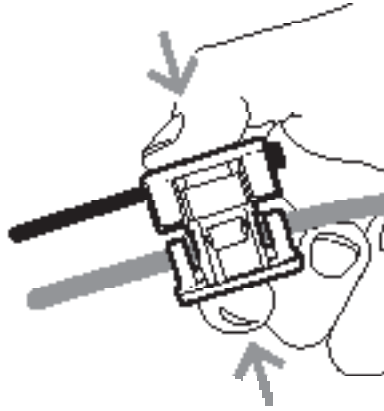

6. It is recommended to place insulating caps over the ends of the low-voltage wire.
7. Plug the AC Adapter into a powered outlet, and refer to the Smart Landscape Camera instructions for setup and use.

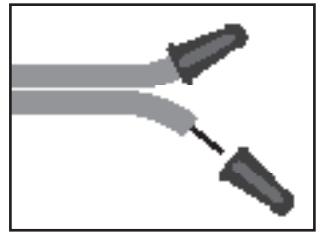

General Use

With the AC adapter properly installed, and continuous power supplied to the AC outlet, the Smart Landscape Camera will operate continuously. In the event of a power outage, or if the adapter is unplugged, the Camera will utilize an internal rechargeable battery for operation, until either the power is restored (at which time, it will resume using AC power), or the battery is depleted.

If you have questions regarding installation or operation of the adapter or Camera, contact the Customer Service Team at **1-800-933-7188**, or visit **www.shopNovolink.com**.