

ABOUT VINTAGE

DENMARK

INSTRUCTIONS

OB 1887 SPECIAL EDITION

INTRODUKTION

Alle striber kan huske, hvordan de forelskede sig i klubben, og i over 136 år har vi sammen skabt den historie og dannet de minder, som er grundlaget for, at vi hver dag vokser os større – sammen.

BRUG DIT PULSMETER

Find din puls. Når du er klar, tryk på knap A, tæl til 30 pulsslag, tryk på knap A igen. Viseren vil vise hvor mange pulsslag du har i minuttet.



SPECIFICATIONS

Caliber:

MIYOTA 6S21


Battery / Battery life:

SR927W (recommended) Approx. 3 years Domed Sapphire Crystal with anti-reflective coating

Glass. Water Resistance:

5. ATM - Water tested to 50 Meters

Suitable for showering and swimming in shallow water (Without leather strap)

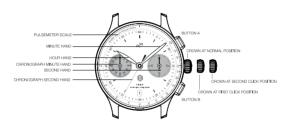

HOW TO SET TIME

- Pull the crown out to the 2nd click position
- Turn the crown clockwise to set hour and minutes hand.
- 3. Push the crown back into normal position.

Go to www.aboutvintage.com for warranty information

SETTING THE DATE

- 1. Pull the crown out to the 1st click position
- Turn the crown clockwise to set the date. (If the date i set between the hours of 9:00 PM and 1:00 AM, the date may not change the following day)
- 3. Push the crown back into normal position.

USING THE CHRONOGRAPH

This chronograph is able to measure and display time in 1/4 second united up to maximum of 59 min. 59 sec.

MESSURING TIME WITH THE STOPWATCH

Press button "A" to start the chronograph

The chronograph can be started and stopped each time button "A" is pressed. Press button "B" to reset the chronograph minute and seconds hands. The chronograph hands will return to their Zero positions.

CHRONOGRAPH RESET (INCL: AFTER REPLACING BATTERY)

This procedure should be performed when the chronograph second hand does not return to the Zero position.

- 1. Pull the crown out to the 2nd click position
- Press the button"\(^{1}\) to set the chronograph second hand to the Zero position (The chronograph hand can be advanced rapidly by continuously pressing button"\(^{1}\)
- Once the hands are set at Zero postion, reset the time and return the crown to its normal position.



FOR THE TRUE GENTLEMAN AND WOMAN

We are profoundly grateful. Thank you for your support.

Take good care of your new timepiece.

Make moments, give it history

- let it become vintage.