

Pump Replacement Guide

Revision - 1 Document - 950-101-1002

Revision #	Date	Author	Description of Change
1	8/25/22	S. Strunks	Release

Standard Operating Procedure

	Title	Revision	Document #	Page #
DIAMONDCORE® TOOLS	Pump Replacement Guide	1	950-101-1002	1

Legend

This symbol indicates a point where the reader needs to stop what they are doing and read the instruction before proceeding. Used for critical steps or safety information.	STOP
This symbol indicates a step or instruction where special attention is needed to avoid a problem.	
A red circle or square is used to highlight a button or point out a particular area in an image.	
A blue arrow is used to point out a specific spot in an image.	

Standard Operating Procedure

	Title	Revision	Document #	Page #
DIAMONDCORE® TOOLS	Pump Replacement Guide	1	950-101-1002	2

Procedure

Step	Description	Image
1.1	Ensure the Pump is not receiving power by unplugging it from the wall.	Disconnect Power Supplies Before Servicing or Cleaning.
1.2	Remove the 4 Bolts attaching the Pump Cover. Use a ¾" wrench to hold the nuts on the back in place.	TARLEY
1.3	Detach the two sets of Spade Connectors before removing the Pump.	READ INSTRUCTION MANUAL INSTALLING OR OPERATING THE PART INSTALLING THE PART INSTALLI

Standard Operating Procedure

	Title	Revision	Document #	Page #
DIAMONDCORE®	Pump Replacement Guide	1	950-101-1002	3

1.4 Remove the 4 Bolts attaching the Pump. Use a %" wrench to hold the nuts on the back in place.



1.5 Repeat the previous steps in reverse to attach the new Pump.



Ensure both of the Ring Connectors (attached to the 2 Green ground wires) are secured beneath the bottom left bolt. Refer to the wiring diagram for clarification.







Standard Operating Procedure

	Title	Revision	Document #	Page #
DIAMONDCORE®	Pump Replacement Guide	1	950-101-1002	4

1.6	All Set! Make sure the hoses are reattached to the Pump, and the nozzle is aimed into the Basin before plugging the CINK back in, as it will prime immediately.	