 


Drive

INSTRUCTION MANUAL



12V DC 4 Zone soundbar with DVD PLAYER





MODEL:LSB-D

Please read this manual carefully before operating your stereo and retain for future reference.

DIRECTORY

IMPORTANT SAFETY INSTRUCTIONS	1
MATTERS NEEDING ATTENTION	2
INTERFACE SPECIFICATION	3
FRONT PANEL	4-7
THE REMOTE CONTROL	8
SPEAKER WIRING	9
INSTALLATION DIMENSIONS AND ACCESSORIES	10
TECHNICAL SPECIFICATIONS	11

IMPORTANT SAFETY INSTRUCTIONS

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICING TO QUALIFIED SERVICE PERSONNEL.		
	The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.	
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.	
FCC WARNING		
To assure continued compliance, follow the attached installation instructions and use only shielded cables when connecting to other devices. Modifications not authorized by the manufacturer may void user's authority to operate this device.		

MATTERS NEEDING ATTENTION

Users in order to correctly use media player to ensure players performance is good, please read carefully and must obey;


- 1: Please read manual carefully before handling the system.
- 2: Don't seriously impact the host.
- 3: Do not contact with benzene, thinner, chemicals, etc.
- 4: Please don't get close to strong magnetic field, electric field.
- 5: Please avoid direct light or heating apparatus.
- 6: Don't open the cover in order to avoid shocking and damage the machine.
- 7: Don't use loud volume to listen to, in order to avoid bad damage to hearing.

Functional features

- 1: Bluetooth receives largest distance of 10 meters.
- 2: Play MP3 format file in USB directly.
- 3: FM stereo radio receiver function.
- 4: Stereo audio input interface, easy to connect computer, digital music player, mobile phone and other audio equipment.
- 5: HD inputs, high-definition digital audio signal input (PCM).
- 6: 8.1 CH amplifier output.
- 7: Infrared remote control.
- 8: Wide range performance
- 9: Optical fiber input.
- 10: CD player.
- 11: channel 4 video output.
- 12: NFC function.

INTERFACE SPECIFICATION

THE FRONT PANEL

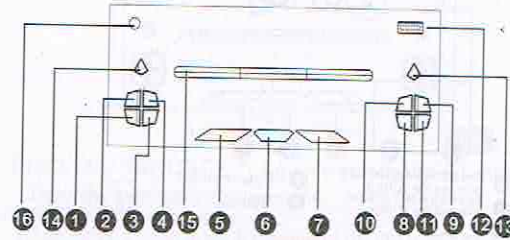


1	Fast backward or last song USB and FM TUNER-	6	Power on/off
2	Volume-	7	Source
3	Next song or fast forward USB and FM TUNER+	8	C Zone mute
4	Volume+	9	B Zone mute
5	Pause or play, search (FM) Repeat 1 and all of press on	10	A Zone mute
11	D Zone mute	12	USB INPUT ONLY Mp3
13	Play and Pause key	14	The Disc out key
15	Out port	16	AUX INPUT

Note:

- ▶ In FM mode, the 5 key FM automatic search key.
- ▶ In FM mode, the 3 key FM Forward fine-tuning.
- ▶ In FM mode, the 1 key FM Back fine-tuning.
- ▶ In FM mode, the 3 Long press by fine-tuning for frequency+.
- ▶ In FM mode, the 1 Long press by fine-tuning for frequency-.
- ▶ In USB mode, the 13 key USB pause, play button.
- ▶ In USB mode, the 3 key USB the next song.
- ▶ In USB mode, the 4 key USB the previous song.
- ▶ In disc mode, the 3 key Disc the next and fast forward.
- ▶ In disc mode the 1 key Disc the back and fast backward.


FRONT PANEL

FM OF FRONT PANEL

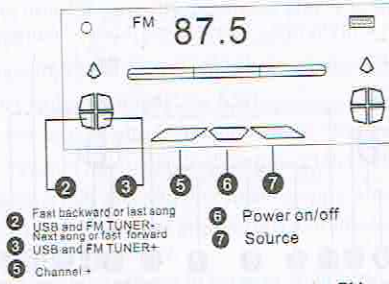

- Press the "SOURCE" key, switch to the FM mode
- ▶ In FM mode, the 5 key FM automatic search key.
 - ▶ In FM mode, the 3 key FM Forward channel.
 - ▶ In FM mode, the 2 key FM Back channel.
 - ▶ In FM mode, the 3 Long press by fine-tuning for frequency+.
 - ▶ In FM mode, the 2 Long press by fine-tuning for frequency-.

AM OF FRONT PANEL

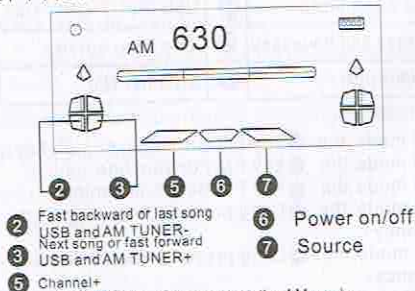


- Press the "SOURCE" key, switch to the AM mode
- ▶ In AM mode, the 5 key AM automatic search key.
 - ▶ In AM mode, the 3 key AM Forward channel.
 - ▶ In AM mode, the 2 key AM Back channel.
 - ▶ In AM mode, the 3 Long press by fine-tuning for frequency+.
 - ▶ In AM mode, the 2 Long press by fine-tuning for frequency-.

4


FRONT PANEL

BLUETOOTH OF FRONT PANEL

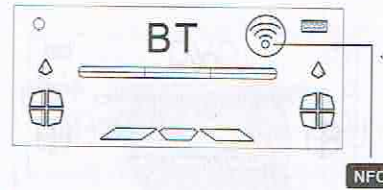


- Press the "SOURCE" key, switch to the BT mode
- 1: Open the settings in mobile phone,
 - 2: Open the BT in the setup.
 - 3: Automatic search in the BT, appear LSB03-D device name.
 - 4: LSB03-D device name, connection.
 - 5: After the connection is successful, the speaker tip is connected to the LSB03-D device.
 - 6: When disconnected, speaker tip has been disconnected.
 - 7: Connect the NFC sensing area of the phone to the NFC area and the system will automatically connect

OPTICAL OF FRONT PANEL

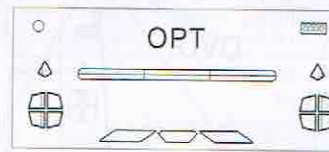


- Press the "SOURCE" key, switch to the OPT mode
- 1: Rear link optical fiber cable

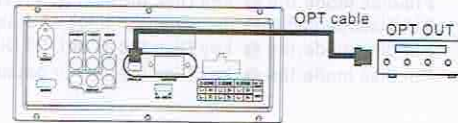


5

FRONT PANEL


TV OF FRONT PANEL

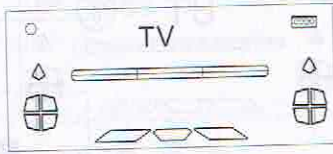

Press the "SOURCE" key, switch to the TV mode
1:Rear link optical fiber cable

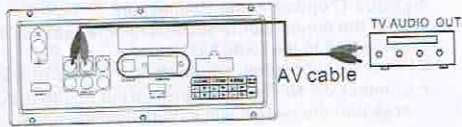

DVD OF FRONT PANEL

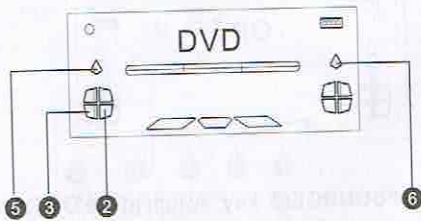


- ▶ In disc mode, the 2 key Disc the next and fast forward.
- ▶ In disc mode the 3 key Disc the back and fast backward.
- ▶ In disc mode, the 5 key Disc the IN or OUT Disc.
- ▶ In disc mode, the 6 key Disc the play or pause

6


FRONT PANEL

IN and OUT of the disc

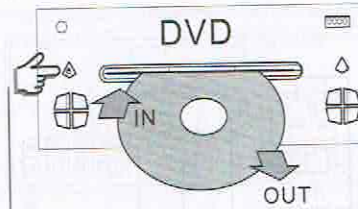

Press the key (▲)


VIDEO OUTPUT IN DVD MODE

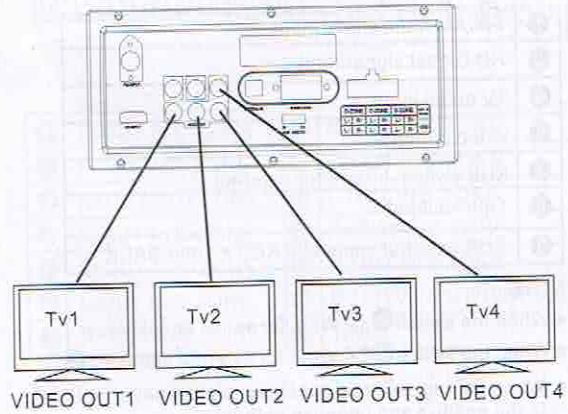

7

INTERFACE SPECIFICATION

REAR PANEL

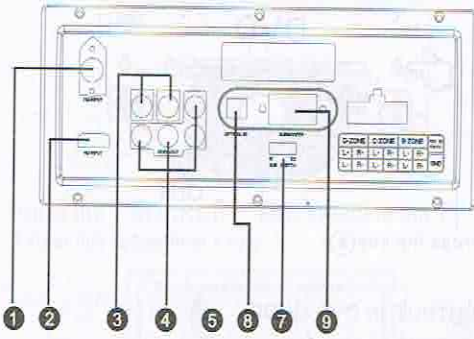



1	FM/AM radio signal input
2	HD Digital signal input
3	TV audio input
4	Video output
7	SUB switch .Internal or external
8	Optical input
9	SUB external connector.RED + and BACK -

NOTE:

- ▲ When the switch 7 IN, Work for native speakers.
- ▲ When the switch 7 EX, Work for external speakers 9 .
- ▲ When pairing external speakers, please pay attention to the positive and negative polarity.
RED -RED / BLACK -BLACK

INTERFACE SPECIFICATION

REAR PANEL

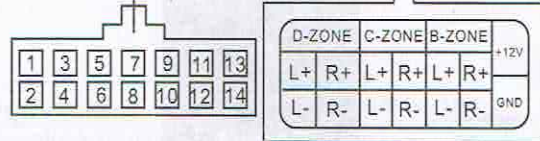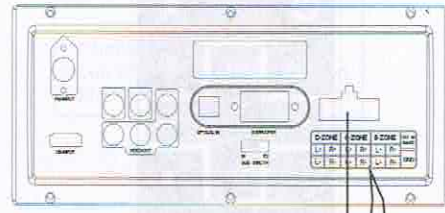

1	L+OUT IN D-ZONE	8	R-OUT IN C-ZONE
2	L-OUT IN D-ZONE	9	L+OUT IN B-ZONE
3	R+OUT IN D-ZONE	10	L-OUT IN B-ZONE
4	R-OUT IN D-ZONE	11	R+OUT IN B-ZONE
5	L+OUT IN C-ZONE	12	R-OUT IN B-ZONE
6	L-OUT IN C-ZONE	13	DC+12V INPUT/10A FUSE
7	R+OUT IN C-ZONE	14	GND

THE REMOTE CONTROL



	POWER ON/OFF		MUTE
	VOLUME -		VOLUME+
	Last song or up(in disc)		Next song or down(in disc)
	Backard fast or left		Forward fast or right
	SOURCE		PAUSE/PLAY
	A A-ZONE MUTE		B B-ZONE MUTE
	C C-ZONE MUTE		D D-ZONE MUTE
	DISC of menu		In or out the disc
	Stop of the Disc		Sound channel select
	Subtitle		TITLE



8

SPEAKER WIRING

SPEAKER(6*4OHMS) WIRING COLORCODE GUIDE

CAUTION!


Connecting the speakers incorrectly will cause distortion and damage the power amplifier

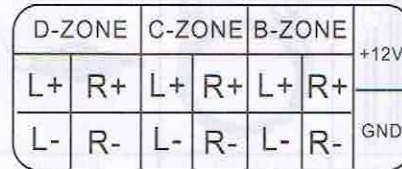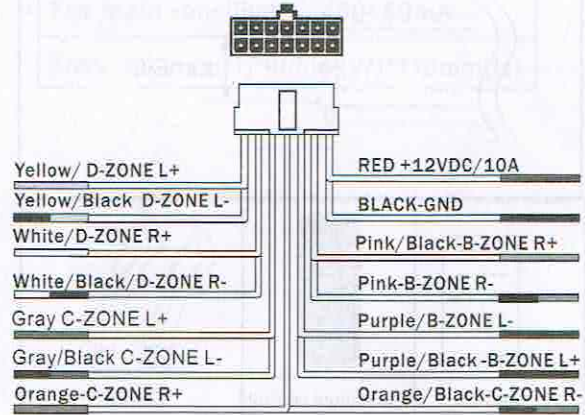







9

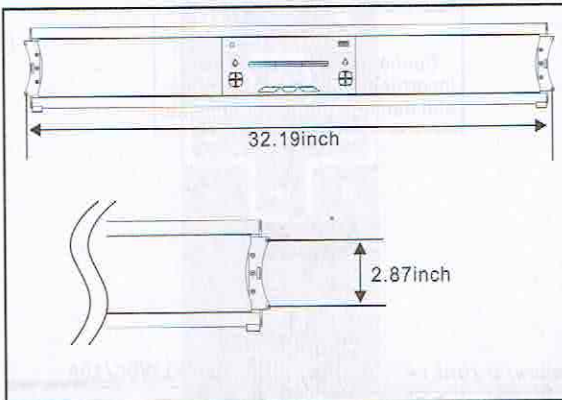INSTALLATION DIMENSIONS AND ACCESSORIES

PACKING BOM

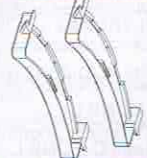

		
Manual	The remote control	Cover
		
Power cable	AV cable	FM cable

TECHNICAL SPECIFICATIONS

The output power: 100W
Working voltage: DC12/10A
Frequency response: 35HZ~20KHZ
Signal to noise ratio: 80dBA
The input sensitivity: 450+50mA
Size: 800mm(H)*60mm(W)*118mm(H)