

REVAIR



QUICK START GUIDE | REV 2.0

From set-up to sensational **IN A FEW SIMPLE STEPS**


What's WHAT

A look at the finer details.



Heat Producing Wand

- 1 | Temperature Control
- 2 | Wand Mouth
- 3 | Heat Chamber
- 4 | Wand/Hose Connector
- 5 | Strain Relief

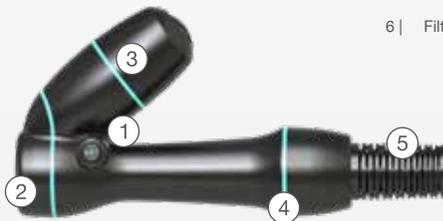

Filter

- 6 | Filter Notch



Base Unit

- 7 | Main Power On/Off Switch
- 8 | Wand Docking Hook
- 9 | Air Outlet
- 10 | Exhaust Filter
- 11 | Cord Wrap Plate
- 12 | Reverse-Air Speed Dial
- 13 | Filter Panel Latch
- 14 | Filter Panel



Make sure the Air Outlet is unobstructed, giving at least two feet clearance, when the device is on.

Simple steps TO SET UP

You're only minutes away from experiencing RevAir.



Filter

Insert **Filter** into **Base Unit**.

Filter Notch must line up with intended groove to fit in properly.

Without **Filter** installed and **Filter Notch** groove aligned properly, **Base Unit** will not power on.

Every **5 uses**, it is important to empty and clean **Filter**.



Base

Attach **Hose** to **Base Unit** by sliding bottom tab of **Filter Panel** into notch in **Filter** opening area.

Gently push **Filter Panel** forward so it is flush with **Base Unit** and securely covers **Filter** opening.

Once **Filter Panel** is firmly in place, turn **Filter Panel Latch** clockwise to lock to **Base Unit**.



Power

Unwind electric cord from **Cord Wrap Plate**.

Plug is equipped with an ALCI as a safety feature. Press **TEST** button - you will hear a click and **RESET** button will pop out.

Press **RESET** and you are ready to insert plug into wall outlet. Only insert into 120V/60hz amp outlet.



Hose is shown shortened for illustration purposes only.



Watch a step by step setup video in the FAQs section of myrevair.com or read more in the **Operating Manual**.

All set-up, NOW WHAT?

To achieve the best results, pay attention to these important factors.



Sections

Size Matters

Begin with a 3 inch by 3 inch section at scalp. If hair has a lot of volume, start slightly smaller, as not to inhibit air flow in the **Wand**.

Root Around


When held to the scalp, the **Wand** should reach all roots by gently moving the **Wand Mouth** across the section. *No need to move the wand up and down the hair strands, keep it close to the roots.*

Go with the Flow

Should a section of hair be too large in volume, the **Heat Chamber** will shut down indicating the section size should be reduced. Simply remove the hair section and retry with less hair. The **Heat Chamber** will resume automatically.



The **Wand** includes an internal sensor to monitor heat levels minimizing heat exposure.

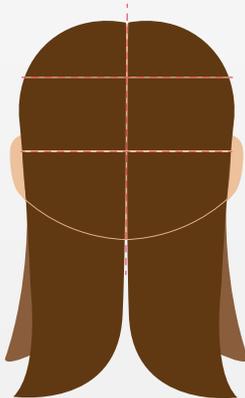

Settings

Slow & Low

Begin by setting your **Reverse-Air Speed Dial** to **Level 2** or lower. Move up level by level until you find your ideal speed.



Should you experience even a tiny tangle, the Speed Dial should be reduced.

The Heat is On

Set the **Temperature Control on Wand** at Low (I). If you find you need more heat, switch to the High (II) setting.



TROUBLESHOOTING TIP

With the **Wand** set to (I) or (II), and the **Base** powered on, if you do not feel heat at the **Wand Mouth**, double check your **Wand to Hose** connections.



While RevAir uses nearly half the heat of blow dryers, do not use High (II) temperature setting unless using a speed setting of **Level 2** or higher.



Seconds

Fast Track

Drying times vary by hair type, but commonly range from 30 to 90 seconds per section.

Pass the Test

To assure a section is dry, pull the **Wand** a few inches from scalp to feel for dampness.

If you still have a bit of dampness or texture, repeat until hair feels dry, noting the time it took to get it just right.



The average times shown to the right are a simple guide. Individual hair characteristics such as volume, strand thickness, porosity, and overall health can effect your personal drying time.



- I = Low Temp | 400 watts
- O = No Heat | Cold Shot
- II = High Temp | 800 watts



STRAIGHT

Average Section Time: 30 sec



WAVY

Average Section Time: 45 sec



CURLY

Average Section Time: 60 sec



COILY

Average Section Time: 90 sec

In no time, **FLAT**

Designed for simplicity, RevAir works on all hair types.



Wash

Wash hair. Towel off. Comb through.

You can use your favorite leave in conditioner, or heat protecting spray.

However, it is important to avoid sticky fixatives such as mousse, gels, and setting sprays.



Rev

Power-on the **Base Unit** and **Wand**. Be sure your preferred settings are set.

Insert hair into the **Wand**, up to your scalp. Keep it at or near your scalp. No need to move up and down the hair length.

When dry, remove and repeat, section by section, until complete.




LOVE!

Enjoy your freshly Rev'ed hair.

Clean up **YOUR ACT**

Keep your RevAir in tip-top shape.

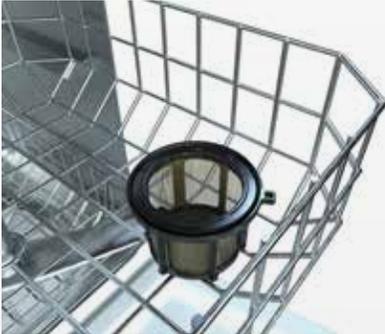

We recommend you empty and clean the filter **every 5** uses.

Empty hair from the **Filter**.

With the open side up, run the **Filter** through wash cycle in the top rack of your dishwasher, or simply scrub with a toothbrush and dish washing liquid.



For complete details on how to clean your filter as well as additional maintenance tips, please review your Operating Manual or our Maintenance videos found in the FAQ section online at myrevair.com

That's a **WRAP**

All-in-one storage solution.

To store RevAir:

With **Wand Docking Hook** facing you, wrap **Hose** (going clockwise) twice around **Base Unit**.

Secure the **Wand** to the hook via the **Wand Docking Groove**.



REVAIR

Blow your mind, NOT YOUR HAIR

Customer Care and Support:

support.myrevair.com

(440) 462-6100

REV IT. SHARE IT. #MYREVAIR

