

Easy Install Just a few Quick Steps

We strive to make your installation experience just as pleasant and relaxing as our fountains. Our “Certified Simple” instructions require no tools and can have you enjoying your fountain within minutes of unpacking. Follow the simple steps below to create your own urban oasis.

Please check the contents of the box before attempting to assemble this product. The full checklist of parts is below. In the unlikely event that any components are damaged or missing, please contact our customer service hot-line at 407-426-7674.

This product contains small items and plastic bags. Please be aware of the danger to young children.

Often people are tempted to use chlorine or bleach to clean their fountain, this is unfortunately one of the worst things you can do. Chlorine or most products ending in “ine” or “ide” will ruin a finish quickly and damage your pump. We recommend non-toxic additives like Fountec (an algaecide) and Protec (a mineral and scale preventative) should you use tap water. These are available through your authorized Bluworld dealer or Bluworld HOMeElements.

blu


Parts List



Pump/Light Combo



Base

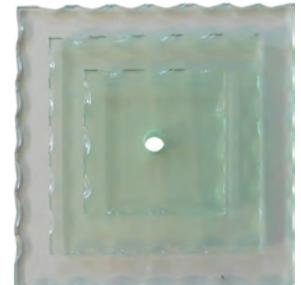

3 Glass Tiers



Glass Pedestal



4 Glass Tier Separators
(2 Extra Separators are included)



Glass Rocks



Acrylic Water Tube
(Your Tube size may vary)

1

Setup

Use the included peel and stick rubber pads for protection against marring and preventing condensation on fine surfaces. Place one pad on all four corners of the bottom of the base (Fig 1.A).

When considering a location keep in mind the closest electrical outlet and ease of accessibility for maintenance. Once you have settled on a location for your Glacier tabletop fountain position the Base so the electrical access hole is to the rear.

Your pump is adjustable to vary the flow of water. Make sure that the pump is set to its lowest flow setting (Fig 1.B).



FIG 1.A

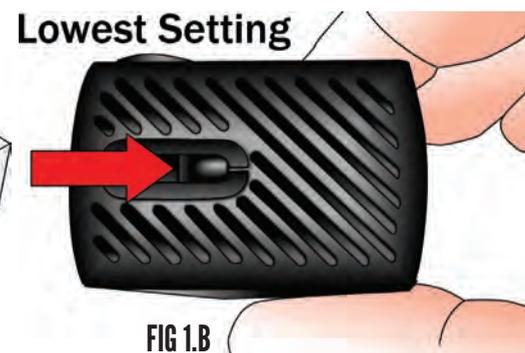


FIG 1.B

2

Assembly

Connect the Acrylic Water Tube to the Pump outlet by pushing the outlet on the pump completely into the rubber connector on the Acrylic Water Tube. Make certain it is as close to the Acrylic Water Tube as possible (Fig. 2.A).

Place the Pump with Acrylic Water Tube attached in the center of the base. The Acrylic Water Tube must be centered for the Glass Tiers to also be centered properly when fully assembled. (Fig. 2.B).

Slide the LED Ring over the Acrylic Water Tube (Fig 2.B.).

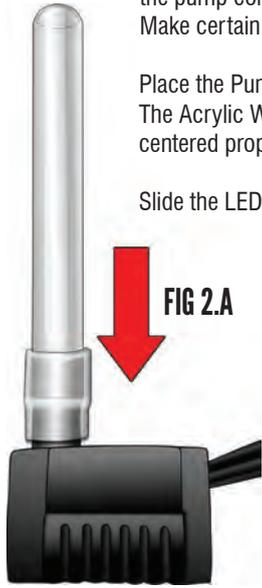


FIG 2.A



FIG 2.B



FIG 2.C

Pull the Pump cord through the hole in the Base (Fig 2.C).

Place the Glass Pedestal in the center of the Base. The pump cord will exit the Pedestal at the notched cutout (Fig 2.C).

Slide the largest Glass Tier over the Acrylic Water Tube and place it on top of the Glass Pedestal. The Acrylic Water Tube should be centered in the hole of the Glass and the Glass should be centered in the base. Slide one of the Acrylic Glass Separators over the Acrylic Tube so it sits on top of the large Glass Tier. The Acrylic Water Tube should be centered in the middle of the Acrylic Glass Separator and then slide the middle sized Glass Tier over the Acrylic Water Tube and lay it on top of the Acrylic Glass Separator (Fig 2.D)



FIG 2.D

Place the smallest Glass Tier on top of the 2nd Acrylic Glass Separator piece (Fig 2.E).



FIG 2.E

Connect the Pump cord to the transformer (Fig 2.F).

Decorate your fountain by placing the included Glass Rocks on the tiers making certain to not place any piece directly over the Acrylic Tube opening. Fill the fountain Base with distilled water (distilled is strongly recommended) make certain to not overfill past the electrical outlet hole.

Do not attempt to move the feature once it is filled with water. If hard water is a problem in your area, the use of distilled water will guarantee the best results.



FIG 2.F

3

Maintenance and Troubleshooting

The water level must remain just under the electrical outlet hole on the base and should be checked daily. Water will evaporate from the fountain and adversely affect the performance of the water pump, which **MUST** be completely submerged for proper operation and longevity. **NEVER ALLOW YOUR WATER PUMP TO OPERATE DRY!**

Our water pumps are designed to provide exceptional pumping capacity with minimal maintenance. If you should happen to experience any issues follow these troubleshooting fixes below:

Pump is noisy: Check that the pump's output nozzle is securely inserted into the rubber connector and acrylic water tube. Forced water escaping the connection may cause unwanted air bubble noise or reduced water flow. Make sure the pump is completely submerged. You will need to remove the glass tiers and LED light to access the pump.

Fountain splashes: The pump is adjustable and the flow may be turned up too high. See **Fig 1.B** to adjust the flow rate by sliding the adjuster to a lower position. Also repositioning the glass rocks which will change the water stream to minimize splashing. Make sure the acrylic tube is securely attached to the pump.

Water does not flow: Make sure the pump output nozzle is inserted into the rubber connector and acrylic water tube, the pump is completely submerged in water and that the pump cord is connected to the transformer and the transformer is plugged into a working electrical outlet. Also check to see that the flow adjustment control is positioned to the lowest setting.

Water does not flow evenly over Glass tiers: The glass tiers may not be sitting completely level. You may need to spin/rotate the tiers to find a position for each that provides a level base for the best and most even water flow. You may also try moving the entire fountain often tables are not level and this will adversely effect the flow of water over the glass.

blu

Warranty

Bluworld product is warranted against defects that render it unfit for its reasonably intended use. This Warranty is not extended to cover use of the product for a purpose other than as intended, and if the product is used unreasonably, or for purposes other than as intended, or if it is altered, modified or repaired by a party other than Bluworld, then the Warranty shall be null and void. The Warranty is in effect for a period of six months beginning from the date of sale to the original retail purchaser and the rights under this Warranty are limited to the original retail purchaser. Bluworld will, upon written notification thereof, take commercially reasonable steps to correct such defects (see "manufacturers defects below"), at Bluworld's sole option, by suitable repair, replacement, or refund. Bluworld will not be responsible for the installation, labor or any other costs or expenses related to the re-installation of a warranted part, and such expenses are not covered by this warranty. **THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR OTHER WARRANTY OF QUALITY, WHETHER EXPRESS OR IMPLIED, EXCEPT FOR THE WARRANTY OF TITLE AGAINST PATENT INFRINGEMENT.** Corrections of nonconformities, in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of Bluworld to any Dealer with respect to the goods, whether based on contract, negligence, and strict tort or otherwise. Bluworld contract sales personnel, including but not limited to authorized Dealers and Resellers (collectively, "Sales Personnel"), are not authorized to make warranties about Bluworld merchandise. **ORAL STATEMENTS DO NOT CONSTITUTE WARRANTIES.** Oral statements made by Bluworld employees or other Sales Personnel shall not be relied upon by a Dealer and shall not become part of any contract for sale. The entire sales contract between a Dealer and Bluworld will be set forth in the invoice and/or accompanying or reference documents provided by Bluworld to the Dealer or Sales Personnel. No other warranties are given beyond those set forth in those documents. Please be aware that you may have valuable rights under the state law in which you reside. Some of the provisions of this Warranty may be prohibited by your state law in which case your state law will govern and control. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Our products are warranted for a period of six months against defects in finish, pumps and other product performance issues. Light bulbs are not warranted. Our experience has shown that in practically 100% of incidents that any defect is apparent within a week of installation and use. Appearance defects should be noticed upon unpacking the fountain. We have found that finishes have 'failed' due to poor maintenance, local water conditions with minerals affecting the finish, attempts to clean with harsh chemicals or abrasive pads being used. Performance of water flow, spitting, and other 'leaks', are usually caused by debris getting into the fountain, buildup of minerals, algae from poor water or lack of maintenance. Pumps can also fail due to water levels not being maintained in the reservoir and this is not covered by the warranty.

Manufacturers Defect defined - A distinct and obvious flaw in the manufacturing of the product that inhibits the product's ability to function properly or a distinct and obvious flaw in the workmanship of the product that affects its physical appearance. Bluworld water features are manufactured under generally accepted manufacturing techniques as recognized by the International Organization of Standardization. Our products are hand made and hand finished thus minor scratches in materials within accepted ranges are not considered defects.