

WATER WONDERS

HAIKU

Instructions for Use



Identification of Components

Carefully identify and count all components as shown below. Photos may vary slightly from what you receive.



NOTES ON POSITIONING YOUR FOUNTAIN

- a. Try to position your fountain near an electrical outlet. We recommend that you use a Ground Fault Circuit Interrupter (GFCI) Outlet.
- b. When considering the location of your fountain, please consider making it easily accessible for maintenance (e.g. adding water, performing regular maintenance, etc.)

Assembly

- Step 1 Remove packing materials and parts from the box and lay them out for ease of reference.
- Step 2 Tools required: Phillips Screwdriver
- Step 3 Make sure that the pump is preset to its lowest flow setting as shown in 3.A
- Step 4 Locate the Water Disperser Pipe (A). Place the straight side of the Water Disperser Pipe (A) without the elbow on the pin in the Bowl (C), see Fig. 4.A. Next insert the elbow of the Water Disperser Pipe (A) into the "U" shaped clip in the Bowl (C). When assembled it should look like Fig. 4.B.



Step 5





Fig. 3.A

Insert the Hose (G) into the Pump (B) as shown in Fig. 5.A & B.

Fig. 4.A

Fig. 4.B





Fig. 5. A & B

Step 6 Connect the assembled pump and hose from "Step 5" to the Water Disperser Pipe (A) as shown in Fig. 6. A and B.



Fig. 6. A & B

Step 7 Place the Support Ring (D) in the Bowl (C). The smaller holes on each side should fit over the Water Disperser Pipe (A). Make sure the cable for the Pump (B) goes under the triangular cut out of the Support Ring (D). See Fig. 7. A & B.

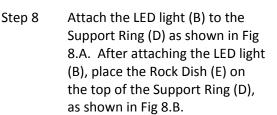




Fig. 7. A & B



Fig. 8. A & B

Step 9 Unscrew the Female and Male Screws (F) and lay them next to the fountain so you can reach them. Hang the Slate Straps (F) on the top of the Water Disperser Pipe (A) as shown in Fig. 9.A.



Fig. 9. A

Step 10 We recommend that two people work on this step. Attach the Slate (H) to the Slate Straps (F) by sliding the Slate (H) between the two sides of the Slate Straps (F). The chipped, angled edge should face the front of the fountain. Insert the Female Screw (F) with the hole on the end into the hole of the Slate Straps (F), next insert the Male Screw into the hole of the Female Screw on the back side of the Slate (H), repeat on the other side. Use a Phillips Screwdriver to tighten the Male Screws, Fig. 10. A- E.



Fig. 10. A - E

Step 11 Lay the Rocks (I) onto the Rock Dish (E). Place smaller rocks around the larger rocks and under the slate as shown in Fig 11. A. Fill the fountain bowl with water until it is 1/4" below the Rock Dish (E). Distilled or purified water is recommended.



Fig. 11. A

Step 12 You are now ready to plug in the pump and enjoy the soft, soothing and relaxing sounds of nature in your home or office.

Do not attempt to move the feature once it is filled with water. Waterfalls that are placed near air conditioning vents and intakes will evaporate at a faster rate. Do not operate if low on water. If hard water is a problem in your area, the use of distilled water will guarantee the best results. It is recommended to drain the fountain about once every three months and refill with clean water. It may be necessary to wipe the inside of the bowl with a clean cloth to remove any buildup.

Maintenance and Troubleshooting

The water level must remain 1/4" from the bottom of the Rock Dish (E) so it should be checked daily. Water will evaporate from the fountain and adversely affect the performance of the water pump, which MUST be completely submerged for proper operation and longevity. NEVER ALLOW YOUR WATER PUMP TO OPERATE DRY!

Our water pumps are designed to provide exceptional pumping capacity with minimal maintenance. Please see the instructions below for important maintenance information:

To clean your pump, remove the intake pre-chamber (Item 1 in photo) as shown in the picture to the right. Clean all parts thoroughly then reassemble and reinstall in your fountain.

- Pump is noisy: Check that the pump's output nozzle (Item 2 in photo) is securely inserted into the fountain's intake tube as forced water escaping the connection may cause unwanted air bubble noise. Make sure the pump is completely submerged. You will need to remove the 2 Slates (D), LED light and Acrylic Clip (F) to access the pump.
- Fountain splashes: The pump is adjustable and the flow may be turned up too high. See figure 2-A to adjust the flow rate by sliding the adjuster to a lower position. Reposition rocks which will change the water stream to minimize splashing. Make sure the acrylic Pipe (E) is securely attached to the pump.
- Water does not flow: Make sure pump output nozzle is inserted into the rubber intake tube, pump is completely submerged in water and
 that the cord is plugged into a working receptacle. Also check to see that the flow adjustment control is positioned to a middle setting or
 above.
- Water does not flow evenly over Slate tiers (D): The Slate stones (D) are natural and are not completely flat or level. You may need to spin/rotate the slates (D) to find a position for each that provides a level base for the best and most even water flow.

Warranty

Bluworld product is warranted against defects that render it unfit for its reasonably intended use. This Warranty is not extended to cover use of the product for a purpose other than as intended, and if the product is used unreasonably, or for purposes other than as intended, or if it is altered, modified or repaired by a party other than Bluworld, then the Warranty shall be null and void. The Warranty is in effect for a period of six months beginning from the date of sale to the original retail purchaser and the rights under this Warranty are limited to the original retail Bluworld will, upon written notification thereof, take commercially reasonable steps to correct such defects (see "manufacturers defects below"), at Bluworld's sole option, by suitable repair, replacement, or refund. Bluworld will not be responsible for the installation, labor or any other costs or expenses related to the re-installation of a warranted part, and such expenses are not covered by this warranty. THIS LIMITED WARRANTY IS EXCLUSIVE AND IN LIEU OF ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNES FOR A PARTICULAR PURPOSE, OR OTHER WARRANTY OF QUALITY, WHETHER EXPRESS OR IMPLIED, EXCEPT FOR THE WARRANTY OF TITLE AGAINST PATENT INFRINGEMENT. Corrections of nonconformities, in the manner and for the period of time provided above, shall constitute fulfillment of all liabilities of Bluworld to any Dealer with respect to the goods, whether based on contract, negligence, and strict tort or otherwise. Bluworld contract sales personnel, including but not limited to authorized Dealers and Resellers (collectively, "Sales Personnel"), are not authorized to make warranties about Bluworld merchandise. ORAL STATEMENTS DO NOT CONSTITUTE WARRANTIES. Oral statements made by Bluworld employees or other Sales Personnel shall not be relied upon by a Dealer and shall not become part of any contract for sale. The entire sales contract between a Dealer and Bluworld will be set forth in the invoice and/or accompanying or reference documents provided by Bluworld to the Dealer or Sales Personnel. No other warranties are given beyond those set forth in those documents. Please be aware that you may have valuable rights under the state law in which you reside. Some of the provisions of this Warranty may be prohibited by your state law in which case your state law will govern and control. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

Our products are warranted for a period of six months against defects in finish, pumps and other product performance issues. Light bulbs are not warranted. Our experience has shown that in practically 100% of incidents that any defect is apparent within a week of installation and use. Appearance defects should be noticed upon unpacking the fountain. We have found that finishes have 'failed' due to poor maintenance, local water conditions with minerals affecting the finish, attempts to clean with harsh chemicals or abrasive pads being used. Performance of water flow, spitting, and other 'leaks', are usually caused by debris getting into the fountain, buildup of minerals, algae from poor water or lack of maintenance. Pumps can also fail due to water levels not being maintained in the reservoir and this is not covered by the warranty.

Manufacturers Defect defined - A distinct and obvious flaw in the manufacturing of the product that inhibits the product's ability to function properly or a distinct and obvious flaw in the workmanship of the product that affects its physical appearance. Bluworld water features are manufactured under generally accepted manufacturing techniques as recognized by the International Organization of Standardization. Our products are hand made and hand finished thus minor scratches in materials within accepted ranges are not considered defects.

Slate-Many of our products contain natural slate. Slate can vary to a large degree and that individuality is what is considered to be unique and inherent to the beauty of the natural product as no two are exactly alike. Photos in our marketing materials are representative of our slate products but should not be relied on to duplicate the photo. We use natural mined slate in our products. Personal taste in the appearance of slate is not considered a reason for a return.