 


Quick Access Controller

Button Operation:

On/Off:
press and hold

Change Auto Program:
Short press; new program
will be announced and start

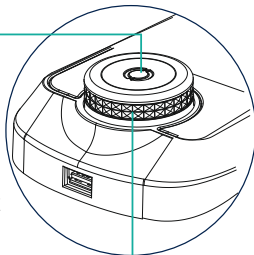

Dial Operation:

Turn left or right to recline or incline

Sounds

Home/Sounds

Sound > Select from Nature sounds

Volume > Set volume level

BEEP > Set to OFF to stop sounds from remote

To play Nature Sounds, Bluetooth must remain set to ON prior to selection the sound choice.

Chromotherapy

Home/Lights

Themes > Select light in programs

Solid – Single color light

Breathe – Single color that dims, then brightens in repetition

Wake up: Blue enriched lights to boost energy level - gradual brightness

Wind down – Colors of sunset absent blue waves – gradual darkening

Multi-wave – All the colors of the rainbow morphing into each other

Multi-rotate – Colors rotate from one to another

Intelligent Voice Commands

Use the voice control commands below. *(Once you've activated voice control, give a command within 5 seconds, or you will have to re-activate the voice function)*

To Active Voice Mode say
"Switch to Voice Mode"

- ▶ Power On
- ▶ Switch Off
- ▶ Activate Massage
- ▶ Sports Refresh
- ▶ Extension
- ▶ Rest & Sleep
- ▶ Working Relief
- ▶ Neck & Shoulder
- ▶ Waist & Spine
- ▶ Deep Shiatsu
- ▶ Healthy Breath
- ▶ Massage Extend
- ▶ Relaxation
- ▶ Air Bag Massage
- ▶ Demo
- ▶ Zero Gravity
- ▶ Start Heat
- ▶ Heat Off

INFINITY[®]

Quick Start Guide

Dynasty Massage Chair

Prime Massage Chairs

(800) 566-2798

<https://www.primemassagechairs.com>

INFINITY®

Multi-Functional Screen —

Use the directional buttons below to navigate these menu screens. Then press ok to select

Power — Powers up the remote or returns the chair to the exit position and powers down remote

Home — Shortcut to the home page of all menu screens

 
 
OK — After navigating to the command desired on the display, push OK to select.

Zero Gravity — Press for Zero Gravity 1, press again for Zero Gravity 2, press again to restore to recline

Foot Roller — Press to turn off Foot Roller, press again to resume Foot Roller

Footrest — Press and hold up arrow to bring foot rest up, Press and hold down arrow to bring footrest down

Leg Length — Press and hold right arrow to extend the leg length adjustment, press and hold the left arrow to retract the leg length adjustment

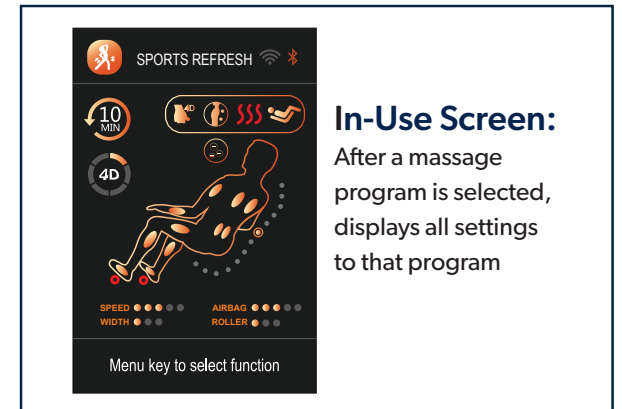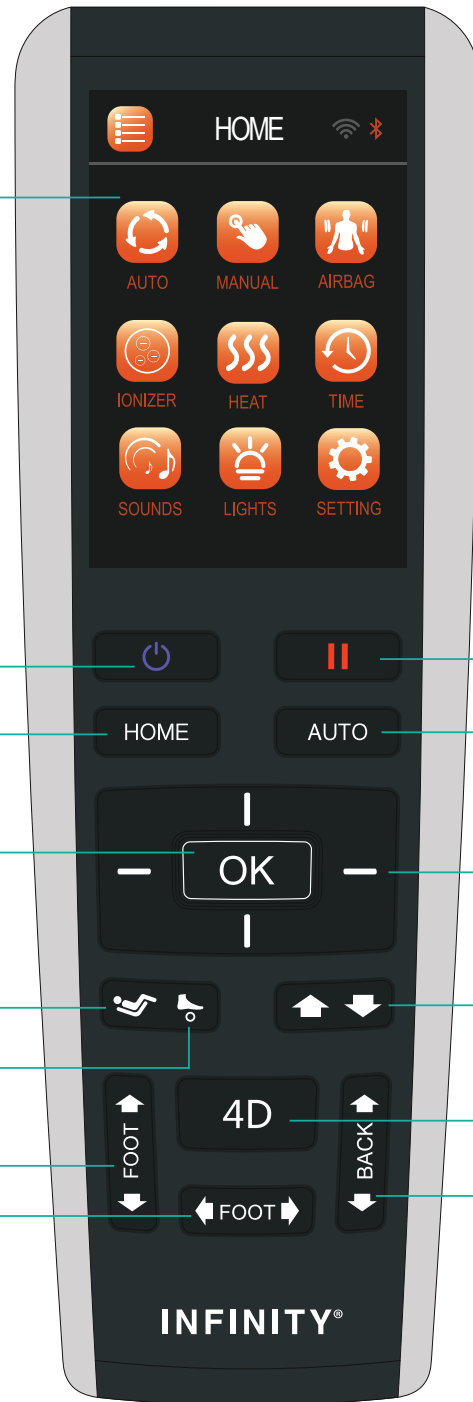

In-Use Screen:

After a massage program is selected, displays all settings to that program



Pause — Press pause to immediately stop all massage chair activity, press again to resume



Auto — Shortcut to the Auto Programs menu screen



Directional Button — Press up, down, left or right to navigate the display screen



Back Adjustment — Back mechanism position adjustment; press and hold up to raise, press and hold down to lower. Use during initial body scan fine tuning or in manual partial or point zone mode



4D — Press to increase or decrease 4D intensity of back mechanism. In-use screen displays intensity dial



Seat Back Position — Press and hold down arrow to recline the seat back, press and hold the up arrow to upright the seat back