


## In-Use Screen

After a Massage program is selected, In-use screen displays all settings to that program.

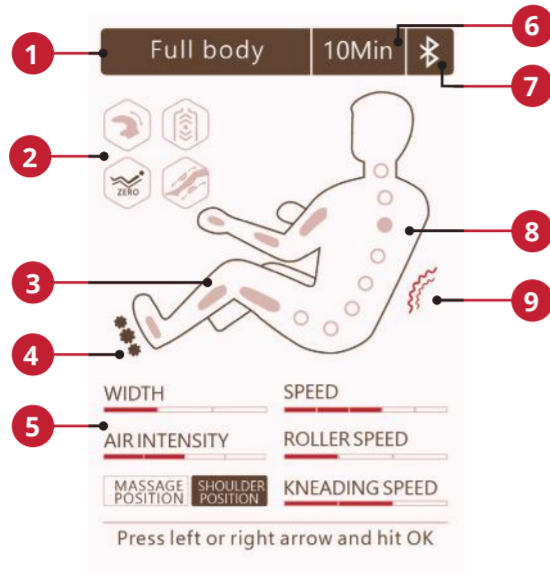

- 1 Program
- 2 Status icons
- 3 Active airbags
- 4 Active rollers
- 5 Indicators
- 6 Time left
- 7 Bluetooth connected
- 8 Back-roller position & direction
- 9 Back heat indicator

## Intelligent Voice Commands

Awaken Intelligent Voice Commands by saying: 'Hi Kyoto' pronounced "Key-oh-ta", or press microphone key on remote control.

You may now give your chair any of the commands in the list below within 6 seconds. After 6 seconds the Intelligent Voice Command function will turn off automatically and must be awakened again.

You can also press the **Voice Command button** on your remote control, once to awaken Voice Command, or hold down for 3 seconds to turn off voice control listening.




Make sure to speak the command clearly and slowly.

Commands	Manual Commands
Quick	Change to Point Mode
Full Body	Go a Little Down
Rest and Relax	Go a Little Up
Recharge	
Recovery	
Stretch	
Neck and Shoulder	
Back Relief	
Lower Body	
Stress Relief	
Renew	
Athlete	
Turn Chair Off	

# KYOTA®

## Quick Start Guide

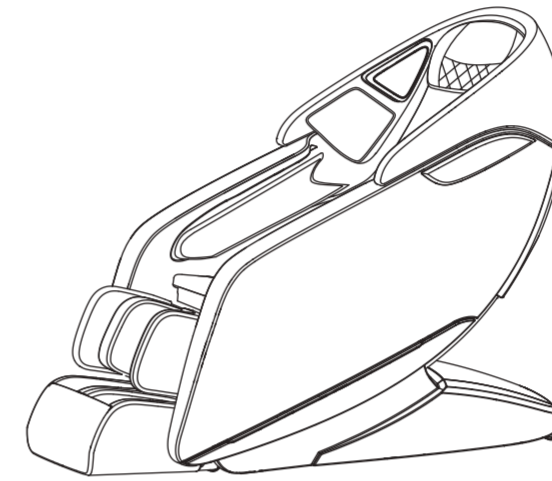

## Genki M380 Massage Chair

# KYOTA®

### Multi-Functional Screen –

Use the directional buttons below to navigate these menu screens. Then press OK to select.

**Power** – Powers up the remote or returns the chair to the exit position and powers down remote.

**Directional Button** – Press up, down, left or right to navigate the display screen.

**Auto** – Select from 12 pre-set massage programs.

**Home** – Shortcut to the home page of all menu screens.

**Feet Adjust** – Press and hold up arrow to bring foot rest up, press and hold down arrow to bring foot rest down.



**Pause** – Press to force stop the chair during a program and stop all functions. Press again to resume.

**OK** – After navigating to the command desired on the display, push OK to select.

**Voice Command** – Press once to awaken Intelligent Voice Command, hold down for 3 seconds to turn off Intelligent Voice Command.

**Zero Gravity** – Press once for zero gravity 1. Press twice for zero gravity 2. Press button again to return to zero gravity 1.

**Foot Roller** – Press once to turn off Foot rollers, press again to also turn off Calf rollers, press again to resume both.

**Seat Back Position** – Press and hold down arrow to recline the seat back and lift up footrest. Press and hold the up arrow to upright the seat back and lower footrest.