
 
Swifty KICKSTAND


ASSEMBLY GUIDE

Please read these instructions carefully. If you have any queries relating to the safe assembly of your scooter kickstand do not hesitate to contact us.

SwiftyHQ tel: +44 (0)161 848 8695 Email: support@swiftyscooters.com

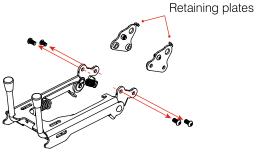




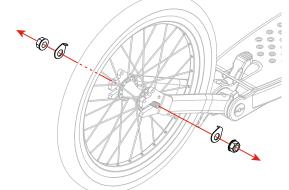


Remove wheel nuts and retaining washers. Set aside the retaining washers and keep in a safe place.

TOOLS NEEDED FOR ASSEMBLY

You will need a 4mm Allen key. You will also need a spanner for the wheel nuts, the wheel tool that comes with your scooter is ideal.

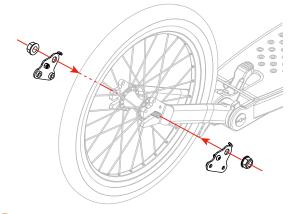

Attach the two retaining plates to the axle and secure them in place using the wheel nut. Please note the orientation as shown above.

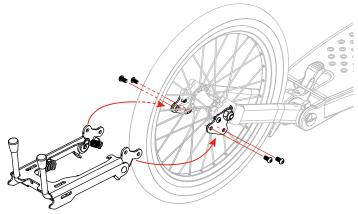

for more information online

swiftyscooters.com/assembly-guides








Let the good times ride and roll! Share your story and follow us @swiftyscooters




Secure the kickstand to the retaining plates using the four bolts as shown. Tighten using a 4mm Allen key.




HOW TO USE

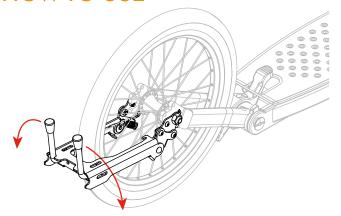



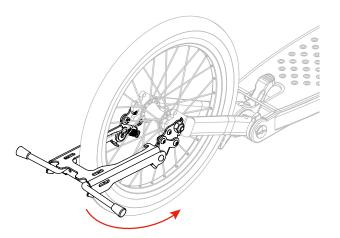


Using your toe to pivot the kickstand down to the ground, roll the scooter backwards until the kickstand snaps into place underneath the rear wheel.

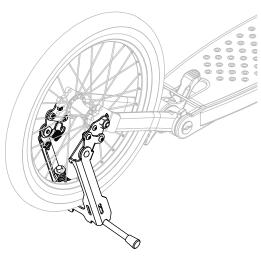


The final standing position, the rear wheel is lifted, with the stand underneath.


HOW TO FOLD THE **Swifty** ONE REAR WHEEL

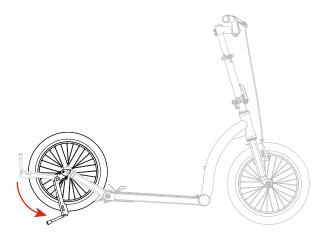

When you're ready, fold the kickstand down with the legs closed as shown above.

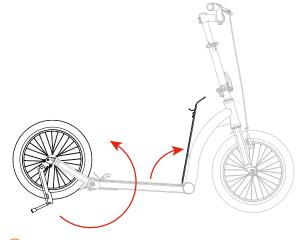

Lift the footplate and rotate the rear wheel.

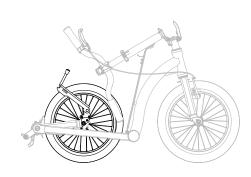

The kickstand will rotate through the frame into the fully folded position as shown above.