

## RUNNER 60



## USER MANUAL

### 1-Year Warranty

Thank you for purchasing the Runner 60 wireless earbuds!

You are covered by our 1-Year Warranty

Register for your free warranty at: [www.backbaybrand.com/warranty](http://www.backbaybrand.com/warranty)

If you have any issues please feel free to email: [support@backbaybrand.com](mailto:support@backbaybrand.com)

### How to Power On/Off

- To power on, remove the earbuds from the case **or** hold the "B" buttons on each earbud for 3 seconds
- To power off, place the earbuds in the case **or** hold the "B" buttons for 5 sec
- If the case is totally out of battery, the earbuds won't turn off automatically

1

### Pairing for the First Time

- Remove the protective plastic from the bottom of the earbuds
- Place the earbuds in the charging case until you see a white light
- Remove both earbuds from the charging case and **they will automatically turn on and connect to each other**
- Go to the Bluetooth menu on your device and **only select "Runner 60 R" (do not select "60 L")**
- If your phone shows a Bluetooth Pairing Request, press "Pair"

If the earbuds don't connect to each other, please follow the directions on the next page →

2

### Fixing a Connection Issue

- Open your phone's bluetooth settings, find "Runner 60 R" and "Runner 60 L" and click "Forget This Device" for both
- Place your earbuds in the charging case
- Tap both "B" logos, then press and hold both logos for **5 full seconds until you see 3 flashing lights.**
- Remove the earbuds from the case
- Then you should see "Runner 60 R" as a discoverable device in your phone's Bluetooth menu **"Don't select "Runner 60 L"**

If you don't see it in your Bluetooth menu, turn your phone's Bluetooth off and on again



3

### Pairing Only One Earbud

#### Right Earbud

- Remove only the right earbud from the charging case (or hold the "B" button on the right earbud to turn on)
- If you have connected before, the earbud should automatically connect
- If it does not automatically connect, select "**Runner 60 R**" in your device's Bluetooth menu

#### Left Earbud

- Remove only the left earbud from the charging case (or hold the "B" button on the left earbud to turn on)
- Select "**Runner 60 L**" in your device's Bluetooth menu to connect

After you have paired the left earbud once, it should automatically connect when you turn on the left earbud again

4

### Bass Mode

To turn Bass Mode on, triple-tap the "B" logo on the right earbud.

To turn Bass Mode off, triple-tap the "B" logo on the right earbud again

**2 Beeps** = Bass Mode On  
**1 Beep** = Bass Mode Off



**3 TAPS**

5

### Controls

#### Left Earbud Right Earbud



- Volume Down**  
Double-Tap Left "B"
- Volume Up**  
Double-Tap Right "B"
- Previous Song**  
Hold Left "B" for 1 Sec
- Next Song**  
Hold Right "B" for 1 Sec
- Voice Assistant**  
Triple-Tap Left "B"
- Bass Mode On/Off**  
Triple-Tap Right "B"  
(2 Beeps = Bass Mode On)

- Pause/Play**  
Tap Either "B" Once
- Power On/Off**  
Press and Hold "B" for 5 Seconds

### Phone Calls

- Answer/End Call**  
Tap Either "B" Once
- Reject Incoming Call**  
Double-Tap Either "B"

6

### Positioning

Place the earphone in your ear with the hook going over your ear. Rotate the earbud until you find a comfortable position



### Choose the Right Ear-Tip

**GREAT FIT = GREAT BASS**



If you are having trouble putting on the tips, go to the site below for help: [backbaybrand.com/eartips](http://backbaybrand.com/eartips)

7

### How to Charge

#### Charging the Earbuds

- Simply place the earbuds in the charging case (**Make sure they are not wet**)
- When the earbuds are charging, a white light will shine on the earbuds
- When the earbuds are fully charged, the light will turn off
- The case will recharge the earbuds 9 full times

#### Charging the Case

- Locate the USB-C cable included in the accessory box, and plug it into the back of the case
- Or place the case on a wireless charging pad


Do not use a charger that exceeds 5V 1A. A higher-powered charger may damage the battery.

8

### Charging Status

The LED lights on the front of the case will blink to show the battery status when you plug in the case or place the earbuds in the case

Battery 100%-75%	4 Lights
Battery 75%-50%	3 Lights
Battery 50%-25%	2 Lights
Battery 25%-0%	1 Light

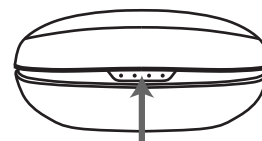

LED Lights

9

### Specifications

- Bluetooth Version: 5.0
- Profiles Supported: APTX, HFP, HSP, AVRCP
- Microphone Features: CVC Noise Cancellation
- Supports Cellphone Voice Assistants
- Wireless Range: 10m
- Battery Capacity:
  - Earphones: 60 mAh
  - Dock: 1200 mAh
- Earphone Playtime: Up to 8 Hours
- Total Playtime with Charging Case: 80 Hours
- Charging Time: About 2 Hours
- Frequency Range: 20 Hz – 20 kHz

10