

edelkrone CONTROLLER v2

USER'S MANUAL

Before operating your edelkrone, please watch the user's manual video from the link below


<http://edel.kr/ctrlrv2>



TABLE OF CONTENTS

1. WHAT'S IN THE BOX & THE BASICS
2. INSERTING THE BATTERIES
3. START USING
4. CONNECTION SCENARIOS
5. PAIRING SCREENS
6. AXIS & KEYPOSE SETTINGS
7. SPEED & ACCELERATION SETTINGS
8. ON/OFF BUTTON & MENU SCREEN
9. ACTIVATING GESTURE MODE
10. CALIBRATING FOR GESTURE MODE
11. GESTURE MODE

1. WHAT'S IN THE BOX & THE BASICS

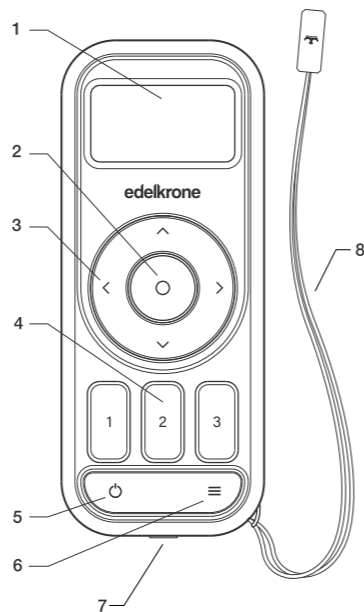



- | | |
|-----------------------|------------------|
| 1. Information screen | 5. On/Off button |
| 2. Select button | 6. Menu button |
| 3. Menu Navigation | 7. Link port |
| 4. Keypose buttons | 8. Wrist Strap |

2. INSERTING THE BATTERIES

Open the battery cover from the side labeled "pull". Insert the batteries in the correct direction, as indicated in the battery capsule.




x2
AA
Battery

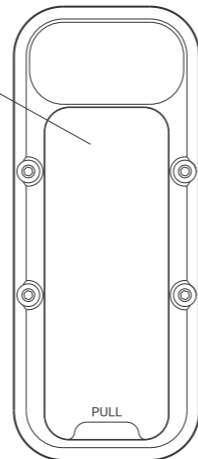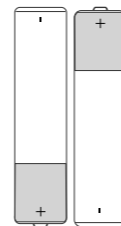

*Batteries sold separately.

3. START USING

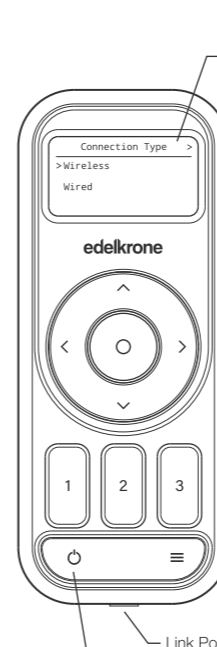

- 2 There are two connection types on the opening screen:
- Wireless
 - Wired


Select **Wireless** to connect wirelessly to the edelkrone devices.

For a wired connection, connect the edelkrone Controller v2 and the edelkrone device with a 3.5mm to 3.5mm link cable using the **Link port** and select **Wired**.

Use the arrow keys to choose either option and press the select button to proceed.

- 1 To switch Controller v2 on, press and hold the On/Off button for one second.

4. CONNECTION SCENARIOS

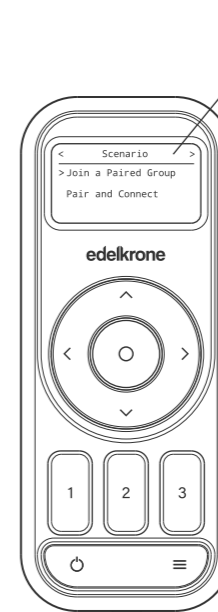


There are two connection scenario on the opening screen:

- Join a Paired Group
- Pair and Connect

Select **Pair and Connect** to choose the edelkrone device you want to connect to from the available devices list.

Once the devices are paired, you can **Join a Paired Group** by selecting this option from the menu.


5. PAIRING SCREENS

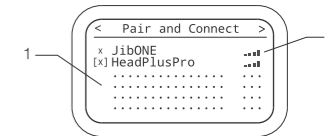

1. Available Devices List 2. Connection Signal of the Devices

Pair and Connect Screen

Choose the devices you want to pair using the arrow keys and press the Select button. Then, push the right navigation button to go to the control screen.

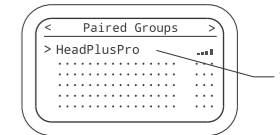


1. The Master Device of the Paired Group

Join a Paired Group Screen

If you already have paired devices, the master device of the paired group will be on this list. Choose the paired group you want to join using the arrow keys and press the Select button. Then, push the right navigation button to go to the control screen.

*Based on your firmware, you can get the latest guide from edel.kr/ctrlrv2 or the QR code on pg.8

6. AXIS & KEYPOSE SETTINGS

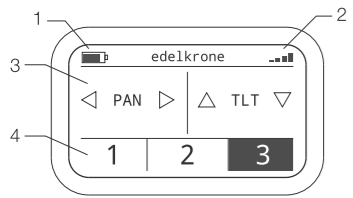

1. Battery Level Indicator
2. Connection Indicator
3. Pan & Tilt Settings
4. Keyposes


A. Axis Control Screen

You can adjust the pan & tilt, swing, slide, and focus movements from this screen using the **arrow keys** on your Controller v2.

You can switch axis selection by pressing the **select button**.


Keyposes

There are three keypose slots under the pan & tilt settings.

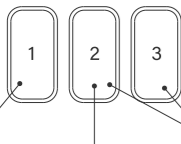

- Holding 1 sec.** saves the pose as pose 1.
- One Click** activates pose 2.
- Pressing at the same time** moves the device between pose 2 and pose 3.

7. SPEED & ACCELERATION SETTINGS

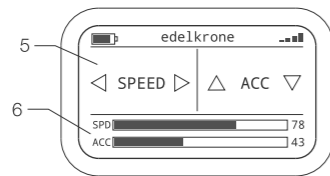


5. Speed-Acc. Settings
6. Speed-Acc. Level

B. Speed & Acceleration Control Screen

You can adjust the speed and acceleration from this screen using the navigation buttons.


Press the saved keypose buttons to start moving your devices.

C. Loop Screen

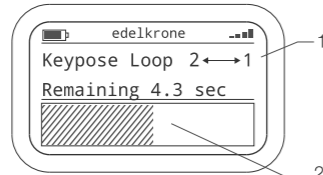

1. Moving Keyposes or Loop Navigation
2. Movement Duration

8. ON/OFF BUTTON & MENU SCREEN

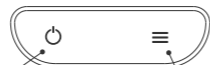

On/Off Button


To switch off, Hold On/Off button down until the shutdown text disappears.

Menu Button

You can go to the menu by pushing the menu button on any screen.

Menu Screen

There are three options on this screen:

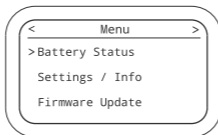

-Battery Status

Displays the battery levels of Controller v2 and the paired devices.

-Settings / Info

Set Auto Power Off and Auto Power Saving Time. Or, see information on your Controller v2 (Serial number, version and more).


-Firmware Update

When your smartphone alerts you of a firmware update, go to Menu/Firmware Update and follow the instructions on the edelkrone App.

Based on your firmware, there may be minor differences in the product interface you have. You can get the latest guide from edel.kr/fw-ctrlrv2 or the QR.





9. ACTIVATING GESTURE MODE

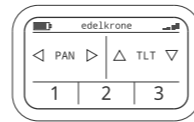


- 1 To activate gesture mode, connect an edelkrone device.

- 2 Push the **menu** button and select the **Advanced Features** option.

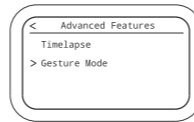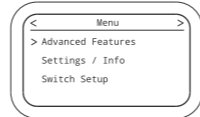


- 3 Select **Gesture mode**.

- 4 Switch the option OFF to **ON**. From now on, gesture mode is activated.


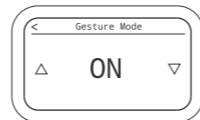


10. CALIBRATING FOR GESTURE MODE

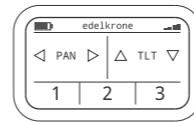


- 1 To start using gesture mode, press and hold the **select** button on the motion control screen.

- 2 For the controller to calibrate itself, put controller on a flat surface and keep pushing the select button.

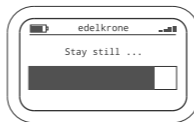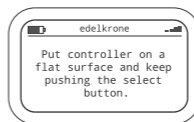


- 3 Keep the controller still until the progression bar is completed.

11. GESTURE MODE

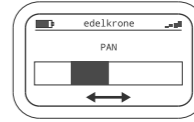

On the gesture mode screen, the progression bar indicates speed and direction of the motion. To use gesture mode, press and hold the **select** button and do the following axis moves.

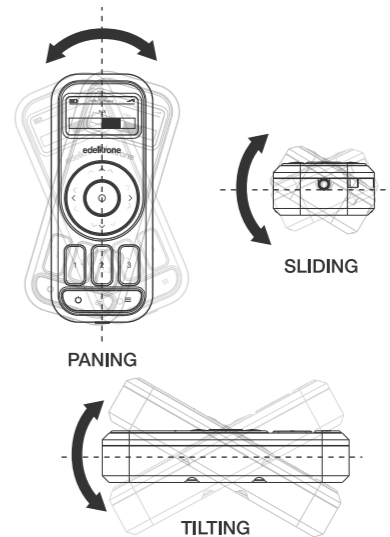

DISPOSAL OF THE PRODUCT & WARNINGS



Should the product become damaged beyond repair, or if you wish to dispose of it, it must be disposed separately from the municipal waste stream via

designated collection facilities appointed by the government or the local authorities. Observe the regulations of your area and country that relate to the disposal of electronic products.

- * Keep your electronic unit away from all sorts of liquids.
- * In order to preserve your Controller v2 and battery performance at their best, use the exact same type of batteries.
- * Do not attempt to disassemble or modify any internal parts of your Controller v2. If the device appears to be malfunctioning, stop using immediately and contact support for qualified service.
- * Never force a different type of connector into the link port.
- * Never use or store your Controller v2 in areas subject to extreme temperatures, or high levels of vibration.
- * If your Controller v2 becomes unresponsive, disconnect and re-connect the power source. Make sure your batteries are properly charged. If the problem persists, contact our support team.
- * Environmental factors may affect your Controller v2's performance. Keep your product away from environmental hazards such as dust or heavy resonance. Do not use chemical materials to clean your product.
- * Use of an inappropriate power source may permanently damage your Controller v2.
- * Avoid dropping or causing physical damage to your Controller v2.
- **edelkrone cannot be held responsible for damage caused by improper use or modification of the product.
- * Rated Voltage: 2.4V (2x1.2V AA Battery)
- * Rated Current: 0.5A
- * Operating Temperature: -5°C to +45°C