### 1. WHAT'S IN THE BOX & THE BASICS

### 2. MOUNTING ONTO TRIPOD

# 3. MOUNTING THE BATTERY BRACKET

# 4. ATTACHING THE COUNTERWEIGHT

## 5. PULLING OUT THE EXTENSIONS

### 7. ATTACHING THE CAMERA 6. ADJUSTING OPERATION ANGLE

# 8. BALANCE ADJUSTMENT & SAFETY LOCK

# TABLE OF CONTENTS

- 1. WHAT'S IN THE BOX & THE BASICS
- 2. MOUNTING ONTO TRIPOD
- 3. MOUNTING THE BATTERY BRACKET
- 5. PULLING OUT THE EXTENSIONS
- 6. ADJUSTING OPERATION ANGLE
- 7. ATTACHING THE CAMERA

4. ATTACHING THE COUNTERWEIGHT

- 8. BALANCE ADJUSTMENT & SAFETY LOCK
- 9. EXTENSION LENGTH INDICATORS
- 10. COUNTERWEIGHTS

13. IN CASE THE KNOBS STUCK

- 11. TENSION ADJUSTMENT
- 12. TURNING ON JIBONE 4. Motor Unit (with DC in, Shutter
  - Trigger Port, Battery Bracket Port) Adjustment Knob)

8. Safety Lock

7. Tension Adjustment

5. JibONE length extension screws

- 9. Body (3/8" tripod mounting port, 1/4"
- 10. Camera Plate (with 3/8" mounting screw
- accessory port, Hot Shoe & Angle
- and spirit level)

\*Battery Bracket sold separately.


- 1. Align the body of JibONE with your tripod.


6. Damping Knob

JibONE




- 2. Tighten it by turning the mounting wheel.

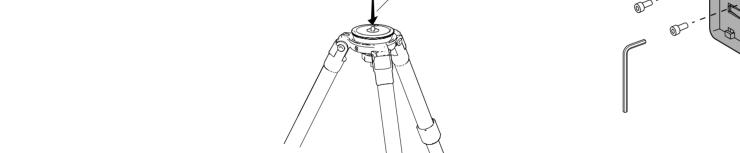


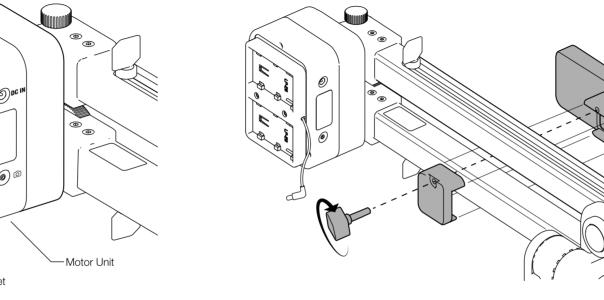



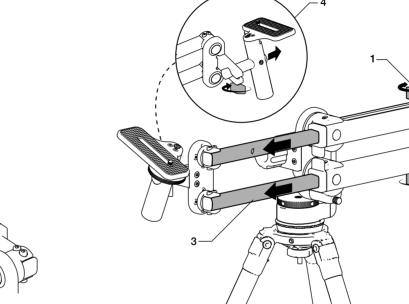




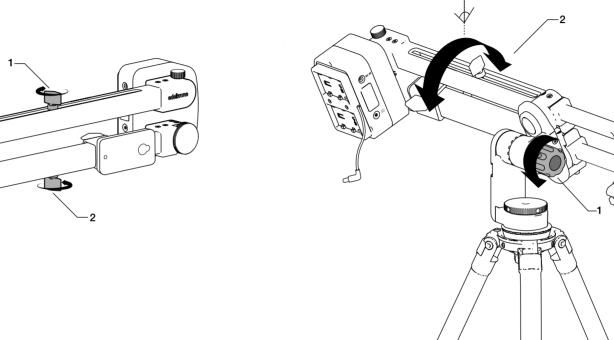


Loosen the angle adjustment knob by turning counterclockwise.
 Adjust your operation angle, JibONE has 5 different operation angle.

- 1. Loosen the screw by turning clockwise.
- 3. Tighten the angle adjustment knob back. 4. Extend the camera plate by loosening the screw.
- Tighten all the screws.

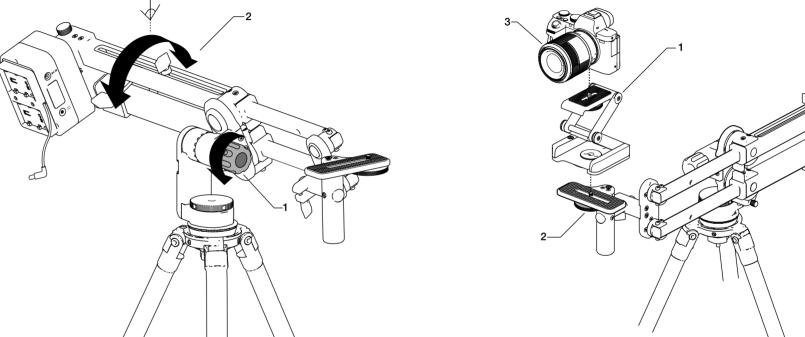


- 1. Align your FlexTILT Head or any tripod head with the camera plate as shown above.
  - Tighten the mounting wheel.
    Attach your camera to your FlexTILT Head or any tripod head.

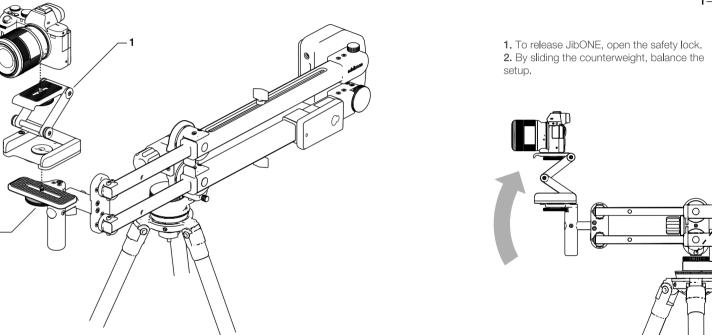





14. WARNINGS 15. START USING 9. EXTENSION LENGTH INDICATORS 10. COUNTERWEIGHTS

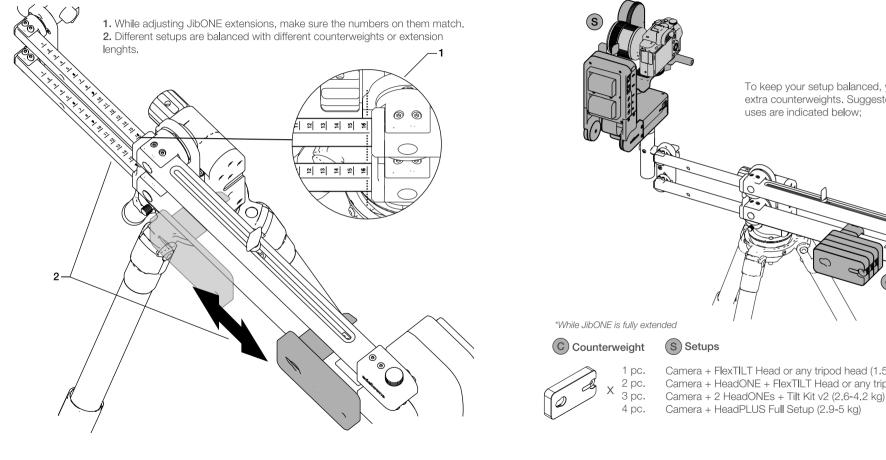

To keep your setup balanced, you might need

extra counterweights. Suggested counterweight

uses are indicated below:


1 pc. Camera + FlexTILT Head or any tripod head (1.5-2.4 kg)


4 pc. Camera + HeadPLUS Full Setup (2.9-5 kg)

2 pc. Camera + HeadONE + FlexTILT Head or any tripod head (2,2-3,4 kg)

11. TENSION ADJUSTMENT

13. IN CASE THE KNOBS STUCK

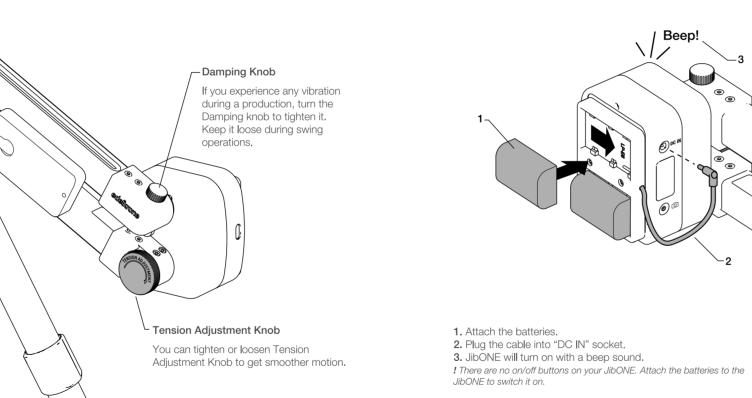

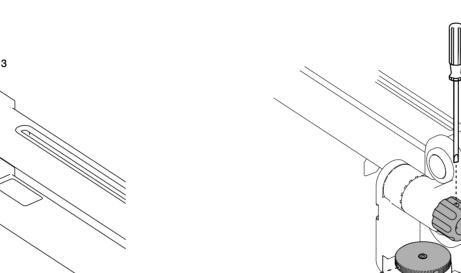

# You can use a screwdriver to get rid of stucking by turning the holes. the JibONE extensions for a balanced setup.







- 2. edelkrone App will automatically pair with your JibONE via Bluetooth.
- 3. You are now ready to use your JibONE. Just keep following the instructions qualified service. on your mobile device or visit manuals.edelkrone.com for a detailed video \* Never force a different type of connector into a port. instruction. \* Never use or store your Motion Control Unit in areas subject to extreme temperatures, or high
  - \* If your motion control unit becomes unresponsive, disconnect and re-connect the power

DISPOSAL OF THE PRODUCT & WARNINGS

source. Make sure your DC adapter is plugged in or your batteries are properly charged. If the problem persists, contact our support team, \* Environmental factors may affect your Motion Control Unit's performance, Keep your product

Should the product become damaged beyond repair, or if you wish to

the local authorities. Observe the regulations of your area and country that

dispose of it, it must be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or

relate to the disposal of electronic products.

- away from environmental hazards such as dust or heavy resonance. Do not use chemical materials to clean your product.
- \* If there is an impairment on the power or connector cable, stop using the Motion Control Unit
  - \* Avoid dropping or causing physical damage to your Motion Control Unit.
  - \* Do not place heavy objects on top of your Motion Control Unit.

 
levels of vibration.

\*\*edelkrone cannot be held responsible for damage caused by improper use or modification of the product.

Make sure your mobile device's Bluetooth connection is on.

Always start using with fully charged batteries.

A detailed video explaining the edelkrone App can be found at: http://edel.kr/jibone



www.edelkrone.com

Before operating your edelkrone, please watch the user's manual video.


http://edel.kr/jibone

 


For more information and tips about your JibONE, please watch the user's manual videos at: http://edel.kr/jibone





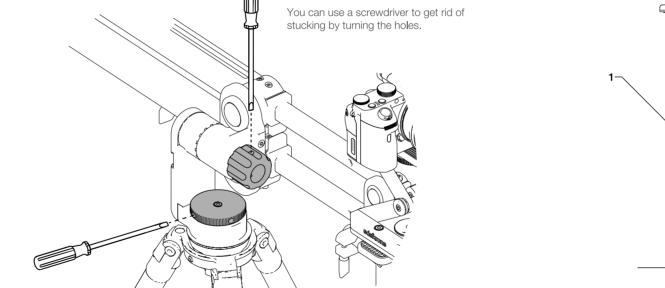



on, remove your camera and insert the extensions back in. Otherwise, the device will be

unstable and may cause danger. 3. Make sure you attach the counterweights tightly and correctly.