
## STOP MOTION MODULE

USER'S MANUAL

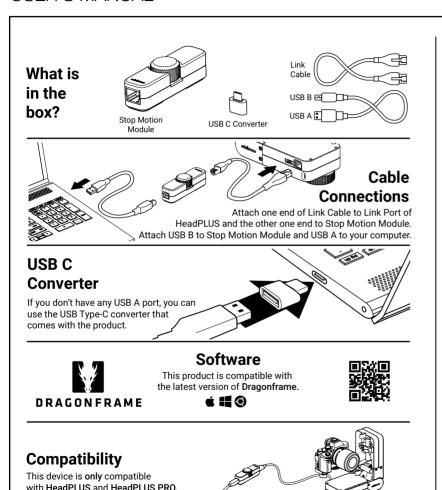

## **DISPOSAL OF THE PRODUCT & WARNINGS**



Should the product become damaged beyond repair, or if you wish to dispose of it, it must be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities. Observe the regulations of your area and country that relate to the disposal of electronic products.

- \* Keep your electronic edelkrone motion unit away from all sorts of liquids.
- \* In order to preserve your edelkrone motion unit and battery performance at their best, use the exact same type of batteries with an equivalent level of charge during dual-battery operation.
- \* Do not attempt to disassemble or modify any internal parts of your edelkrone motion unit. If the device appears to be malfunctioning, discontinue use immediately and contact support for qualified service.
- \* Never force a different type of connector into a port.
- \* Never use or store your edelkrone motion unit in areas subject to extreme temperatures, or high levels of vibration.
- \* If your edelkrone motion unit becomes unresponsive, disconnect and re-connect the power source. Make sure your DC adapter is plugged in or your batteries are properly charged. If the problem persists, contact our support team.
- \* Environmental factors may affect your edelkrone unit's performance. Keep your product away from environmental hazards such as dust or heavy resonance. Do not use chemical materials to clean your product.
- \* If there is an impairment on the power or connector cable, stop using the edelkrone motion unit immediately.
- \* Avoid dropping or causing physical damage to your edelkrone motion unit.
- \* Do not place heavy objects on top of your edelkrone motion unit.
- \*\*edelkrone cannot be held responsible for damage caused by improper use or modification of the product.