

# 1/8TH SCALE OFFROAD NITRO BUGGY



## X3 SABRE

### FEATURES:

- LIGHT WEIGHT FRONT, REAR AND CENTER DIFFERENTIALS.
- COMPLETE SET OF LIGHT WEIGHT OUT DRIVES.
- 7075 CNC 5MM ALUMINIUM FRONT AND REAR SHOCK TOWERS.
- FULL TRAVEL FRONT AND REAR SUSPENSION.
- REDESIGN STEERING SYSTEM WITH ACKERMAN.
- SOILD CONSTRUCTED ARMS AND CAMBER LINKS.
- STEEL CATURED HINGE PINS.
- 7075 CNC ARM HOLDER AND TOE PLATE.
- 7075 CNC FRONT REAR CHASSIS BRACES.
- 7075 3MM LIGHTENED CHASSIS WITH COUNTERSUNK SCREWS.
- 7075 CNC ETCHED LEFT AND RIGHT LONG ENGINE MOUNT.
- VERSION 2 BIG BORE SHOCKS.
- TWO SETS OF SHOCK SPRINGS.
- COMPOSITE RADIO TRAY, ENCLOSED BATTERY AND RECEIVER BOX.
- FORWARD BATTERY COMPARTMENT FOR BETTER STEERING.
- 2 ANTI-CLOCKWISE SCREWS FOR FRONT AND REAR SHOCKS.
- FULL LIGHT WEIGHT CVA DRIVETRAIN.
- SPECIAL CAPPED CENTER DRIVELINE.
- SPECIAL CAPPED CENTER DRIVELINE.
- SMALL FRONT AND REAR GEAR CASE WITH SWAY BAR MOUNT.
- EQUIPPED WITH TWO SETS OF FRONT AND REAR SWAY BARS.
- ADJUSTABLE TURNBUCKLES AND LIGHTENED CAMBER LINKS.
- COMPLETE HIGH PERFORMANCE BEARING SET.
- FRONT AND REAR CHASSIS KICK UP (PATENTED).
- COMPOSITE STONE GUARDS AND REAR MUD DEFLECTORS.
- HIGH IMPACT DOWN FORCE WING.
- LIGHT WEIGHT INUP WHEELS WITH TIRES.
- HARD CHROME EFRA APPROVED 2028 IN-LINE PIPE AND HEADER.
- LIGHT WEIGHT FLYWHEEL AND SPECIAL MIXTURE ALUMINIUM 3 SHOES CLUTCH.
- CLEAR CAB FORWARD BODY FOR EXCELLENT HANDLING.
- 125CC FUEL TANK AND REMOVABLE TANK PLUG.
- INTEGRATED FUEL CLIPS (PATENTED) AND FUEL FILTER.
- CENTER DIFFERENTIAL WITH BRAKE AND GEAR SHROUD.
- SIDE LOADED CALIPER WITH RETURN SPRINGS.

### ADDITIONAL PARTS NEEDED

- ENGINE/MOTOR. ●BATTERIES.
- 2 CHANNEL RADIO. ●PAINT.
- GLOWPLUG. ●RC CAR FUEL (20%)
- GLOWPLUG IGNITOR.
- STARTER BOX OR STARTER.

### THIS IS NOT A TOY !

- DO NOT USE WITH CHILDREN YOUNGER THAN 16YEARS.
- PAINTED BODY NOT INCLUDED.

### 需另購物件

- 模型車用引擎. ●電池.
- 兩動作遙控器. ●車殼用塗料.
- 火星塞. ●模型引擎用燃油(20%).
- 火星塞點火夾.
- 起動馬達或起動台.
- 拆火星塞扳手.

### 本產品非玩具

- 16歲以下或兒童請勿玩用.
- 不包含塗裝車殼.

## HONG NOR

鴻諾企業有限公司  
HONG NOR ENTERPRISE CO.,LTD.

5F NO.181-2, CHUNG HSING ROAD,  
HSICHIH CITY, TAIPEI HSIEN,  
TAIWAN, R.O.C.

TEL: 886 2-2694-0345

FAX: 886 2-2694-1632

www.hongnor-racing.com

圖示產品有可能為試樣品,包裝內容以實際出貨為準. 規格配備內容更改恕不另行通知.  
MODEL SHOWN MAY BE PROTOTYPE AND MAY VERY SLIGHTLY FROM KIT. SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.

INCLUDED ITEMS

附帶用品



7000wtg



5000wtg



2000wtg

差速器砂油



45wtg



55wtg

避震器砂油



1.5mm Allen Wrench

1.5mm 內六角板手




2mm Allen Wrench

2mm 內六角板手



2.5mm Allen Wrench

2.5mm 內六角板手

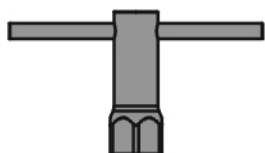

17mm Wheel Nut Tool

輪胎拆除六角板手



Turnbuckle Wrench

六角板手

TOOLS NOT INCLUDED IN THE KIT

需使用之工具 (另購)



Body Reamer

車殼鑽孔器



Screw Cement

螺絲膠



Spray Paint

模型用噴漆



Instant Cement

3秒瞬間膠水



Curved Scissors

彎頭剪刀



Cutter

斜口鉗



Gear Grease

齒輪潤滑油膏



Craft Knife

美工刀



Needle Nosed Pliers

尖嘴鉗



Precision Caliper

游標卡尺



Screw Drivers

螺絲起子



7.0mm Allen Socket Driver



5.5mm Allen Socket Driver



3.0mm



2.5mm



 
2.0mm



1.5mm


Allen Drivers

六角起子



Flywheel Tool

飛輪板手

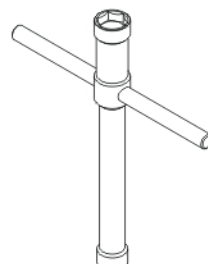

Cross Wrench

中心螺帽板手

HONG NOR

#339




Air Filter Oil

濾清器油

Equipment Needed

另購品

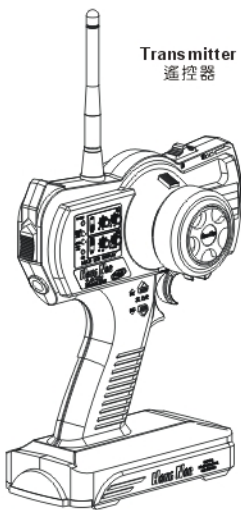


Transmitter

遙控器



UM-3 Batteries For Transmitter (8pcs)

遙控器用 3號乾電池 (8顆)

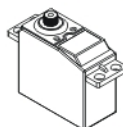


Servo

伺服器



Receiver Switch

接收器

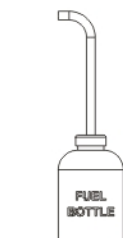

Fuel Bottle

加油瓶




Glow Fuel

模型用燃油




Glow Igniter

可充電式點火夾

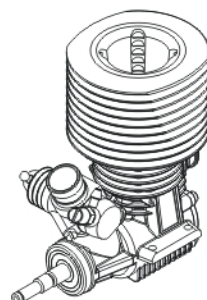


.21 Engine

21級引擎

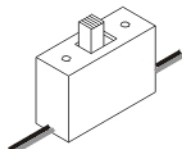


Receiver Switch

接收器開關

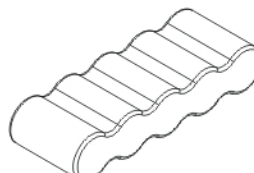

5-cell 16V Receiver Pack

5顆裝6V電池包

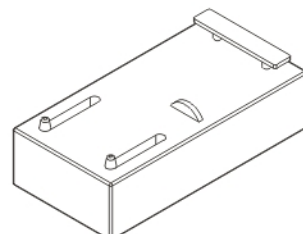

Starter Box

起動台



# IMPORTANT-READ THIS BEFORE RUNNING

重要！操作前請先閱讀

## 1. Before Starting

啟動前

- ◎ **Please read manual carefully! (With a parent, guardian or a responsible adult if necessary).**  
請仔細閱讀說明書，(如有必要，須有家長，監護人，或其他成年人陪同)。

## 2. While Operating

當操作時

- ◎ **Any running area you choose must be dry. Do not run vehicle near any water or wet areas.**  
請在乾地上操控車子。並請勿操控車子於水池或溼地旁。
- ◎ **Do not run on public streets. It is very easy to have the car run over or be damaged by hitting the curb.**  
勿在大街上操控車子，因為它很容易被行駛中的車輛輾過或碰撞而有所損傷。
- ◎ **Do not operate the car in tight confined places. The vehicle is very fast and will easily hit something.**  
勿在空間狹窄的地方操作；因為它的速度快很容易碰撞周圍物件。
- ◎ **Do not run near people or animals. The car is very fast and could easily hit someone if you are not an expert driver.**  
勿操作車子於人群或動物旁；如您不是專業人士操作，他們都可能發生危險。
- ◎ **Do not operate the car at night. You will not be able to drive it safely.**  
勿在晚上操作模型車，因可能視線不佳而導致它發生碰撞。

## 3. Before Operating

操作前檢查

- ◎ **Make sure that all screws and nuts are properly tightened.**  
確認螺絲與螺帽有無鬆動。
- ◎ **Always use fresh batteries for your transmitter and receiver before running the car. If the radio does not have full control of the car with steering, throttle and brake. Do not run it until corrected. Failure to correct this will result in possible injury and damage to the car or property.**  
**We strongly recommend using a failsafe.**  
操作前請先換上全新的電池，如果電量不足時，將不能完全控制車子的油門及剎車或行進方向。此刻請立即停駛，並換上全新電池。如果不立即改善，可能將導致失控而使人體受傷或車子受損。我們極力建議裝配“防失控裝置”在您的車上。
- ◎ **Please confirm the steering and throttle is at neutral position.**  
請確認油門位於中立點位置。

## 4. Check Your Vehicle After Running

操作後注意事項

- ◎ **Turn OFF receiver first, then turn OFF transmitter. This will prevent the car from losing control.**  
先關閉接收機電源，再關閉遙控器電源，如此以避免遙控車失控產生爆衝。
- ◎ **After running radio controlled car, it is necessary to perform routine maintenance.**  
遙控車跑完之後需要進行保養。

## 5. Cautions for Safety

安全注意事項

- ◎ **If your model does not operate correctly, stop it and find the cause.**  
如果遙控車有不正確表現，請停止操作，並立即檢查原因。
- ◎ **Keep hands and tools away from parts in action.**  
勿用手碰觸運轉中的零件。

**WARNING: After each run, the model is hot, beware of getting burned.**

警告 每次行駛都將導致引擎在高溫中，請勿用手觸摸引擎，以免燙傷。



# IMPORTANT-READ THIS BEFORE RUNNING

Running nitro kit is fun and easy, but to make this a safe and good experience you must observe a few rules. This kit is extremely fast, easily over 65KPH, and can seriously injure someone if you are not careful.

## 1. Where to run car?

- ⊙ Any running area you choose must be dry. Do not run car near any water or wet dirt.
- ⊙ Do not run on public streets. It is very easy to have the car run over or be damaged by hitting the curb.
- ⊙ Do not operate the car in tight confined places. The car is very fast and will easily hit something.
- ⊙ Do not run near people or animals. The car is very fast and could easily hit someone if you are not an expert driver.
- ⊙ Due to noise, you will want to consider the surrounding area when operating the car.
- ⊙ Do not operate the car at night. You will not be able to drive it safely.
- ⊙ Do not operate the car indoors. Engine exhaust fumes are dangerous.

## 2. Glow Fuel

- ⊙ Glow fuel is poisonous!
- ⊙ Glow fuel is flammable!
- ⊙ Do not leave in fuel bottle with lid off at any time.
- ⊙ Do use any fuel other than glow fuel in this engine.

## 3. First Time Starting the Engine

### Caution!

**When starting the engine make sure the following is observed.**

- ⊙ Set engine Master needle to 3 turns (rich setting)
- ⊙ Do not do this alone, get an experienced friend to help for the first time.
- ⊙ Fill fuel tank, try not to spill fuel. Do not spill fuel on receiver.
- ⊙ Hold car off the ground, so it will not runaway when it first starts.
- ⊙ Turn on the radio and check the linkage before starting engine.
- ⊙ Turn on car receiver battery switch.
- ⊙ Always have an air filter on the carburetor to keep dirt out.

## 4. Engine Break-in

- ⊙ See section.

## 5. Emergency Engine Stopping

- ⊙ Remove air filter and cover carb. intake.
- ⊙ Squeeze fuel line and hold until engine stops.
- ⊙ With a rag, cover exhaust outlet.

## 6. Storing Car After Running

- ⊙ Remove fuel from tank and fuel lines
- ⊙ Turn off radio in the car
- ⊙ Put a few drops of after run in the engine to keep it from rusting.
- ⊙ Clear oil and dirt from chassis with a degreaser.

## 7. Precautions

- ⊙ This kit is not a toy. Always run car with a second person as a spotter and pitman.
- ⊙ Hot Parts-The pipe, manifold, engine and head are very hot and will cause burns.
- ⊙ Rotating Parts-Keep hands away from the drive train, wheels, and engine when engine is running.
- ⊙ Radio-Check battery life before running the car. The radio does not have full control of the car with steering and/or throttle/brake, do not run until corrected. Failure to correct this will result in possible injury and damage to the car or property. We strongly recommend using a Failsafe.
- ⊙ Glow fuel-Do not leave the glow fuel unattended with the lid off. Fuel contains Methanol and Nitro Methane and is flammable and poisonous.

**Store fuel in cool ventilated location.**

































**Refer to the glow fuel label for additional precautions.**

- ⊙ Fuel tank in the car-Never store fuel in car tank, it will ruin the engine if left in tank.
- ⊙ Always turn off the car BEFORE turning off the radio.
- ⊙ DAMAGE DUE CAR RUN AWAY IS NOT A WARRANTY ISSUE .

**IF YOU DO NOT BREAK-IN ENGINE CORRECTLY, AT LOW-MID RPM, YOU WILL BREAK THE CONNECTING ROD!**


**FAILURE TO READ AND FOLLOW BREAK-IN ENGINE INSTRUCTIONS WILL VOID WARRANTY!**

# PARTS REFERENCE 零件圖

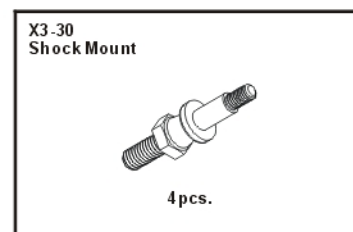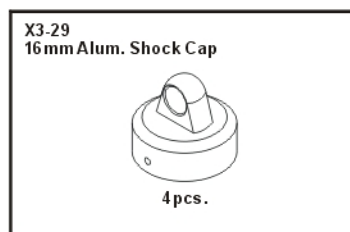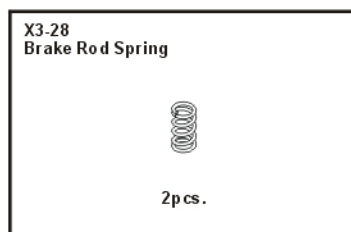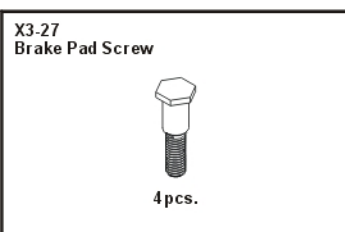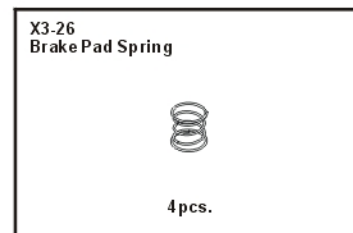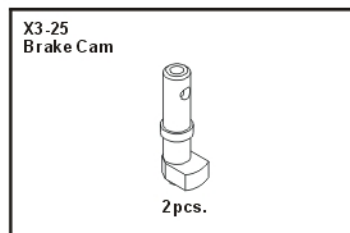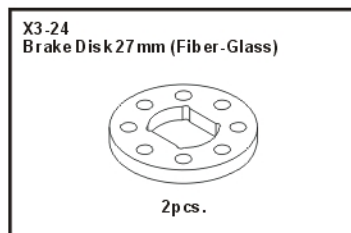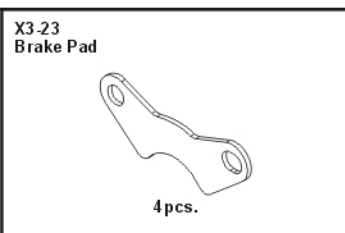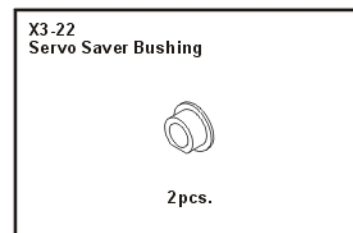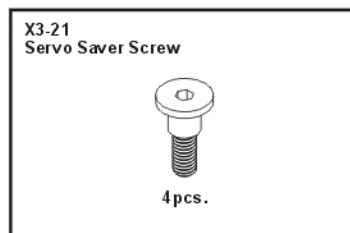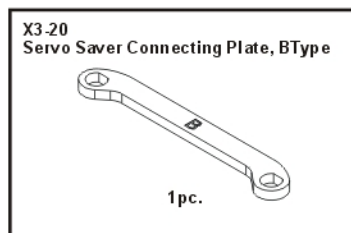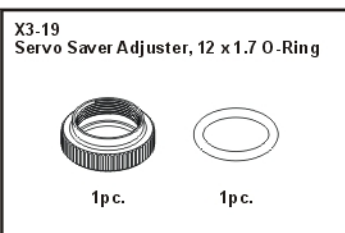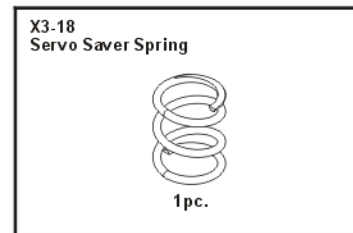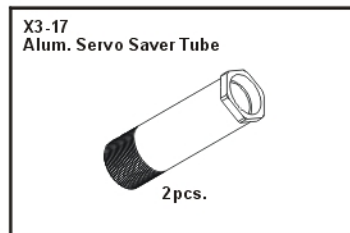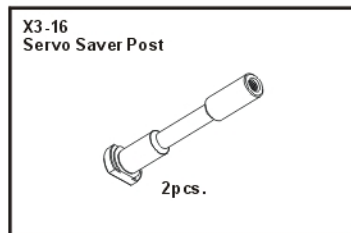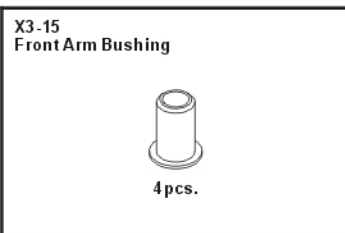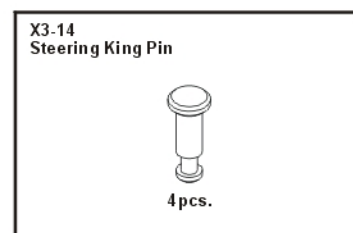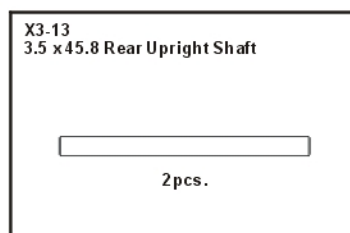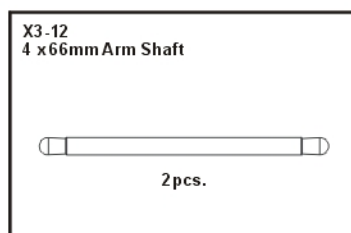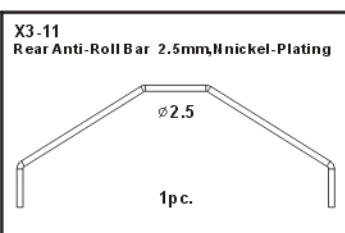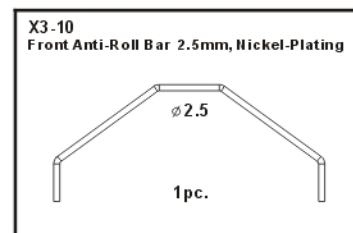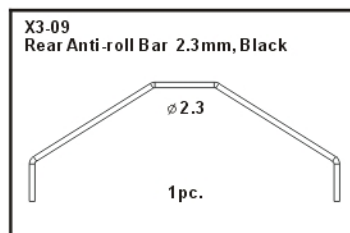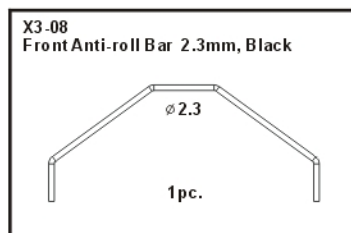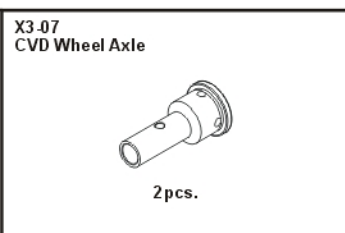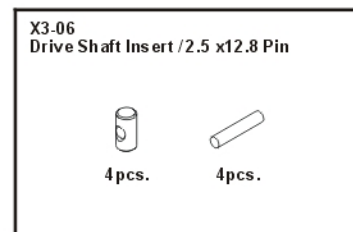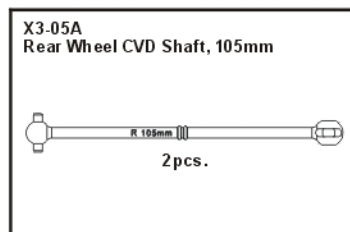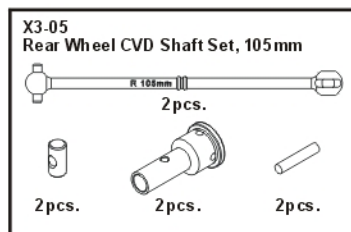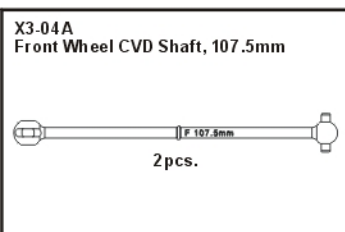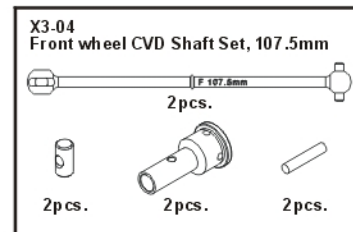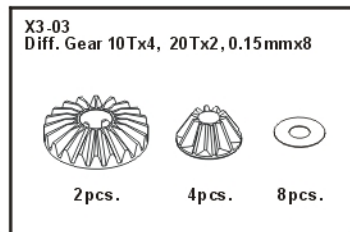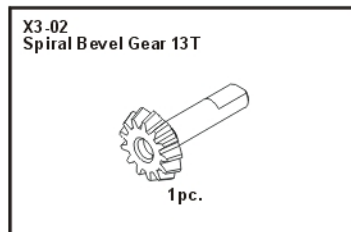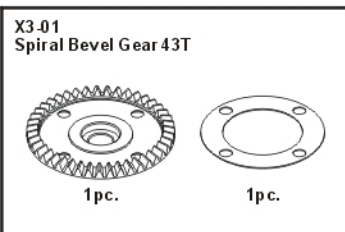


# PARTS REFERENCE 零件圖

**X3-31**  
7x8.5mm Ball & Socket




4pcs.

**X3-32**  
7x12mm Ball & Socket




4pcs.

**X3-33**  
Hex 4mm Ball & Socket




2pcs.

**X3-34**  
2.5x11.8 Pins




10pcs.

**X3-35**  
2.5x12.8 Pin




10pcs.

**X3-36**  
Brake Linkage Rod 1.8 x 95 mm




1pc.

**X3-37**  
Engine Mount L.R (Black)

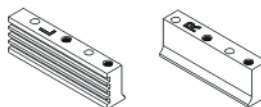


1pc. 1pc.

**X3-38**  
Diff Gasket 31x20x0.3

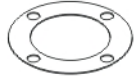


3pcs.

**X3-39**  
4x8mm Engine Mount Screw




4pcs.

**X3-40**  
4x10mm Set Screw, Round Head




4pcs.

**X3-41**  
X3S PC Body, Clear

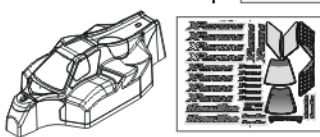


1pc. 1pc.

**X3-42**  
X3S Fuel Tank

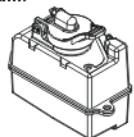


1pc.

**X3-43**  
Diff. Case (F&R)

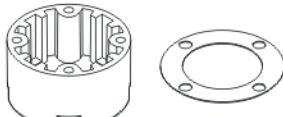


1pc. 1pc.

**X3-44**  
Gear Case

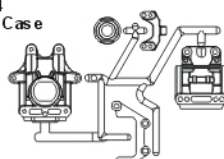


1pc.

**X3-45**  
Front Lower Arms L,R

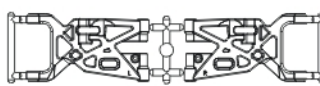


1pc.

**X3-46**  
Suspension Eccentric Bushing

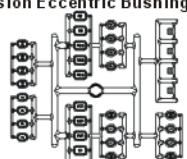


1pc.

**X3-47**  
Steering Knuckle Arm L,R




1pc.

**X3-48**  
Front C Hub L,R

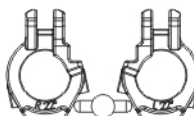


1pc.

**X3-49**  
Body Post/Center Brace

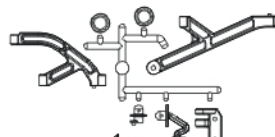


1pc.

**X3-50**  
Plastic Rod End

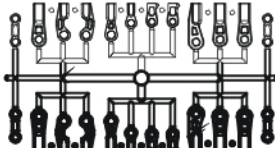


1pc.

**X3-51**  
Servo Saver Set/Front Top Deck

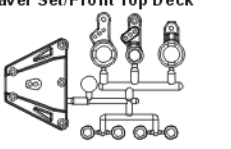


1pc.

**X3-52**  
Front Bumper/Rear Mud Deflectors

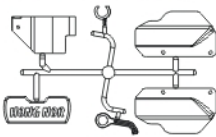


1pc.

**X3-53**  
Rear Lower Arms L,R

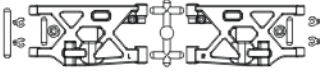


1pc.

**X3-54**  
Rear Hub Carrier L,R

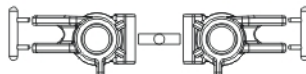


1pc.

**X3-55**  
Rear Wing Mount

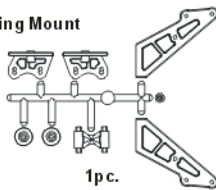


1pc.

**X3-56**  
Center Diff Holder Part

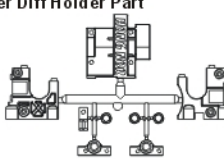


1pc.

**X3-57**  
Side Guard L,R

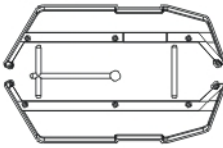


1pc.

**X3-58**  
Receiver/Battery Box

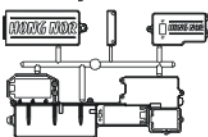


1pc.

**X3-59**  
Throttle/Steering Level Set

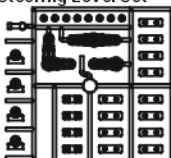


1pc.

**X3-60**  
1/8 Air Filter /Foam

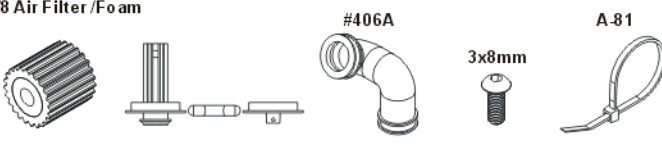

1pc. 1pc. #406A 1pc. 3x8mm 1pc. A-81 2pcs.


**X3-60A**  
Air Filter Foam

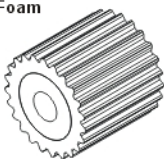

1pc.


# PARTS REFERENCE 零件圖

**X3-61**  
8x14 Ball Bearing











4pcs.

**X3-62**  
13x20 Ball Bearing




4pcs.

**X3-63**  
X3S Screw Bag

	3x5	10 pcs.		3x15	12 pcs.
	3x8	2 pcs.		3x18	10 pcs.
	3x10	8 pcs.		3x20	2 pcs.
	3x12	8 pcs.		3x22	2 pcs.


	3x25	2 pcs.		3x8	10 pcs.		3x35	4 pcs.
	3x35	2 pcs.		3x10	7 pcs.		4x12	8 pcs.
	4x15	1 pc.		3x15	6 pcs.		4x16	4 pcs.
	4x18	4 pcs.		3x16	2 pcs.			

**X3S-01**  
CNC 7075 -3mm Lightweight Chassis

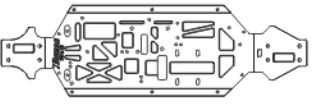


1pc.

**X3S-02**  
CNC 7075-5mm Front Shock Tower




1pc.

**X3S-03**  
CNC 7075 -5mm Rear Shock Tower




1pc.

**X3S-04**  
Diff. Cap Joint (Lightweight)






2 pcs.


**X3S-05**  
CNC 7075 Chassis Brace (Front/Rear)






1pc. 1pc.

	3x12	1pc.		3x10	4 pcs.		3mm	5 pcs.
--	------	------	--	------	--------	--	-----	--------


**X3S-05A**  
CNC 7075 Chassis Brace (Front)





1pc.

	3x12	1pc.		3x10	2 pcs.		3mm	3 pcs.
--	------	------	--	------	--------	--	-----	--------


**X3S-05B**  
CNC 7075 Chassis Brace (Rear)



1pc.


	3x10	2 pcs.		3mm	2 pcs.
--	------	--------	--	-----	--------

**X3S-06**  
CNC 7075 Suspension Holder,FF




1pc.

**X3S-07**  
CNC 7075 Suspension Holder,FR

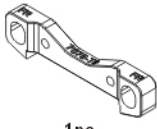


1pc.

**X3S-08**  
CNC 7075 Suspension Holder,RF

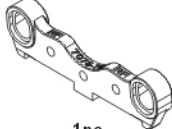


1pc.

**X3S-09**  
CNC 7075 Suspension Holder,RR

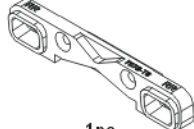


1pc.

**X3S-10**  
Center CVD Cap Joint






1pc.

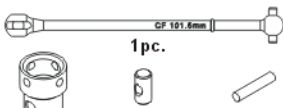
**X3S-11**  
Center CVD Shaft Set, Front, 101.5mm



1pc.


	1pc.		1pc.		1pc.
---	------	---	------	---	------

**X3S-11A**  
Center CVD Shaft, Front, 101.5mm






1pc.

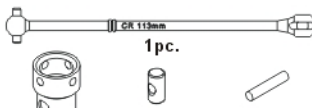
**X3S-12**  
Center CVD Shaft Set, Rear, 113mm



1pc.


	1pc.		1pc.		1pc.
---	------	---	------	---	------

**X3S-12A**  
Center CVD Shaft, Rear, 113mm





1pc.


**X3S-13**  
Alum. Chassis Brace Mount **OPT**






1pc.

	4x20	1pc.		1pc.
---	------	------	---	------

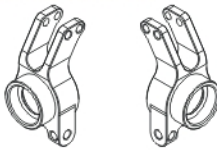










**X3S-14**  
Alum. Rear Hub Carrier L.R **OPT**



 1pc. 1pc.

	4mm	4 pcs.		8x16x5	2 pcs.		13x20x4	2 pcs.
---	-----	--------	---	--------	--------	---	---------	--------

**SYMBOLS USED THROUGHOUT THE INSTRUCTION MANUAL**  
說明書附註使用標示


 <b>Parts Bag Used</b> 使用零件包裝袋	 <b>Degrease with Motor Spray</b> 使用清潔噴劑	 <b>Do Not Over Tighten</b> 請勿鎖緊物件	 <b>Tighten</b> 鎖緊物件	 <b>Ensure Free Movement</b> 確定可自由活動	 <b>Contact Adhesive</b> 使用強力打接著劑
 <b>Apply Screw Cement</b> 使用螺絲膠	 <b>Apply Oil</b> 塗上潤滑油	 <b>Apply Lubricant</b> 塗上潤滑黃油	 <b>1:1</b> True-To-Scale 1:1 原寸圖	 <b>Time</b> 時間	 <b>Pay attention here</b> 注意事項

# 1 ASSEMBLY OF THE FRONT AND REAR DIFF. 前後差速齒輪組合




Build two differentials for front and rear.  
請組合兩個差速器為前後使用。


Step 1

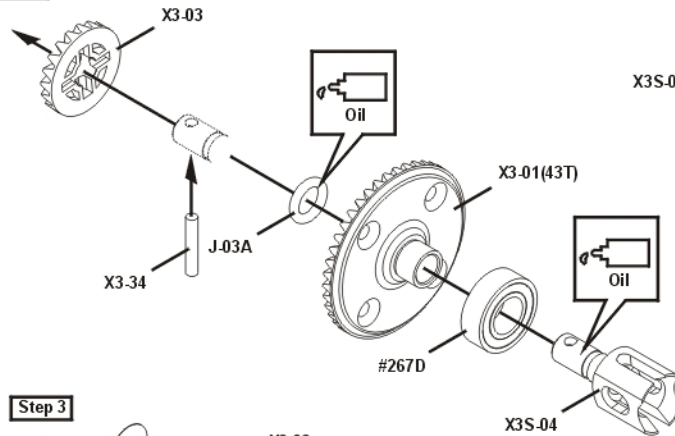


Step 3

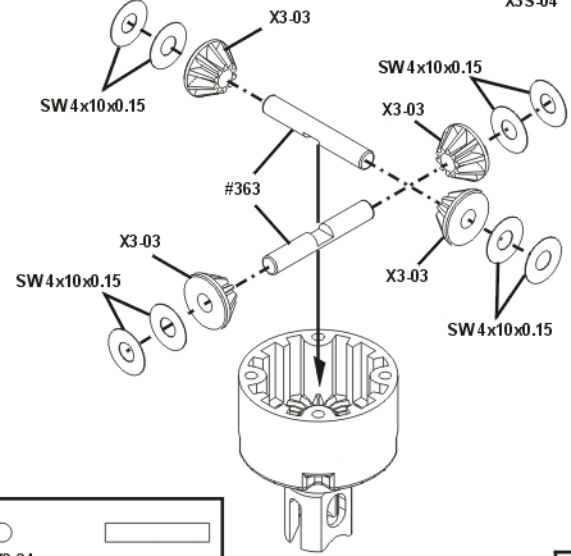

Step 4






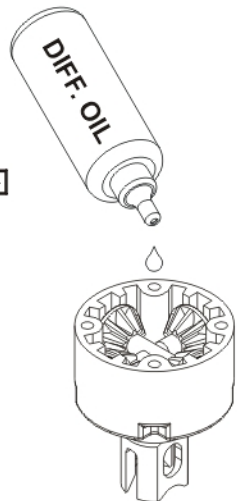


Step 5

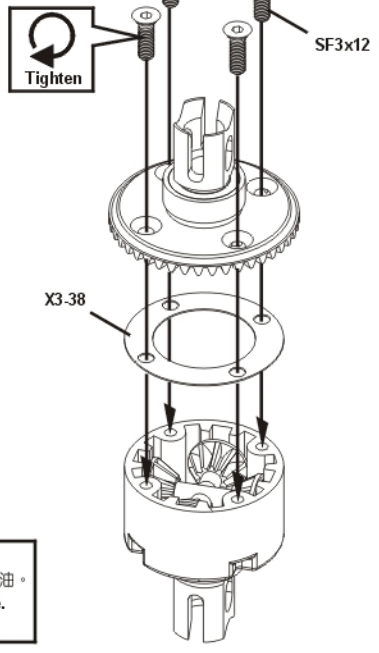

- Use the Diff. Oil #7000 for front and #2000 for rear.  
前差速器請使用 #7000 差速油，後差速器請使用 #2000 差速油。
- Use White Oil pen mark front diff. case and rear diff. case.  
使用白色油漆筆標記前差速殼與後差速殼。

 - X3-34  
2.5x11.8mm Pin .....x4  
滾針
- J-03A  
P6 O-Ring .....x4  
P6 O環
- #267D  
8x16x5mm  
Ball Bearing .....x4  
培林
- SW 4x10x0.15  
4x10x0.15mm  
Washer .....x16  
墊片
- #363  
4mm Alim. Cross Pin .....x4  
4mm 鉛十字軸心
- SF3x12mm  
Flat Head Hex Screw .....x8  
皿頭內六角螺絲

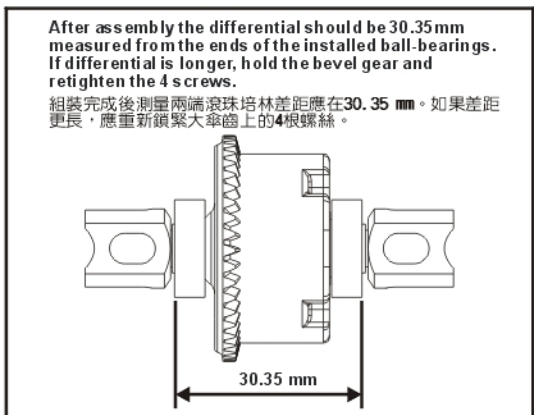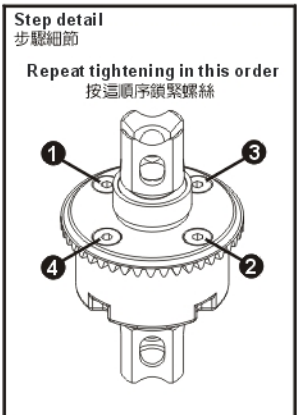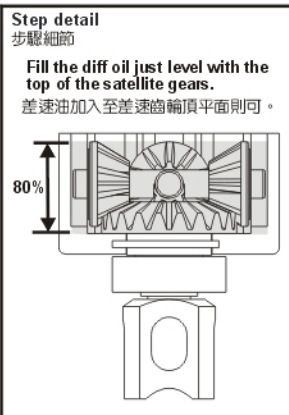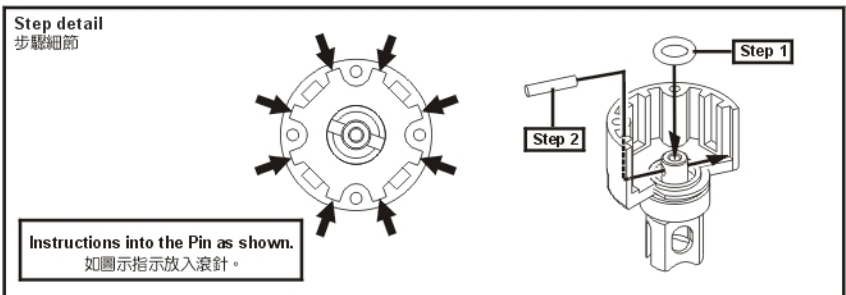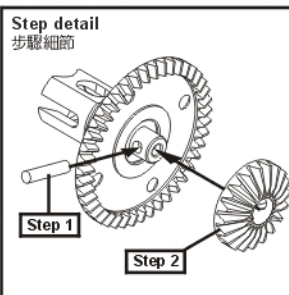





# 2 ASSEMBLY OF THE CENTER DIFF.


中央差速齒輪組合



Step 1

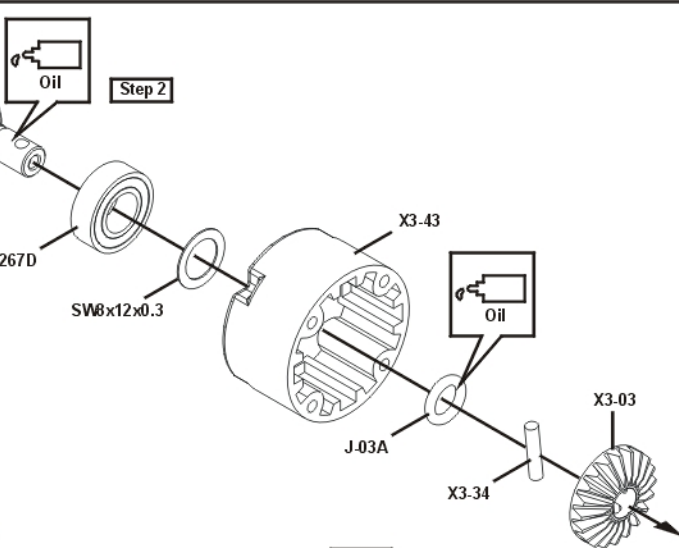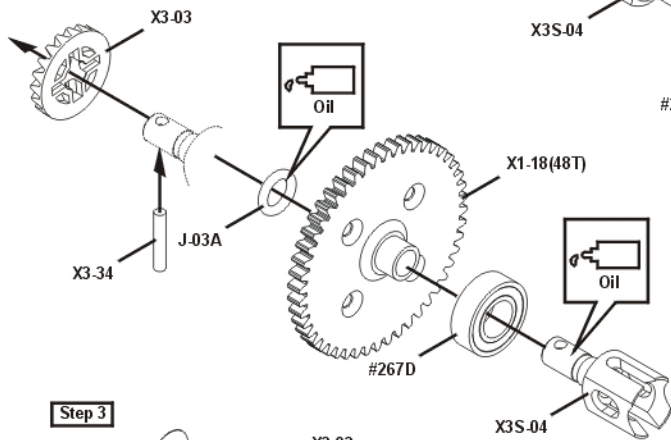


Step 3

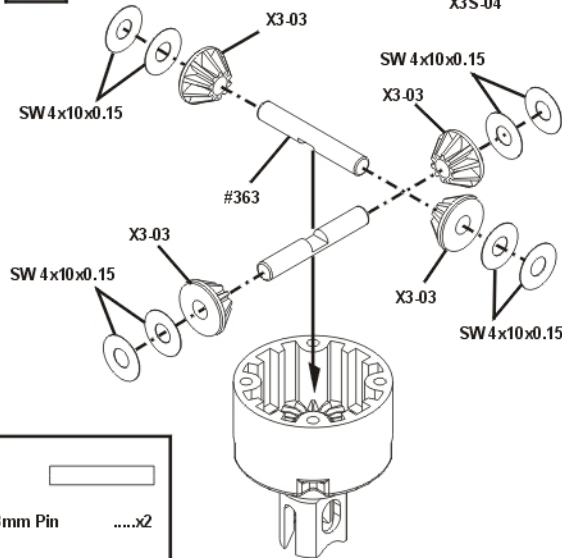

Step 4









Step 5

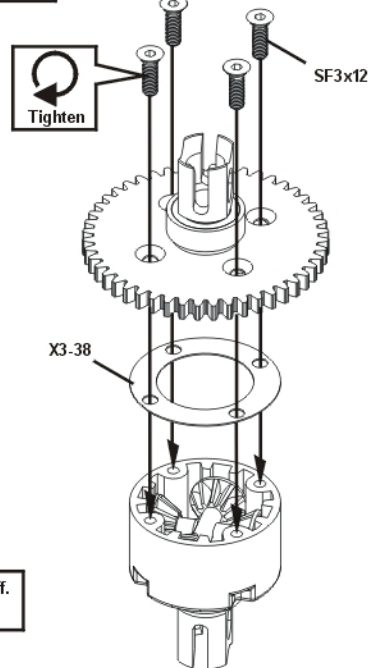

Use the Diff. Oil #5000 for the center diff.  
中差速器請使用 #5000 差速油。

 - X3-34  
2.5x11.8mm Pin .....x2  
滾針
- J-03A  
P6 O-Ring .....x2  
P6 O環
- #267D  
8x16x5mm Ball Bearing .....x2  
培林
- SW 4x10x0.15  
4x10x0.15mm Washer .....x8  
墊片
- SW8x12x0.3mm  
Washer .....x1  
墊片
- #363  
4mm Alum. Cross Pin .....x2  
4mm 鋁十字軸心
- SF3x12mm  
Flat Head Hex Screw .....x4  
皿頭內六角螺絲

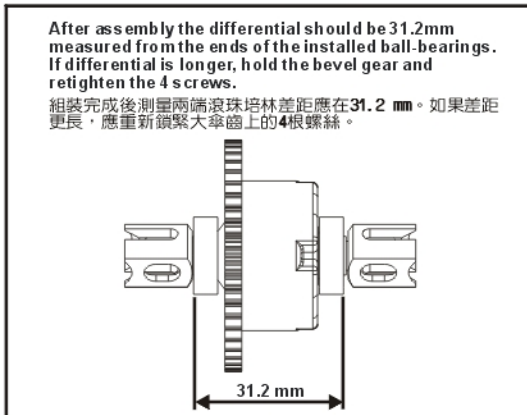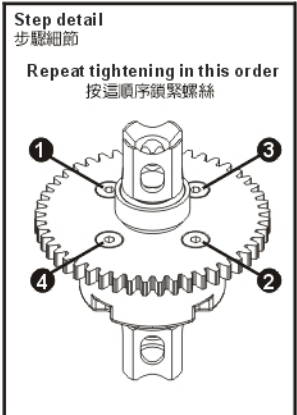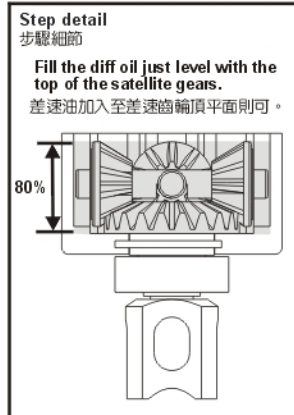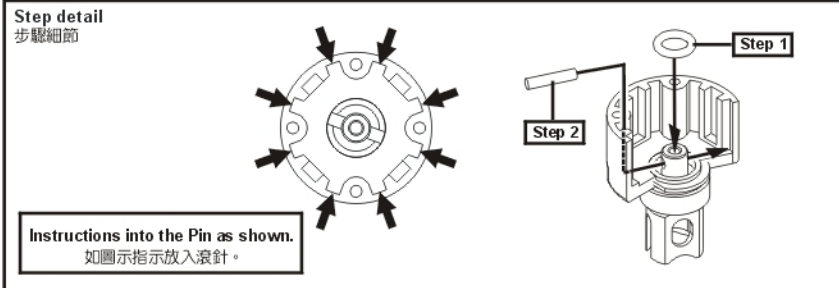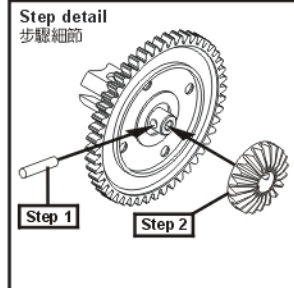


### 3 ASSEMBLY OF THE CENTER/FRONT CVD SHAFT

中央前CVD傳動軸組合



NO.2

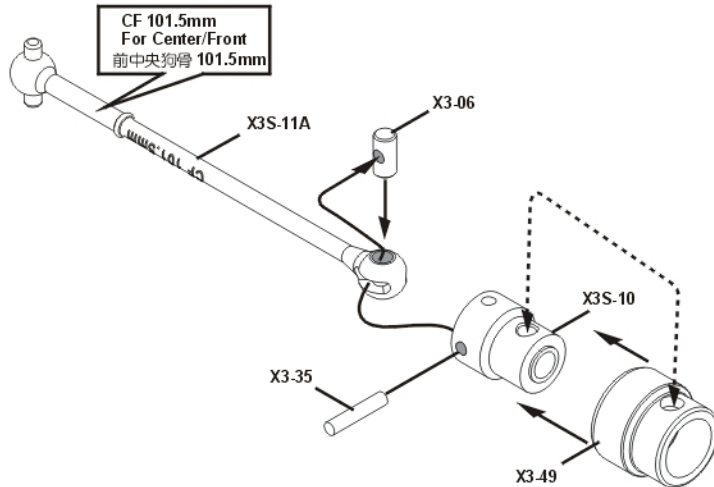

X3-35	2.5x12.8mm Pin	.....x1
	滾針	



### 4 ASSEMBLY OF THE FRONT GEAR CASE

前齒輪箱組合



NO.2

SW2.6x6x0.5mm	Washer	.....x1
	墊片	
E-43	5x11x4mm	Ball Bearing
	培林	.....x2
SB2.5x5mm	Hex Screw	.....x1
	丸頭內六角螺絲	

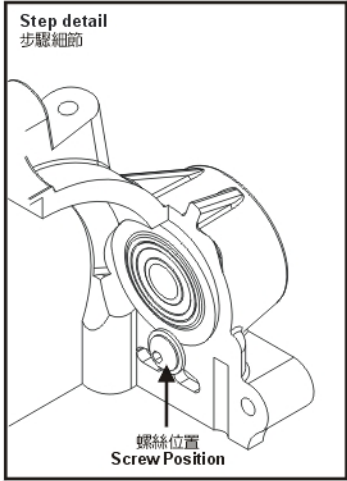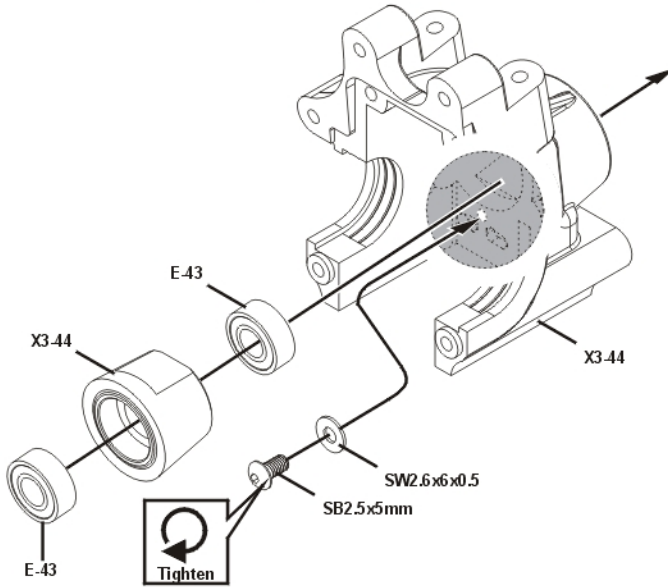


### 5 ASSEMBLY OF THE FRONT PINION GEAR AND CVD SHAFT

前小傘齒與CVD傳動軸組合



NO.2

SW5x8x0.3mm	Washer	.....x1
	墊片	
SS4x6mm	Set Screw	.....x1
	止付螺絲	

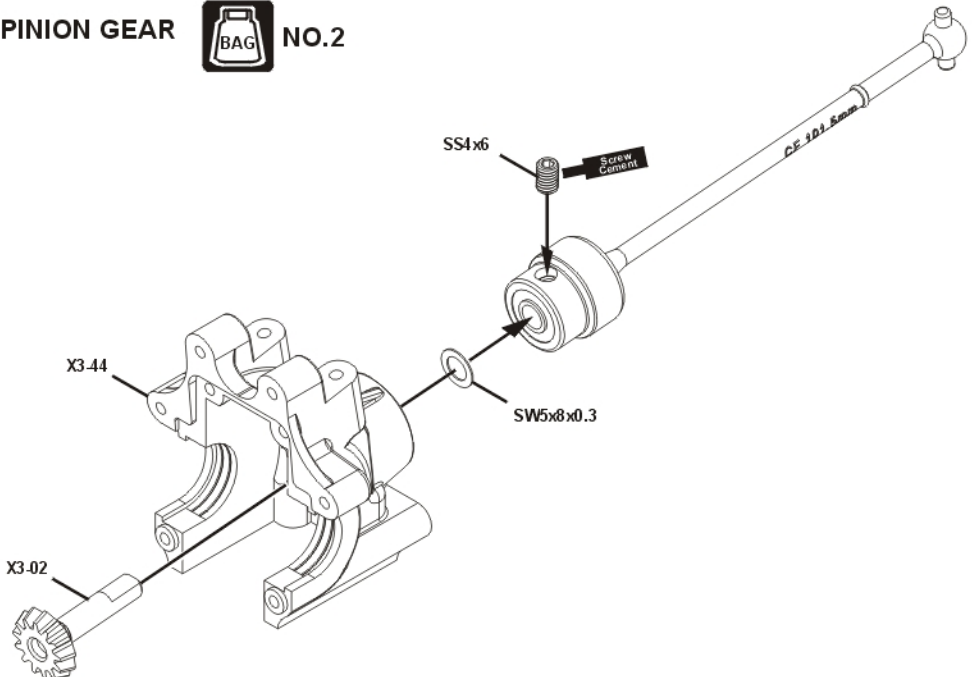


## 6 ASSEMBLY OF THE FRONT DIFFERENTIAL INTO GEAR CASE

前差速器與齒輪箱組合



NO.1

Adjust the backlash with the Shims.  
請使用墊片調整間隙。

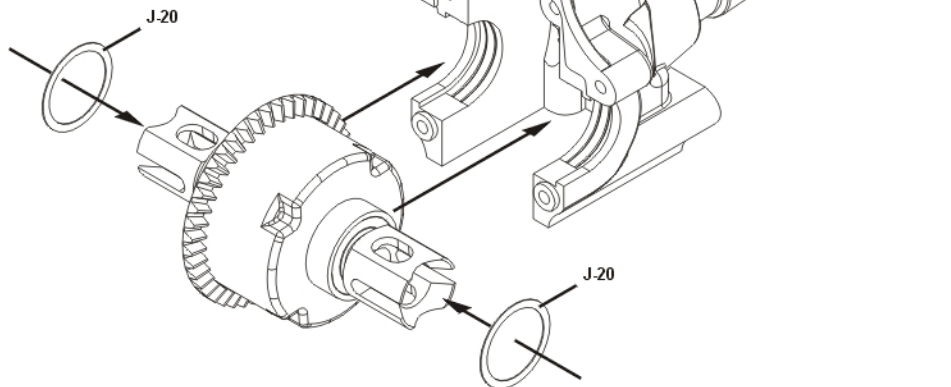

J-20  
13x16x0.2mm  
Shim  
墊片 .....x2

## 7 ASSEMBLY OF THE FRONT GEAR CASE COVER


前齒輪箱蓋組合



NO.2

SF3x15mm  
Flat Head Hex Screw .....x2  
平頭內六角螺絲

SB3x35mm  
Hex Screw .....x2  
半圓內六角螺絲

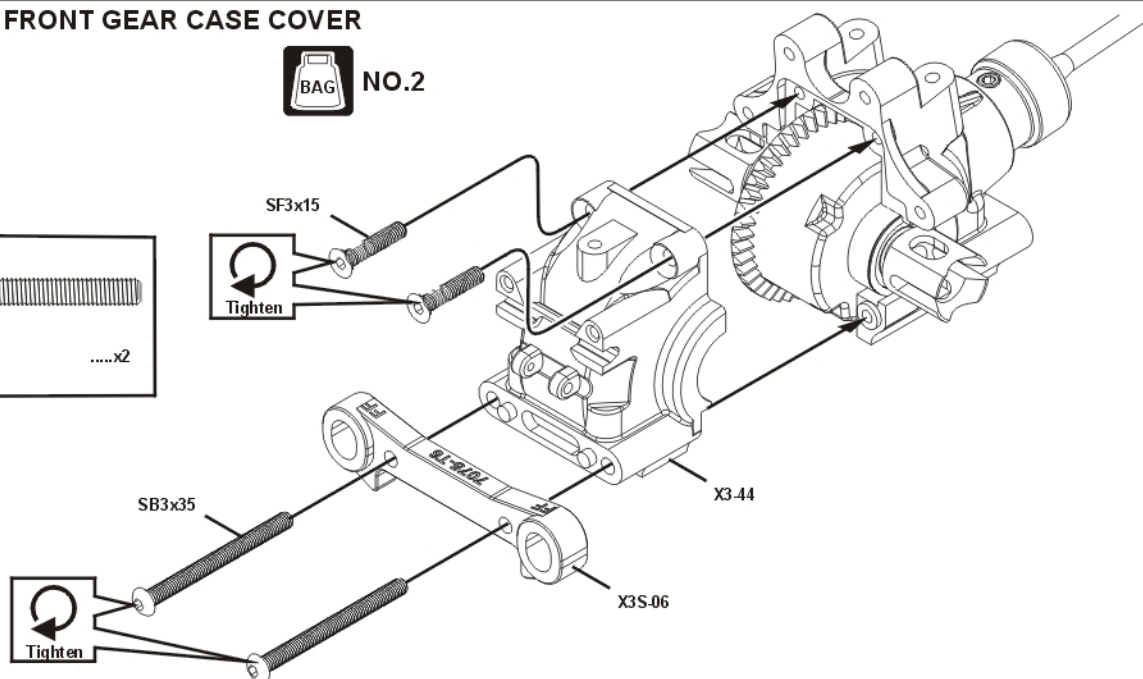


## 8 ASSEMBLY OF THE FRONT SHOCK STAY

前油壓架組合



NO.9


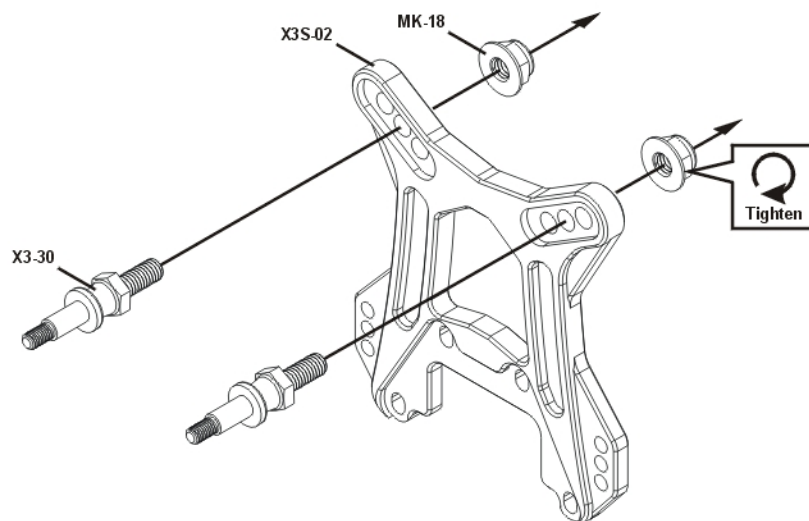


MK-18  
4mm  
Nylon Nut  
尼龍螺帽 .....x2

## 9 ASSEMBLY OF THE FRONT SHOCK STAY ONTO GEAR CASE

前油壓架與齒輪箱組合

**BAG** NO.2

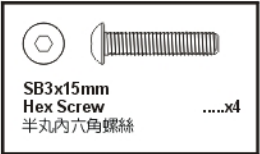
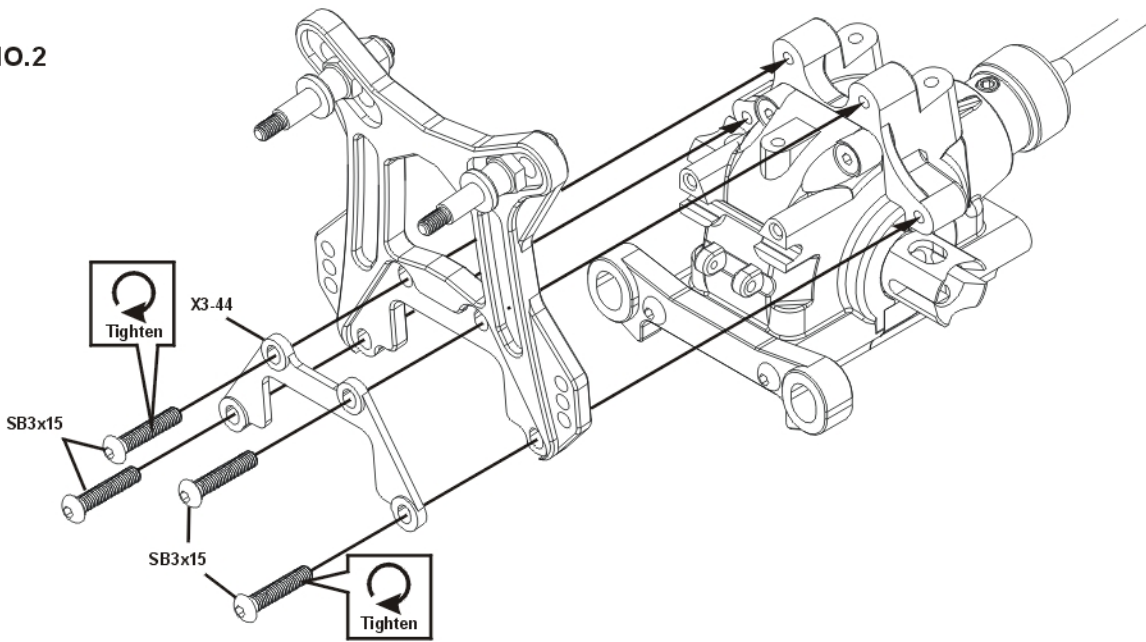


## 10 ASSEMBLY OF THE FRONT LOWER ARMS

前齒輪箱組合

**BAG** NO.2




Assemble both right and left sides.  
請組合左/右兩側。

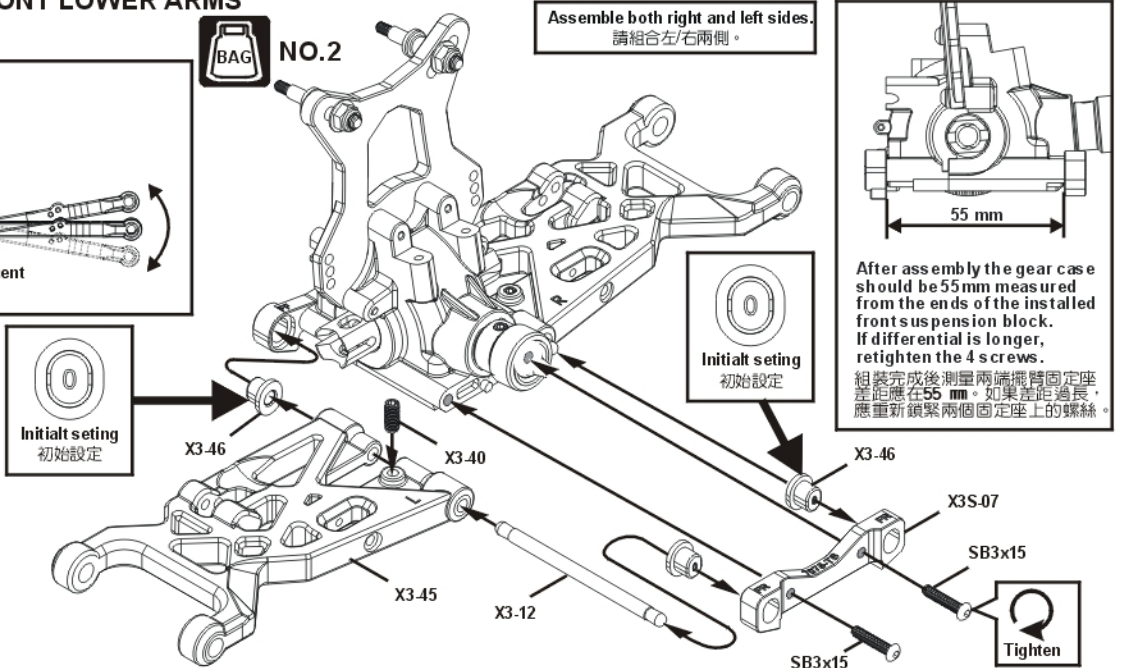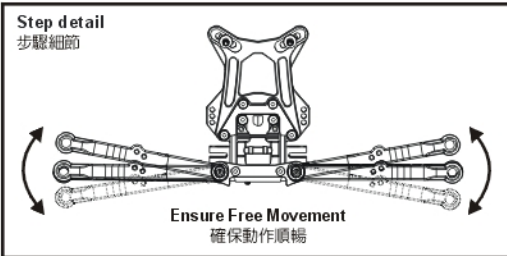

## 11 ASSEMBLY OF THE FRONT STABILIZER ROD

前平衡桿組合

**BAG** NO.2

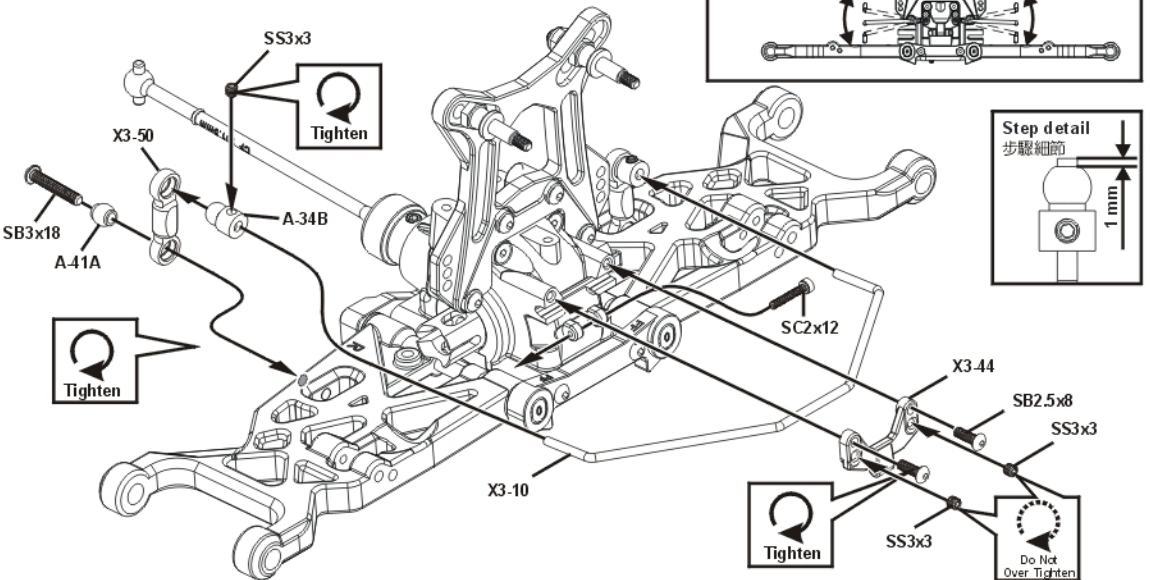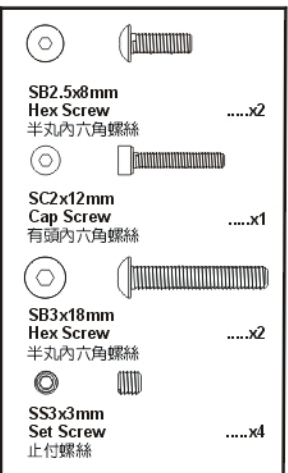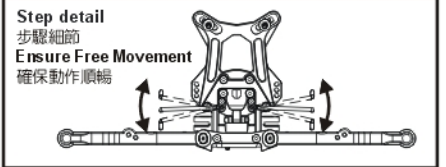

## 12 ASSEMBLY OF THE FRONT KNUCKLE ARMS

### 轉向座組合

**BAG NO.2**

**LEFT SIDE 左側**

**Step 1**

**Step 2**

**Step 3**

**Step detail 步驟細節**

X3-62 13x20x4mm Ball Bearing 培林 .....x2

X3-61 8x14x4mm Ball Bearing 培林 .....x2

SS3x6mm Set Screw 止付螺絲 .....x2

3xmm Nylon Nut 尼龍螺帽 .....x2

X3-48

X1-27

X3-62

X3-47

SNN3

X3-61

X3-14

X3-14

3x6

Sst Screw position 止付螺絲位置

SS3x6

SS3x6

**Assemble both right and left sides. 請組合左/右兩側。**

## 13 ASSEMBLY OF THE FRONT CVD INTO KNUCKLE ARMS

### 轉向座與CVD傳動軸組合

**BAG NO.2**

**LEFT SIDE 左側**

**Assemble both right and left side. 請組合左/右兩側。**

X3-35 2.5x12.8mm Pin 滾針 .....x2

#267E 2.5x16.8mm Pin 滾針 .....x2

SS4x4mm Set Screw 止付螺絲 .....x2

F 107.5mm For Front 前CVD狗骨 107.5mm

X3-04A

X3-06

X3-35

X3-07

X1-26

#267E

SS4x4

**Tighten**

**Right side 右側**

## 14 ASSEMBLY OF THE KNUCKLE ARMS ONTO FRONT LOWER ARMS

### 組合前轉向座至下擺臂

**BAG NO.2**

**Assemble both right and left sides. 請組合左/右兩側。**

**Step detail 步驟細節**

4x18mm Hex Screw 半丸內六角螺絲 .....x4

SB4x18

X3-15

X3-15

SB4x18

X3-15

**Do Not Over Tighten**

**Do Not Over Tighten**

**Ensure Free Movement 確保動作順暢**

# 15 ASSEMBLY OF THE FRONT UPPER ARMS

前上拉桿組合

**BAG** NO.2


Assemble both left and right sides.  
請組合左/右兩側。

LEFT SIDE  
左側

**X3-32**  
7x12mm Ball  
7x12mm 球型座 .....x2

**G-25**  
7mm Ball  
球型 .....x2

**G-26**  
5x35mm Turnbuckle  
正反牙桿 .....x2

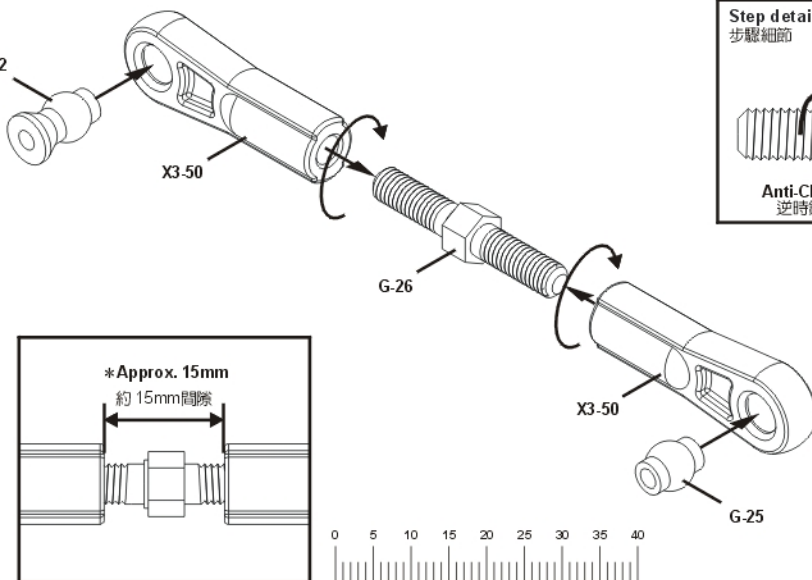

**Step detail**  
步驟細節

Note the locking direction!  
注意鎖緊方向!

Anti-Clockwise  
逆時鐘反牙

Clockwise  
順時鐘正牙

**Step detail**  
步驟細節

Use tools to tighten as shown.  
如圖示使用工具鎖緊。

# 16 ASSEMBLY OF THE FRONT UPPER ARMS

前上拉桿組合

**BAG** NO.2


Assemble both right and left sides.  
請組合左/右兩側。

LEFT SIDE  
左側

**SNN3mm**  
Nylon Nut  
尼龍螺帽 .....x4

**SB3x25mm**  
Hex Screw  
半丸內六角螺絲 .....x2

**SB3x20mm**  
Hex Screw  
半丸內六角螺絲 .....x2

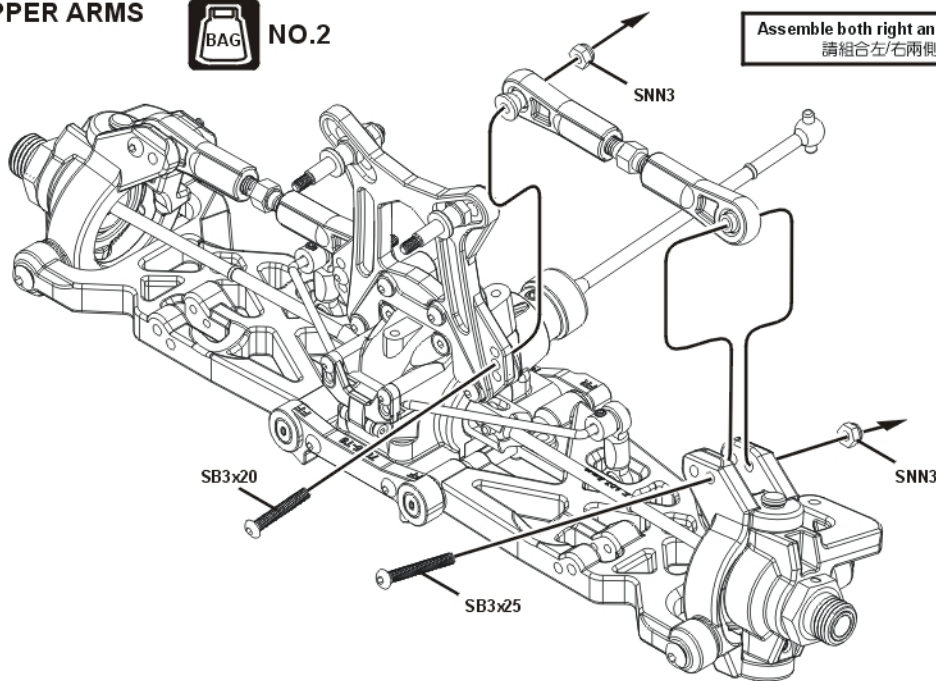

# 17 ASSEMBLY OF THE SERVO SAVER

緩衝組組合


**BAG** NO.3

Servo saver spring preload.  
緩衝組彈簧預留

**X3-21**  
Steering Plat Hex Screw  
緩衝組螺絲 .....x2



**X3-19**  
12x1.7mm O-Ring  
12x1.7mm O環 .....X1

**SNN3mm**  
Nylon Nut  
尼龍螺帽 .....x3

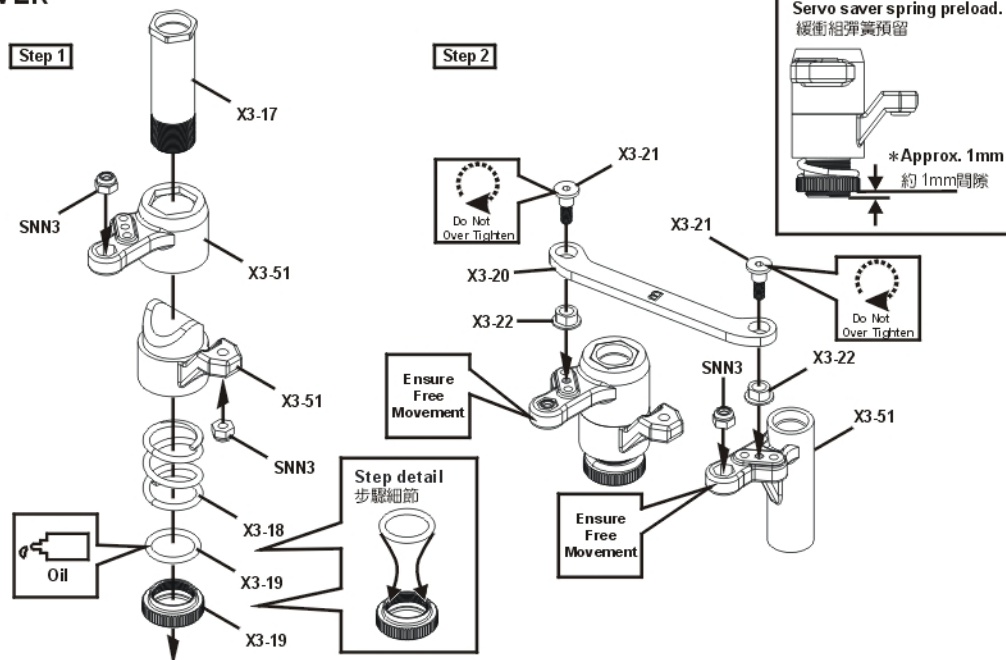

## 18 ASSEMBLY OF THE FRONT PLATE ONTO SERVO SAVER

緩衝組與前三角板組合




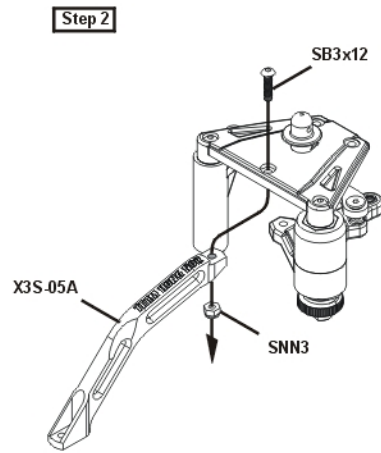
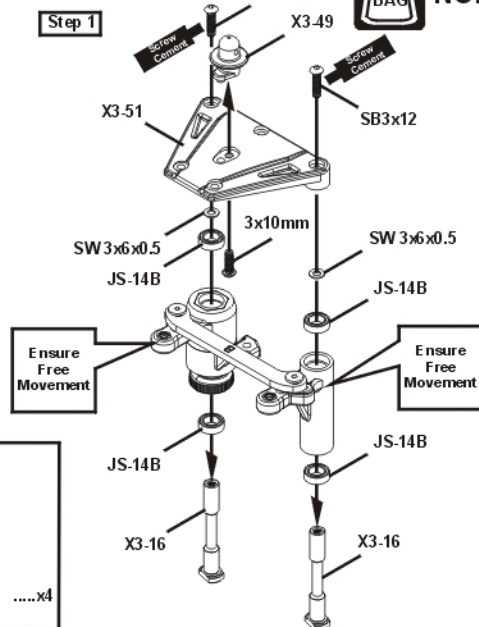


## 19 ASSEMBLY OF THE STEERING TIE-ROD

轉向拉桿組合





Make two steering rods for left and right hand sides.  
請裝備左邊和右邊2支轉向拉桿。

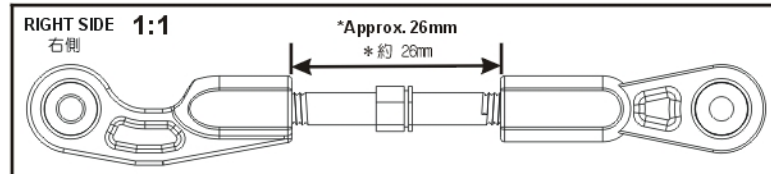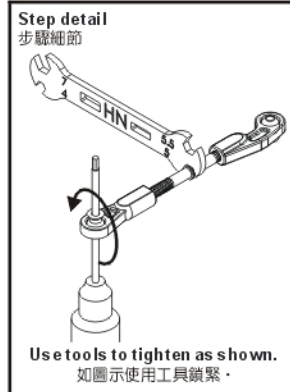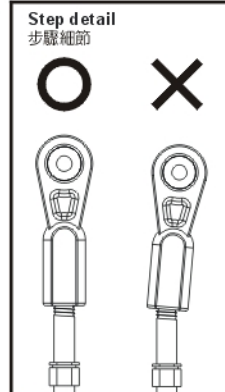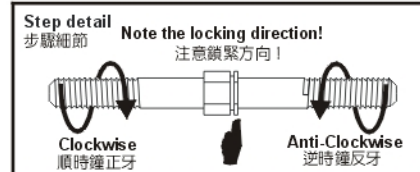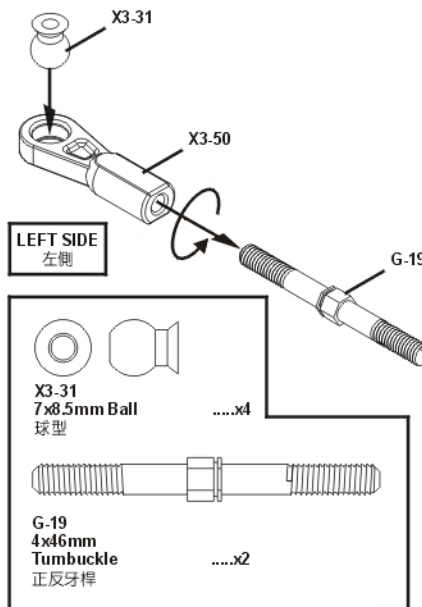


## 20 ASSEMBLY OF THE STEERING TIE-ROD


轉向拉桿組合

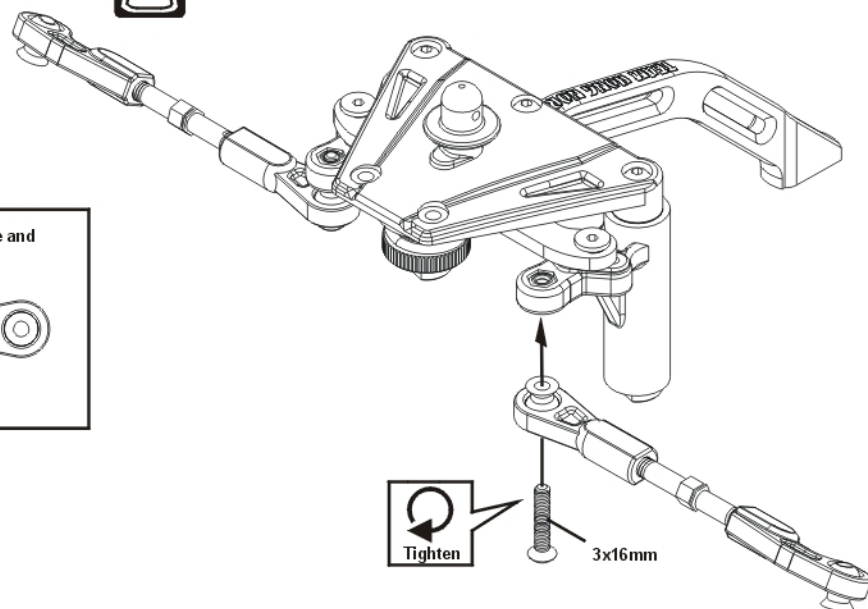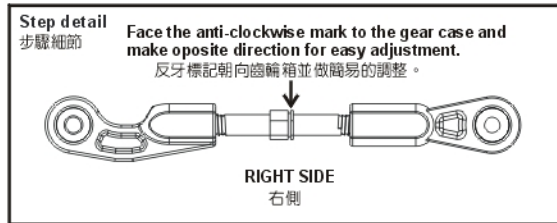

**21 ASSEMBLY OF THE SERVO ONTO THE FRONT GEAR BOX**  
組合緩衝組至前齒輪箱

**BAG NO.3**

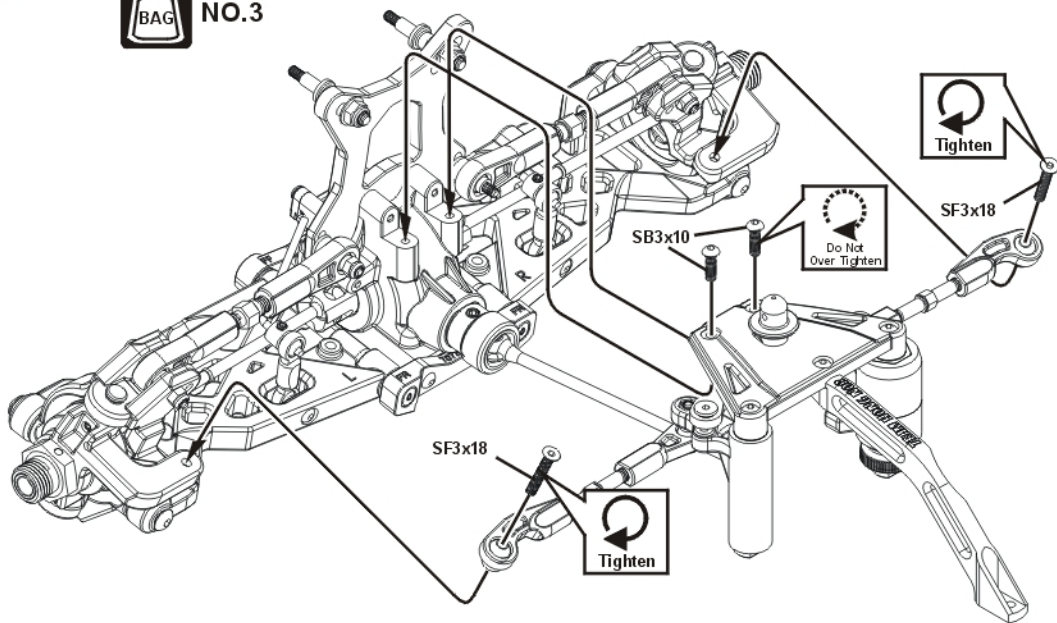



-  SF3x18mm Flat Head Hex Screw ....x2  
皿頭內六角螺絲
-  SB3x10mm Hex Screw ....x2  
半丸內六角螺絲

**22 ASSEMBLY OF THE CENTER/REAR CVD SHAFT**

中央/後CVD傳動軸組合

**BAG NO.4**

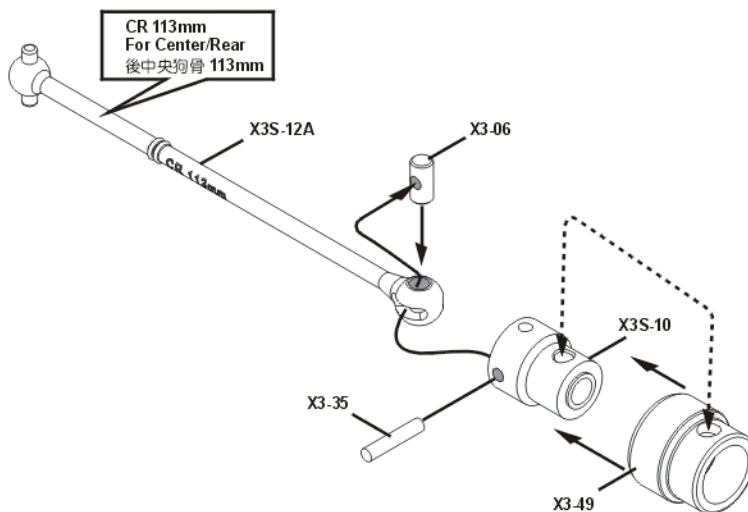





-  X3-35 2.5x12.8mm Pin ....x1  
滾針


**23 ASSEMBLY OF THE REAR GEAR CASE**

後齒輪箱組合

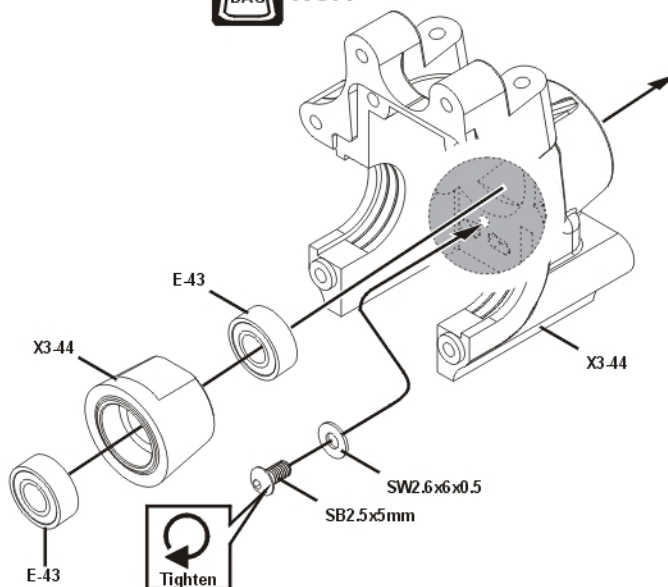**BAG NO.4**





-  SW2.6x6x0.5 Washer ....x1  
墊片
-  E-43 5x11x4mm Ball Bearing ....x2  
培林
-  SB2.5x5mm Hex Screw ....x1  
半丸內六角螺絲

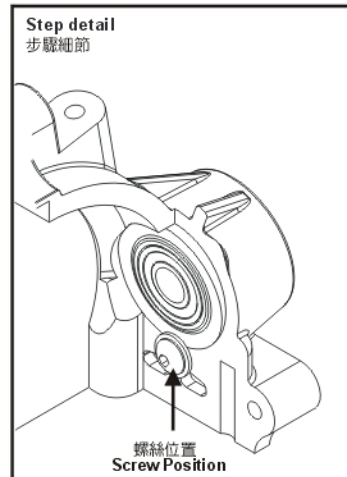



## 24 ASSEMBLY OF THE REAR PINION GEAR AND CVD SHAFT

後小傘齒與CVD傳動軸組合

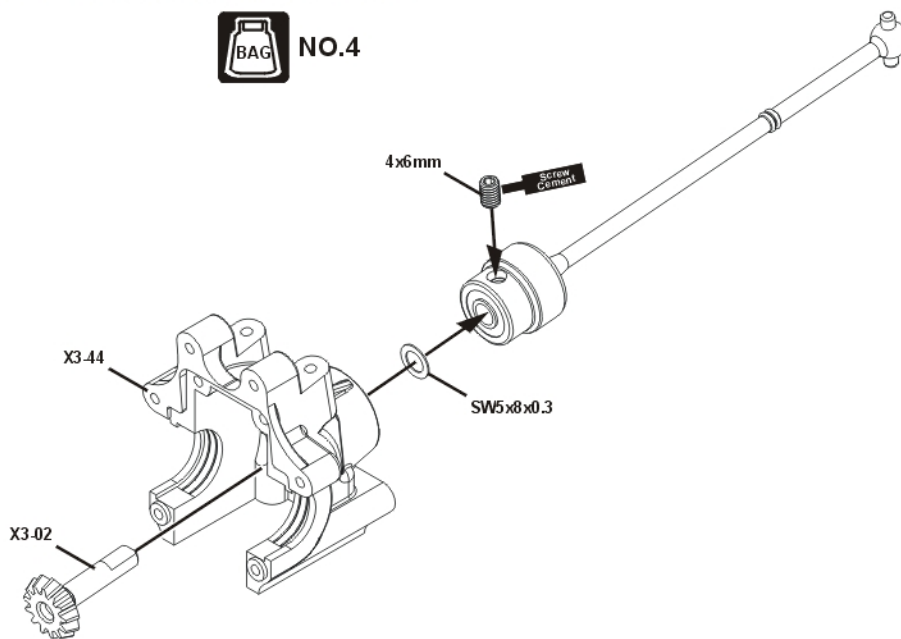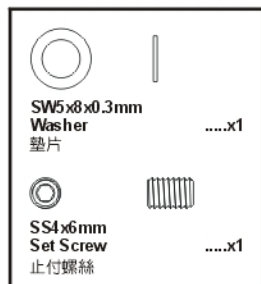


## 25 ASSEMBLY OF THE REAR DIFFERENTIAL ONTO GEAR CASE

後差速器與後齒輪箱組合





Adjust the backlash with the Shims.  
請使用墊片調整間隙。

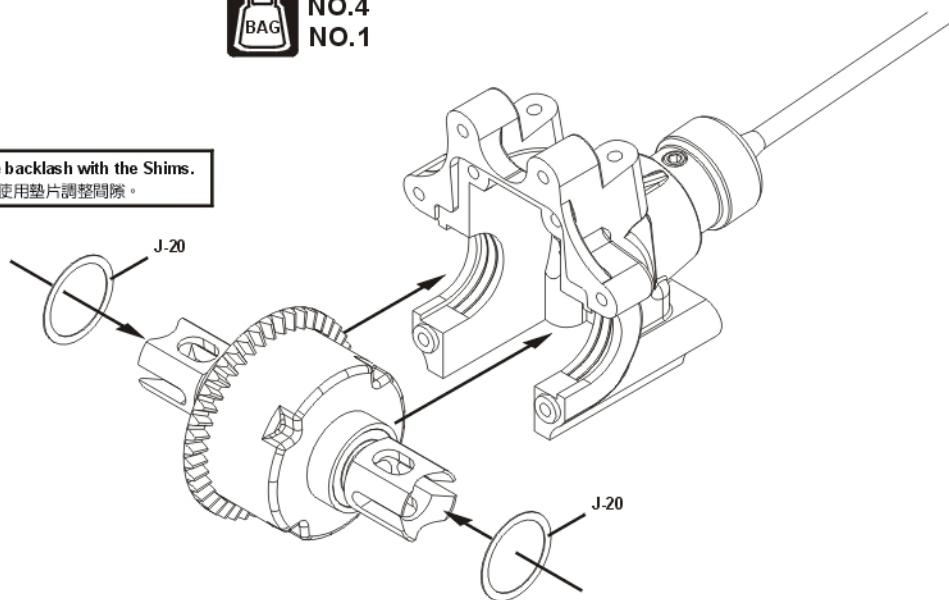

## 26 ASSEMBLY OF THE REAR GEAR CASE COVER AND LOWER ARM HOLDERS


組合後齒輪箱前蓋及後下擺臂固定座

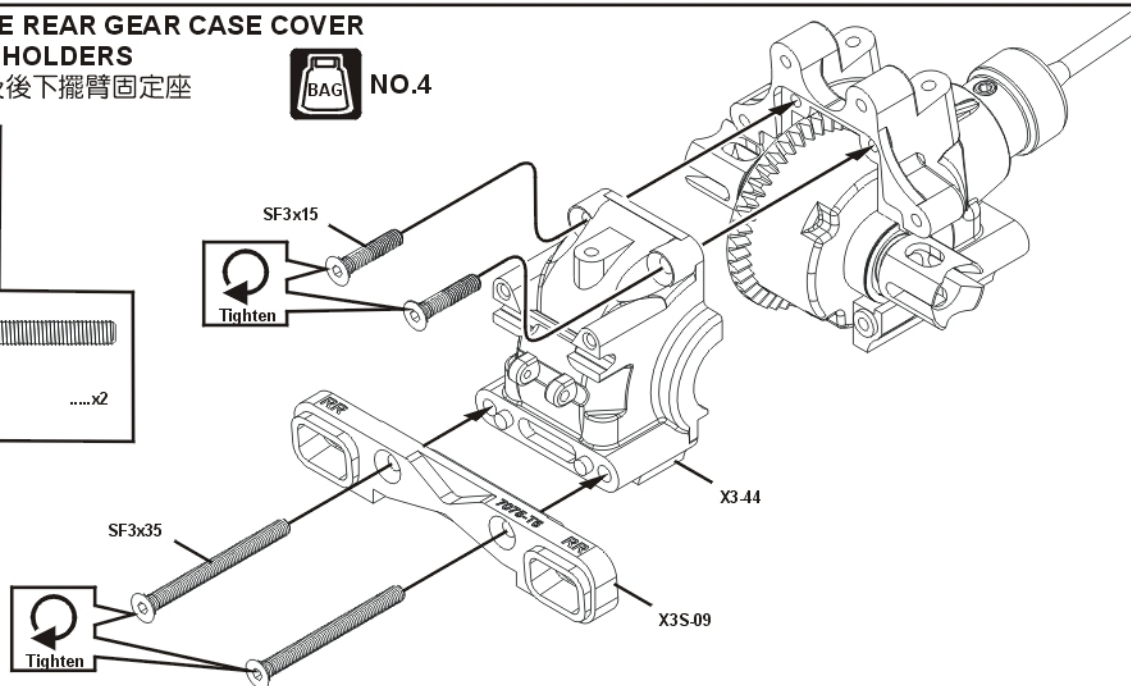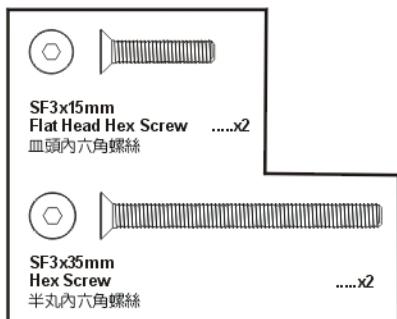

**27 ASSEMBLY OF THE REAR BRACE MOUNT**  
後支撐架座組合

**BAG** NO.2  
NO.4


- SNN4mm Nylon Nut  
尼龍螺帽 .....x1
- SB3x12mm Hex Screw  
半丸內六角螺絲 .....x2

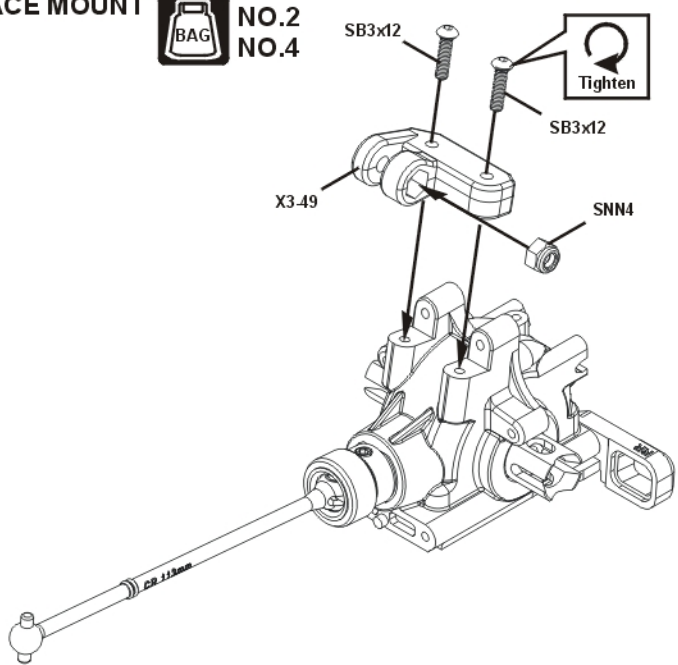

**28 ASSEMBLY OF THE REAR SHOCK STAY**  
後油壓架組合

**BAG** NO.2  
NO.4  
NO.9


- SF3x10mm Flat Head Hex Screw .....x1  
皿頭內六角螺絲
- MK-18 4mm Alum. Nylon Nut  
鋁尼龍螺帽 .....x2

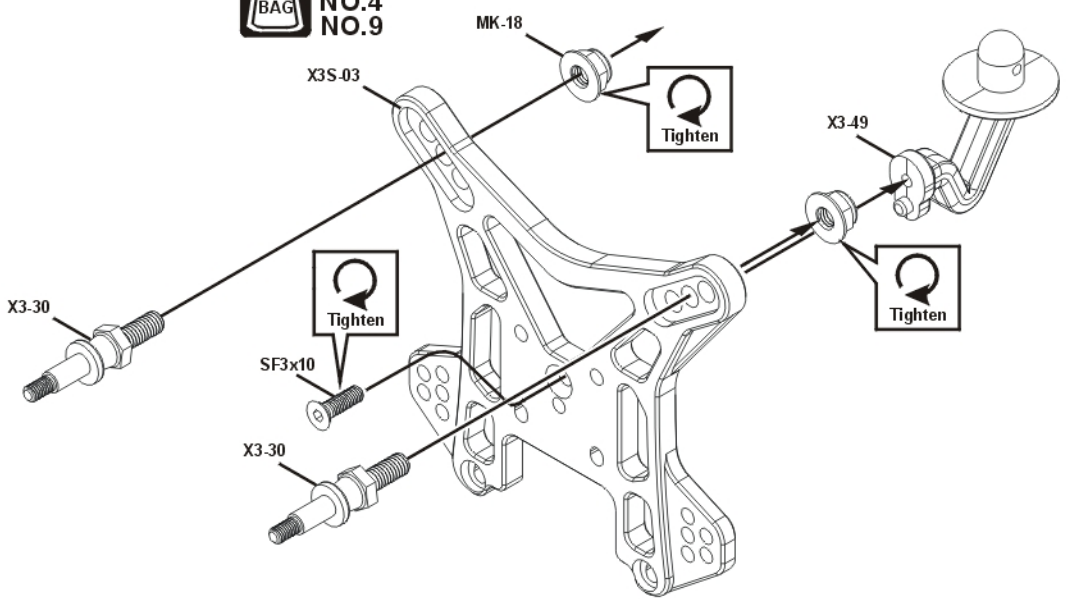

**29 ASSEMBLY OF THE REAR SHOCK STAY ONTO REAR GEAR CASE**  
後油壓架與齒輪箱組合

**BAG** NO.4

- SB3x12mm Hex Screw  
半丸內六角螺絲 .....x2

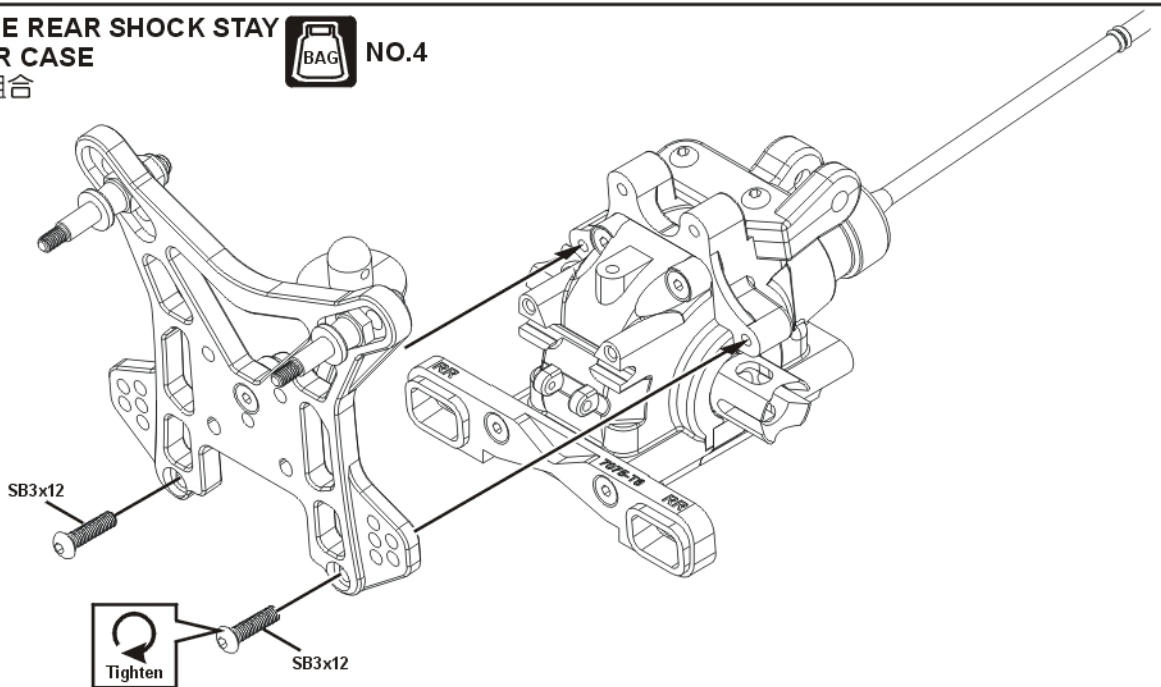


### 30 ASSEMBLY OF THE WING STAY


定風翼架組合

**BAG** NO.4

The angle of the wing mount can become bigger or higher as picture shown.  
定風翼角度如圖示可以裝配位置不同而會有角度及高低變化。

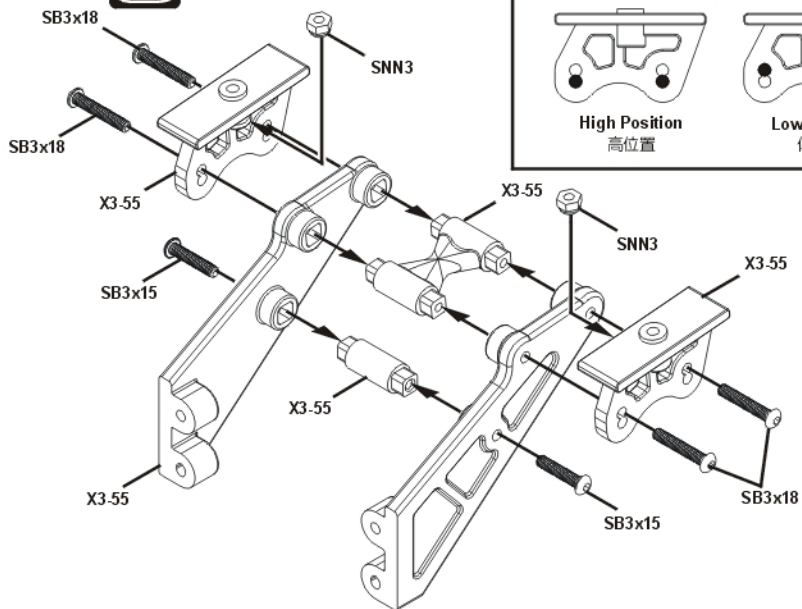


- SNN3mm Nylon Nut 尼龍螺帽 .....x2
- SB3x18mm Hex Screw 半丸內六角螺絲 .....x4
- SB3x15mm Hex Screw 半丸內六角螺絲 .....x2

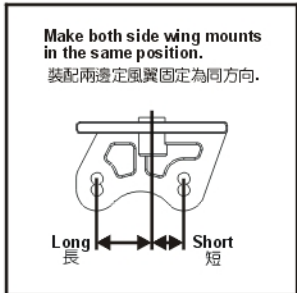

### 31 ASSEMBLY OF THE WNG STAY ONTO SHOCK STAY

定風翼架油壓架組合

**BAG** NO.4

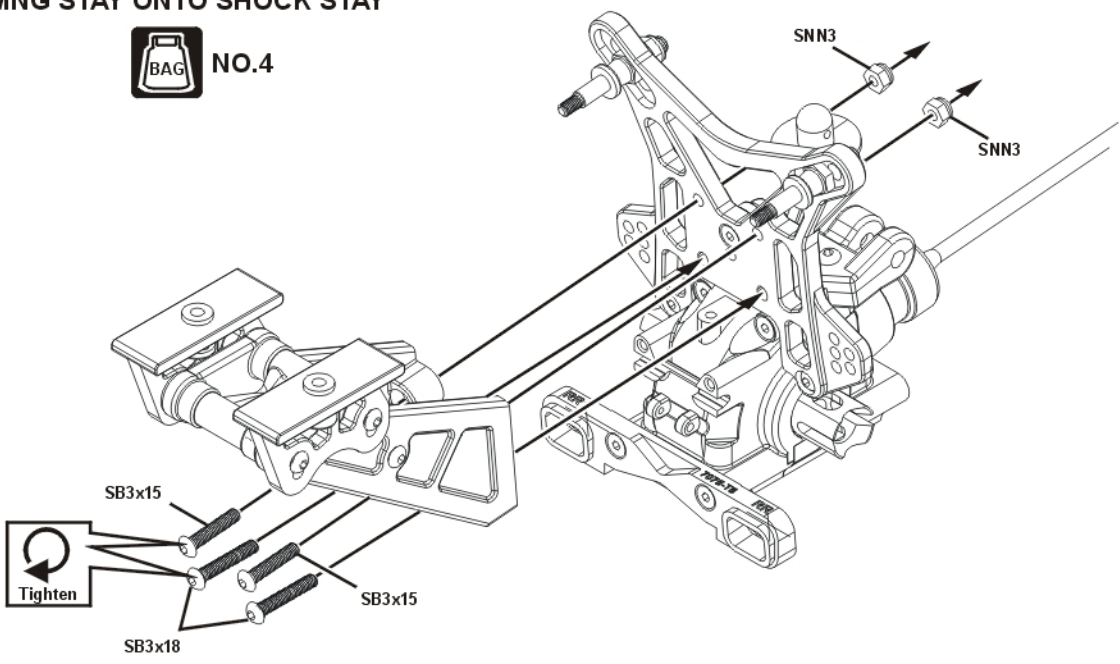




- SNN3mm Nylon Nut 尼龍螺帽 .....x2
- SB3x18mm Hex Screw 半丸內六角螺絲 .....x2
- SB3x15mm Hex Screw 半丸內六角螺絲 .....x2



### 32 ASSEMBLY OF THE REAR LOWER ARMS


後齒輪箱與擺臂組合

**BAG** NO.4

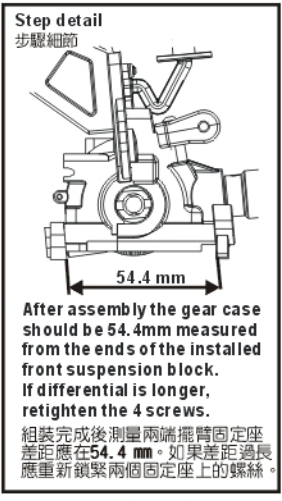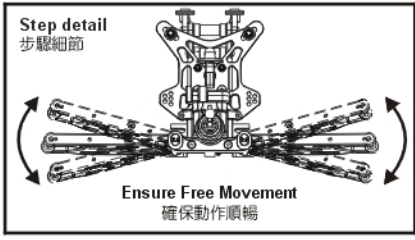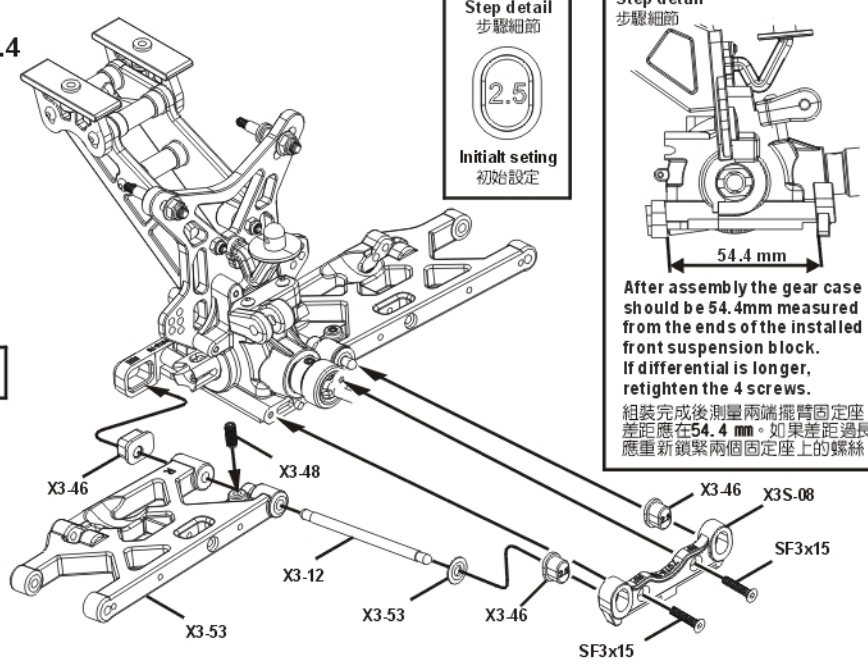

- SF3x15mm Flat Head Hex Screw 平頭內六角螺絲 .....x2
- X3-40 4x10mm Round Head Set Screw 圓頭止付螺絲 .....x2


Assemble both right and left side. 請組合左右兩側。

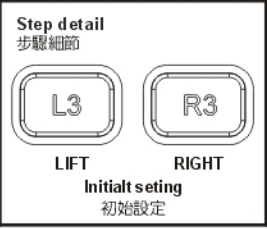


### 33 ASSEMBLY OF THE REAR STABILIZER

後平衡桿組合

**BAG** NO.4

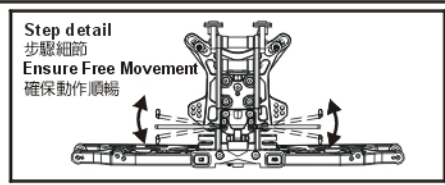

- SB2.5x8mm Hex Screw .....x2  
半丸內六角螺絲
- SC2x12mm Cap Screw .....x1  
有頭內六角螺絲
- SB3x18mm Hex Screw .....x2  
半丸內六角螺絲
- SS3x3mm Set Screw .....x4  
止付螺絲

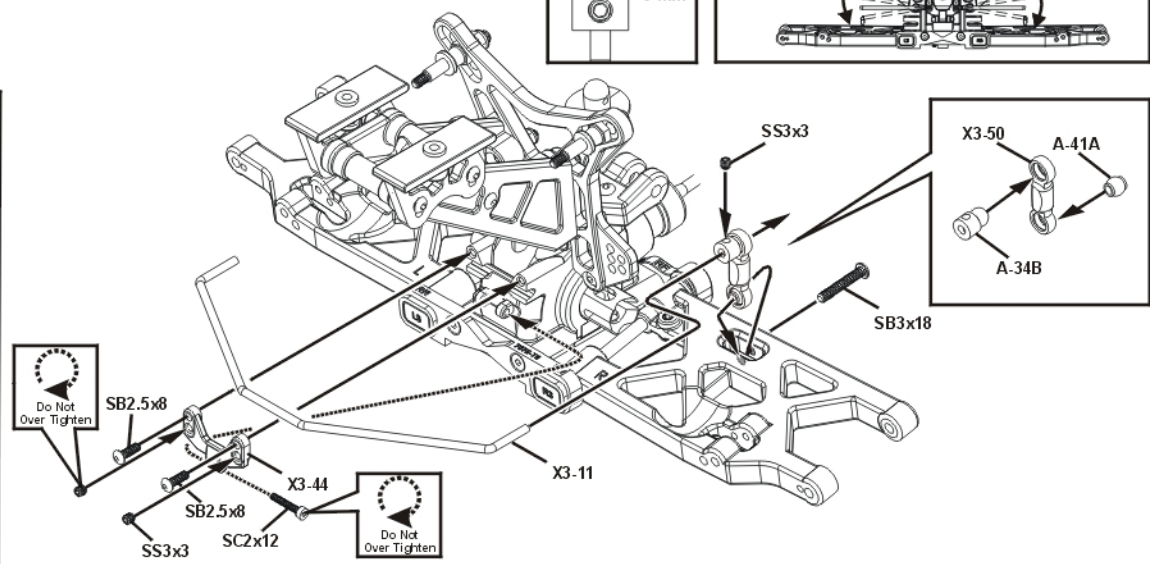


### 34 ASSEMBLY OF THE REAR WHEEL HUBS

後輪座組合

**BAG** NO.4

Assemble both right and left side.  
請組合左右兩側。

- X3-35 2.5x12.8mm Pin .....x2  
滾針
- #267E 2.5x16.8mm Pin .....x2  
滾針
- 4x4mm Set Screw .....x2  
止付螺絲

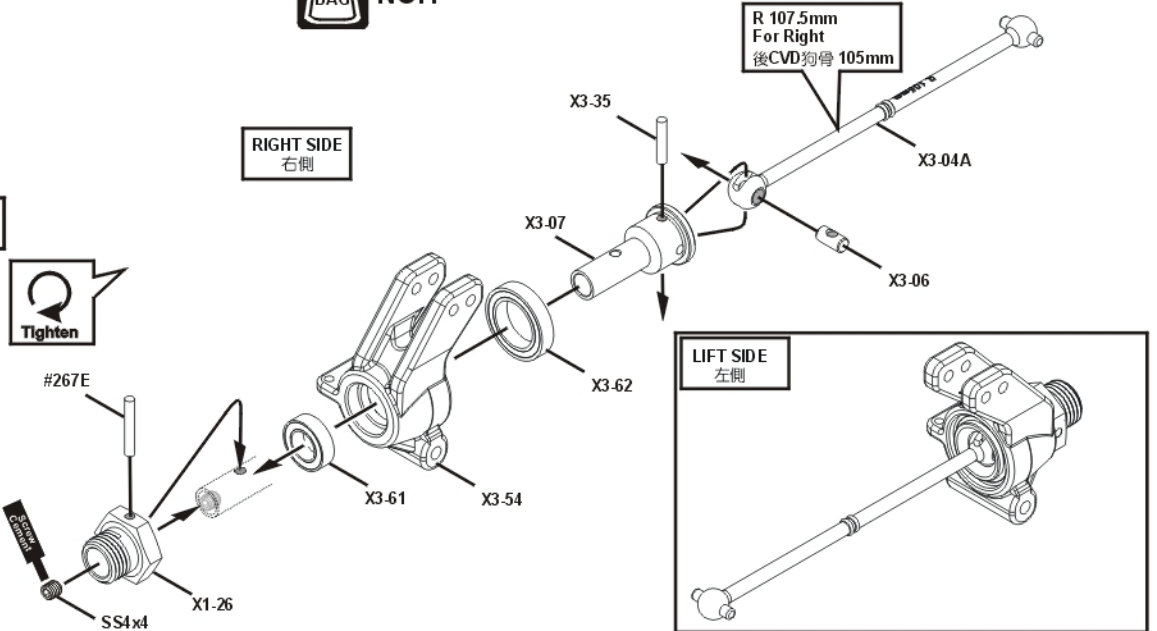


### 35 ASSEMBLY OF THE REAR SUSPENSION ARMS


後懸吊系統組合

**BAG** NO.4

Assemble both right and left side.  
請組合左右兩側。

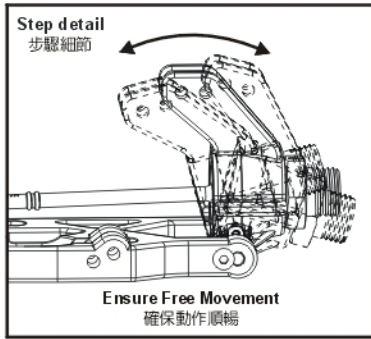

- SB3x5mm Hex Screw .....x4  
半丸內六角螺絲

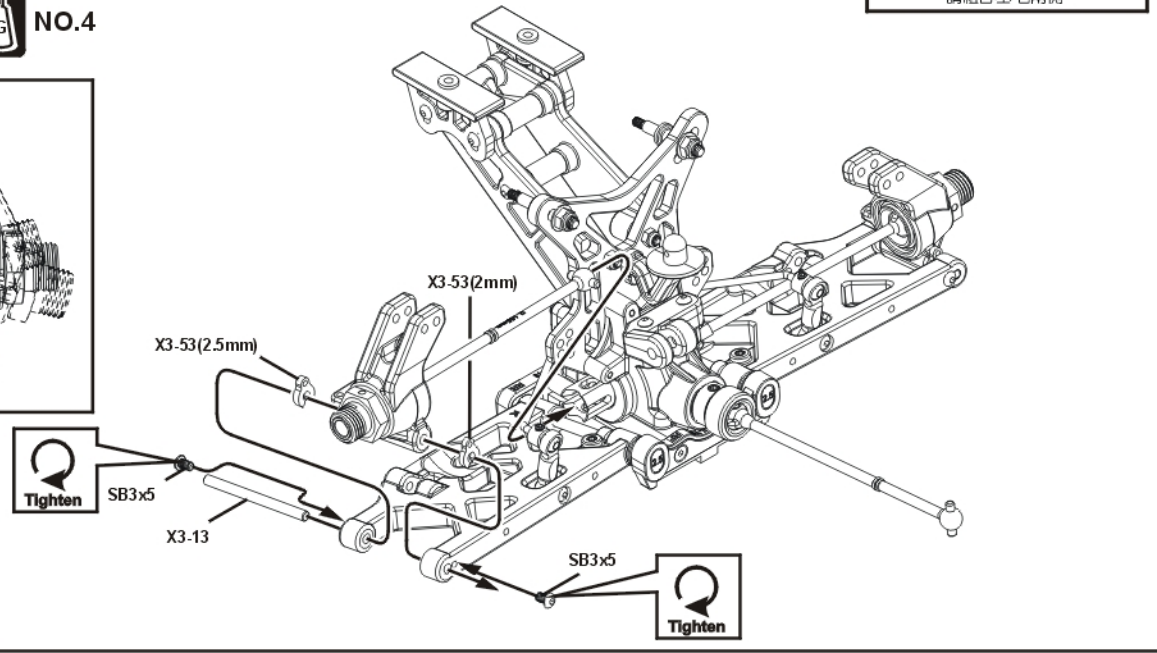


### 35 ASSEMBLY OF THE REAR UPPER ARMS






後上擺臂組合

**BAG** NO.2  
NO.4

Assemble both left and right sides.  
請組合左 / 右兩側。

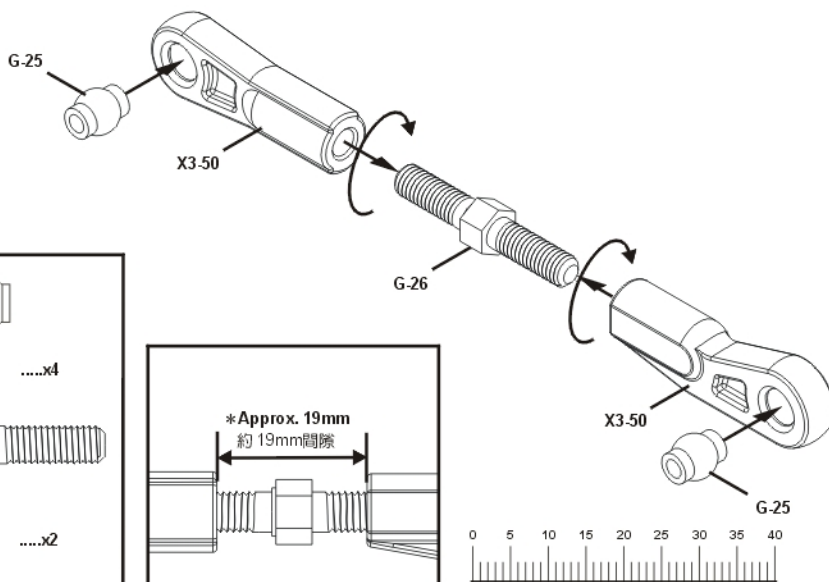

RIGHT SIDE  
右側

 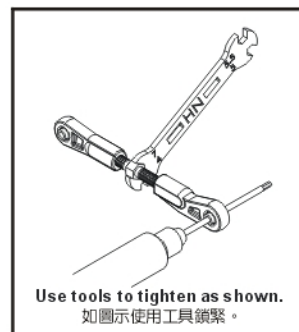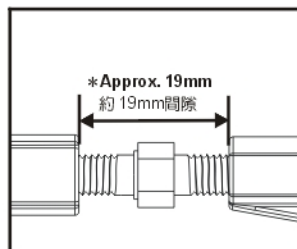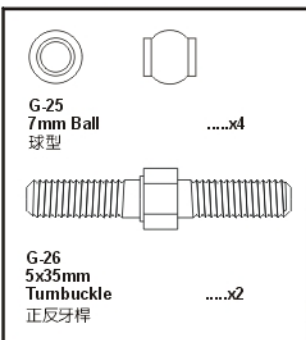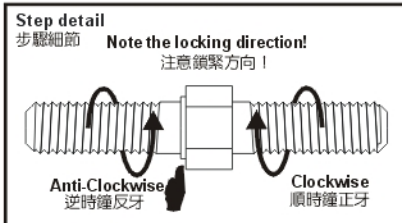




### 36 ASSEMBLY OF THE REAR UPPER ARMS

後懸吊系統組合

**BAG** NO.4

RIGHT SIDE  
右側

Assemble both right and left side.  
請組合左 / 右兩側。

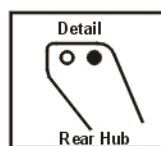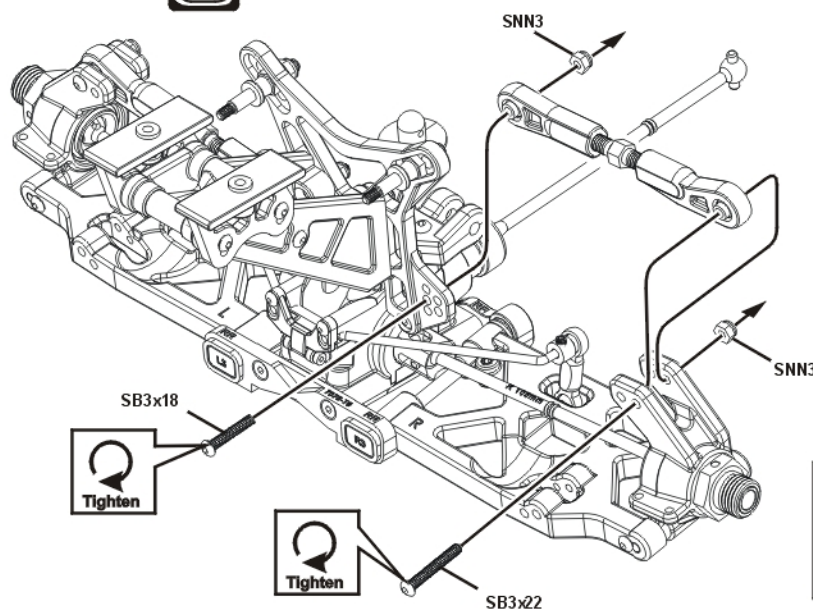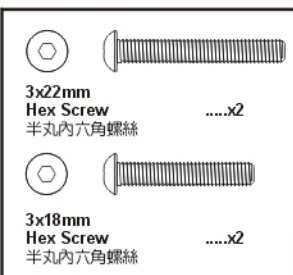


### 37 ASSEMBLY OF THE REAR MUD DEFLECTOR

後防泥板組合

**BAG** NO.2  
NO.4


RIGHT SIDE  
右側

Assemble both right and left side.  
請組合左 / 右兩側。

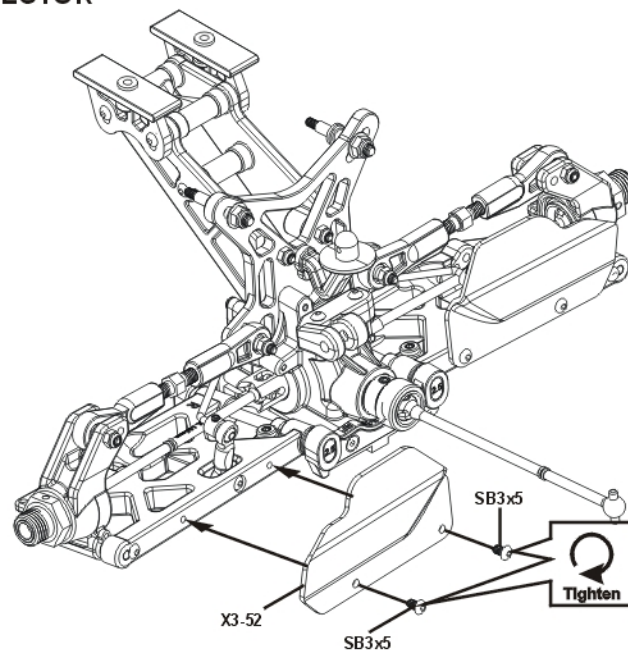


### 39 ASSEMBLY OF THE REAR CENTER BRACE

後中央補強桿組合

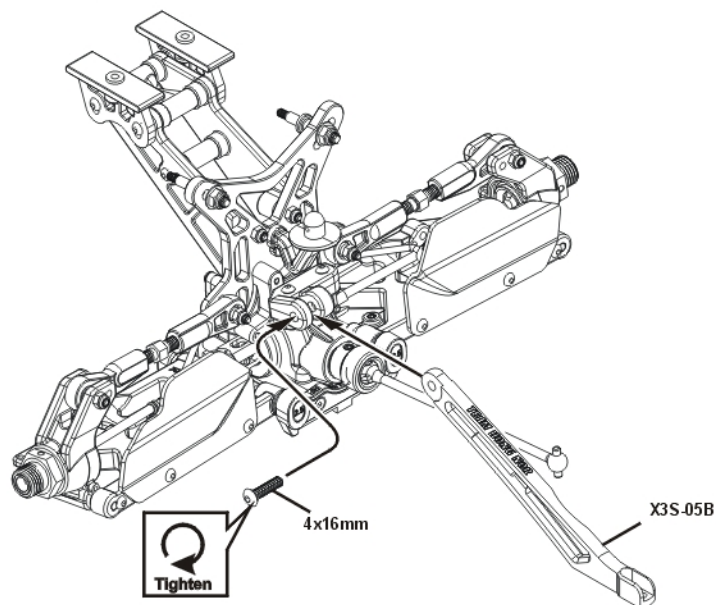


### 40 ASSEMBLY OF THE FRONT CENTER DIFF MOUNT

前中差座組合


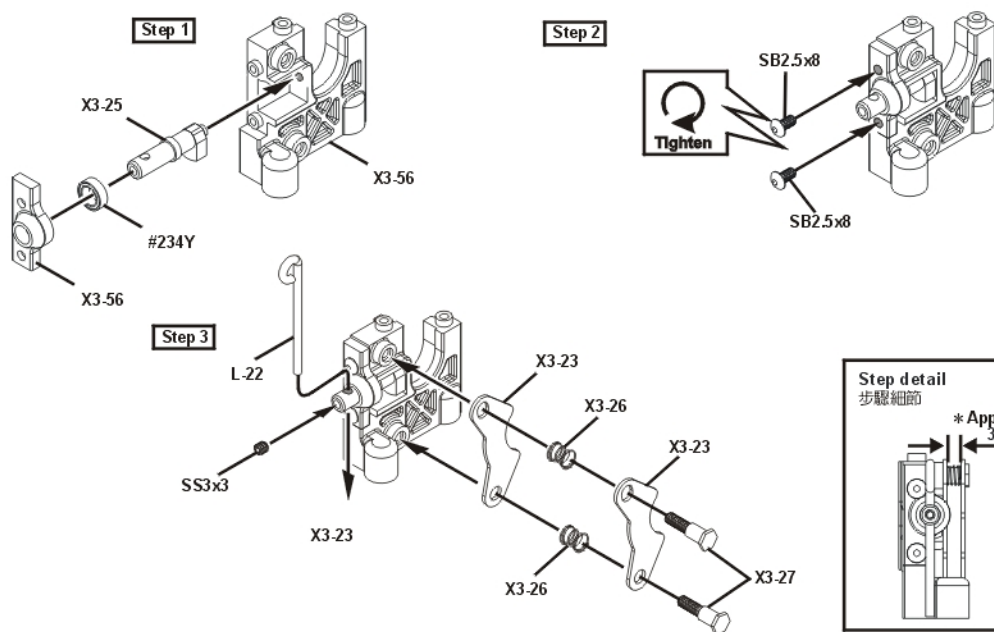


FRONT SIDE  
前側

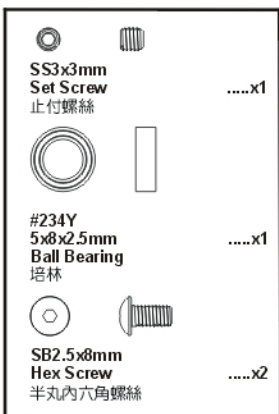

### 41 ASSEMBLY OF THE REAR CENTER DIFF MOUNT

後中差座組合

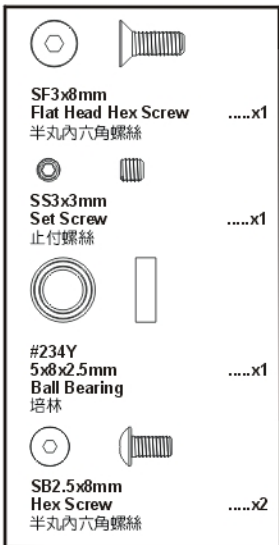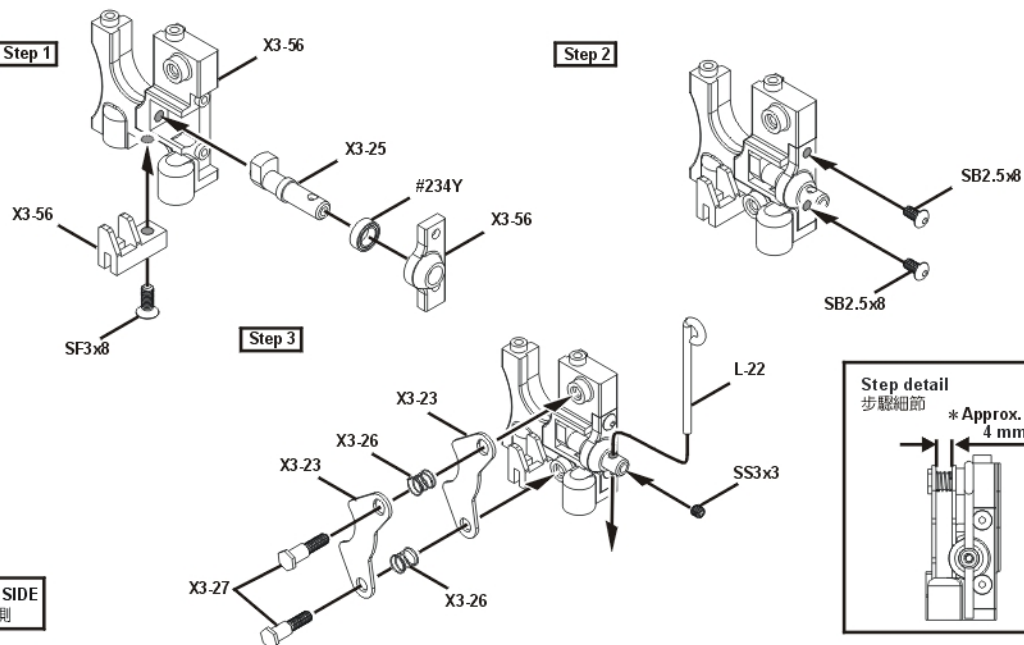


REAR SIDE  
後側



#### 42 ASSEMBLY OF THE CENTER DIFF. MOUNT

中差座組合

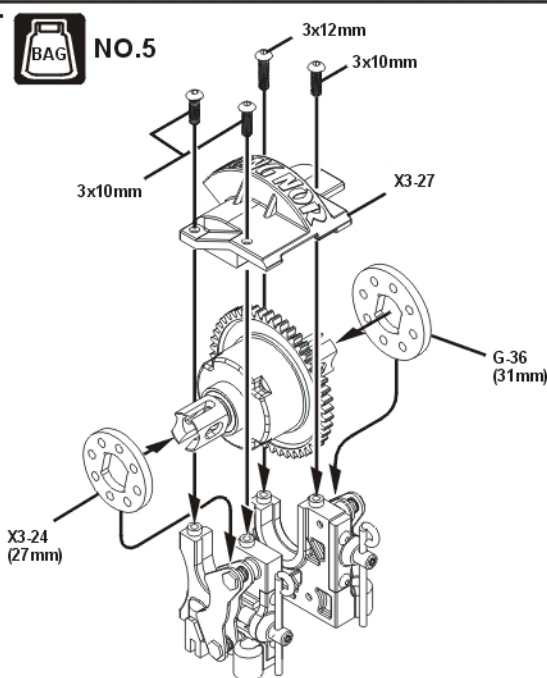

NO.5



-  SB3x10mm Hex Screw .....x3  
半丸內六角螺絲
-  SB3x12mm Hex Screw .....x1  
半丸內六角螺絲

#### 43 ASSEMBLY OF THE STONE GUARD


防塵板組合




NO.6

NO.16

Assemble both right and left sides.  
請組合左/右兩側。

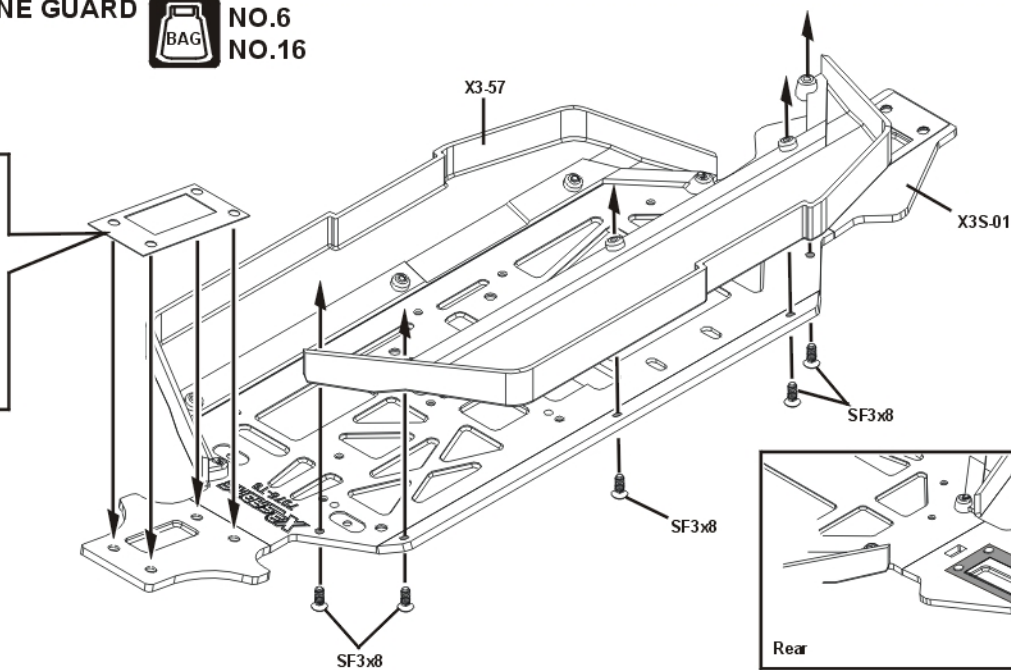

-  SF3x8mm Flat Head Hex Screw .....x10  
半丸內六角螺絲

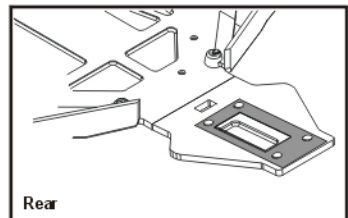





#### 44 ASSEMBLY OF THE FRONT GEAR CASE ONTO CHASSIS




組合前齒輪箱至底盤



NO.2

NO.16




-  SF3x10mm Flat Head Hex Screw .....x2  
血頭內六角螺絲
-  SF4x12mm Flat Head Hex Screw .....x2  
血頭內六角螺絲
-  SF4x16mm Flat Head Hex Screw .....x2  
血頭內六角螺絲
-  SNN3mm Nylon Nut .....x2  
尼龍螺帽

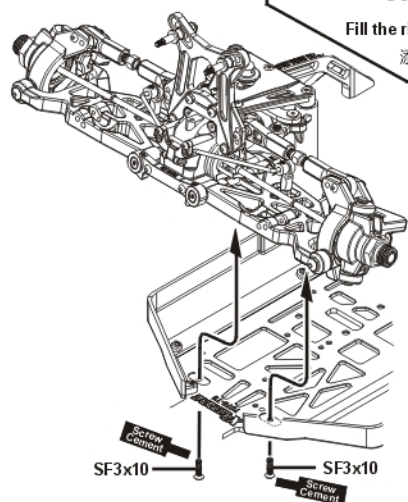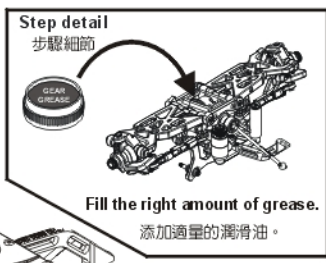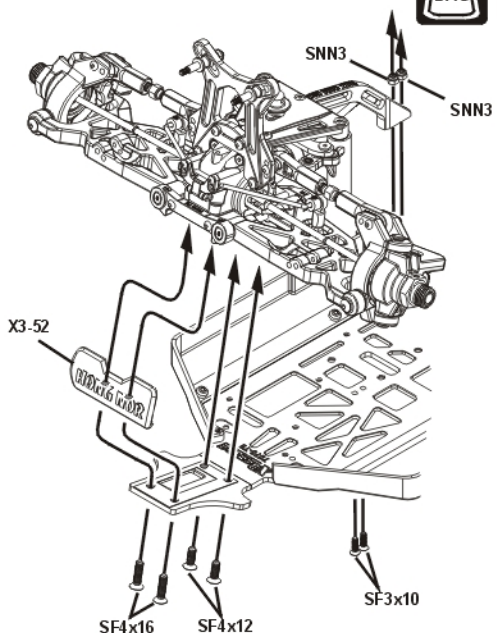

#### 45 ASSEMBLY OF THE REAR GEAR CASE ONTO CHASSIS

組合後齒輪箱至底盤


**BAG** NO.4

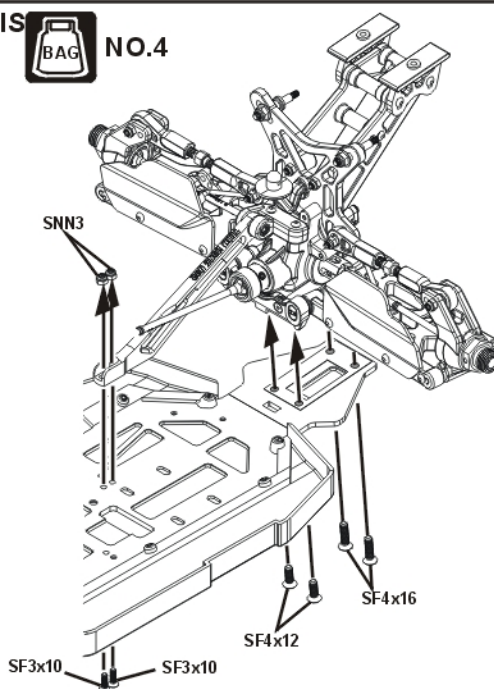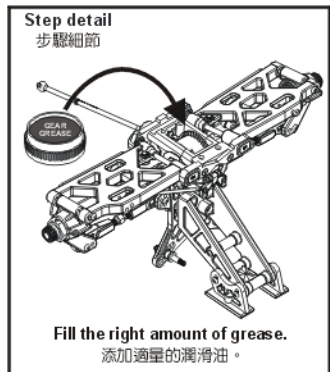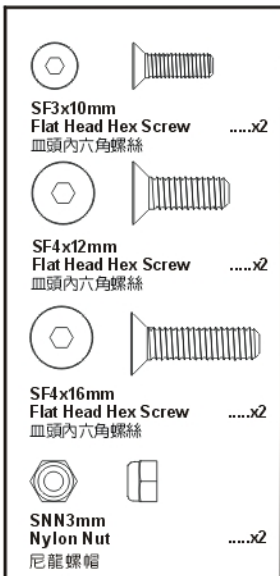

#### 46 ASSEMBLY OF THE CENTER DIFF. ONTO CHASSIS

組合中差座至底盤


**BAG** NO.5

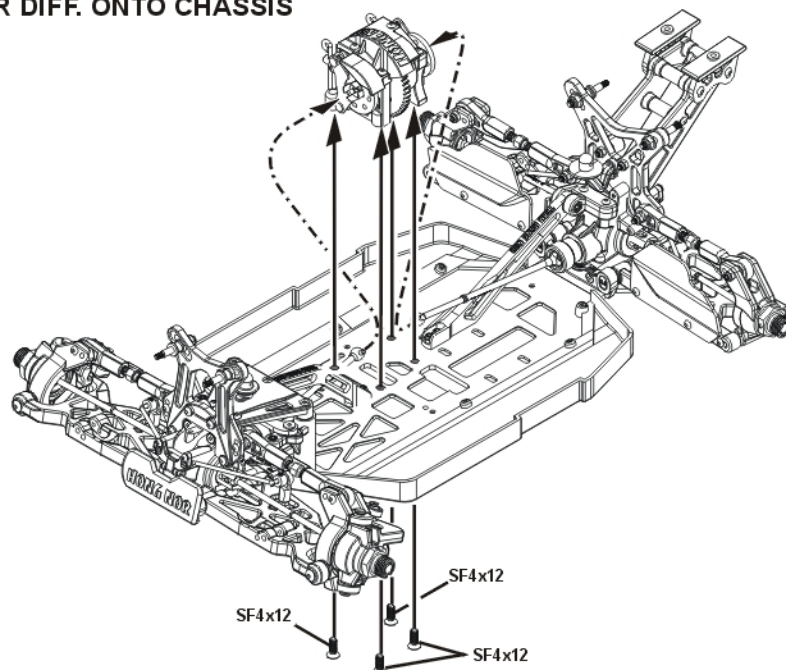


#### 47 ASSEMBLY OF THE FUEL TANK

油箱組裝


**BAG** NO.1  
NO.10

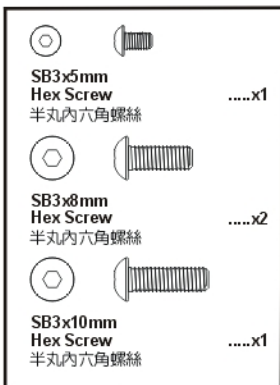

**Step 1**

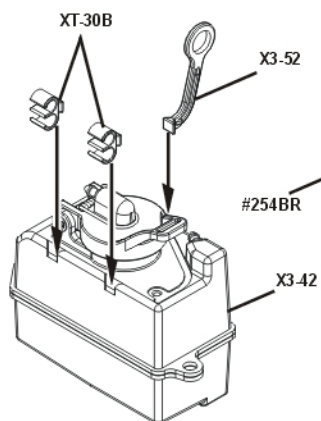

**Step 2**

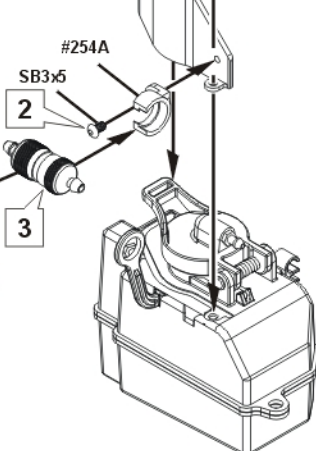

**Step 3**

