

























Feature operation

AutoDial			
Store	AutoDial		▶ AutoDial
Use		AutoDial	
Display	Display	AutoDial	
Call Forward			
Activate	Fwd		▶ Fwd
Deactivate	▶ Fwd		
Reinstate	Fwd	▶ Fwd	
View number	Display	▶ Fwd	
Call Pickup		Pickup	
Call Waiting			
Answer		▶ CallWait	
Return to first call			
Conference	Conf		▶ Conf
Handsfree			
Activate		Line key	
Switch to handset			
Handset to handsfree			
Hold	Off Hold		
Place a call on hold		Take a call off hold	Line key
Last Number Redial		Line key	
Message		Inbox	
Ring Again			
Activate	RngAgn		
When notified		▶ RngAgn	
Deactivate	▶ RngAgn		
Shift	Outbox		
Transfer	Trans		▶ Trans

Icon Legend

Icon	Description or Action
	A lock on the display indicates an encrypted call.
	Lift the handset, press the DN key, or press the <b>Handsfree</b> key.

	Replace the handset, or press  to end the call.
	Dial a number.
Line key	Tap the line (DN) icon.
▶ AutoDial	The ▶ flashes when a feature is being programmed. The ▶ is steady when a feature is active.
Services	Tap the <b>Services</b> icon.
Inbox	Tap the <b>Message</b> icon.
	Press the <b>Navigation</b> keys.
	Press the <b>Handsfree</b> key.
	Press the <b>Mute</b> (on/off) key.
Directory	Tap the <b>Directory</b> icon.

Services and telephone options menu

Services menu

Services

Select

Telephone Options menu

Volume adjustment

Ringer

Select

Select

Services

Handset listen

Select

Select

Services

Handsfree Listen

Select

Select

Services

Headset listen

Select

Select

Services

Buzzer

Select

Select

Services

Contrast adjustment

Select

Select Cancel

Services

Language

Select

Select

Services

Date/Time

Select

Select Cancel

Services

Local dialpad tone

Select

Select Cancel

Services

Ring type

Select

Select Play Cancel

Services

On hook default path

Select

Select Cancel

Services

Live dialpad

Select

Turn On or Off

Select Cancel

Services

For more information on using your IP Phone 2007, see the IP Phone 2007 *User Guide* (NN43118-100).

## Tools/Navigation soft keys



Tap this icon to determine which external applications are registered (for example, My Call Pilot), and launch them by tapping on the appropriate icon.



Tap this icon to access the **Tele-phone** screen.



Tap this icon to go to the primary external application. The icon of the application is displayed



Tap this icon to access the tools used on the IP Phone 2007.



Tap this icon to display a virtual keyboard (pop-up keyboard) for text entry.

## Nortel IP Phone 2007



To provide feedback or report a problem in this document, go to [www.nortel.com/documentfeedback](http://www.nortel.com/documentfeedback).

Date: May 2007

Document Release: Standard 01.02

Document Number: NN43118-101

Copyright © 2007 Nortel Networks

All rights reserved.

\* Nortel, the Nortel logo, and the Globemark are trademarks of Nortel Networks.

# NORTEL

[www.nortel.com](http://www.nortel.com)

# IP Phone 2007

For Nortel Communication Server 1000

## Quick Reference Card