 


# User Manual

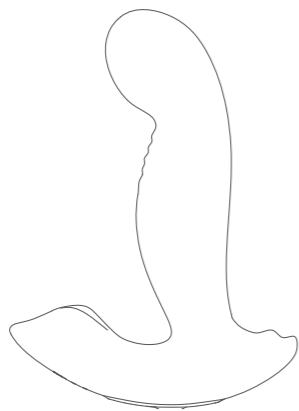 


EN

## • Product Specifications

Product Name	Crave
Product Materials	ABS Plastic / Body-Safe Silicone
Battery	Li4on Rechargeable
Working Time	Around 60 mins
Charging Time	Around 90 mins
Waterproof	Daily Water-Resistant
Net Weight	0.2lb / 94g
Size	5.2*3.6*1.1in / 131*92*27mm

## • Size

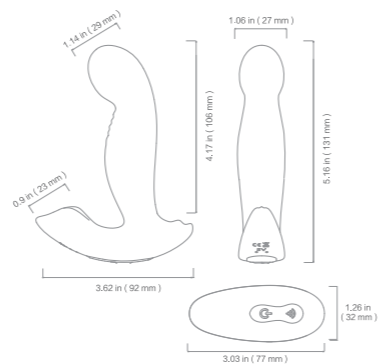

EN

## • On / Off



## • Distance

The longest working distance: 5 - 10m



## • Change Patterns



1. Hold the power button (on the vibrator) 3s to place it into Standby condition.
2. Hold the power button (on the remote) for 3s to turn on, then press the Wi-Fi symbol to switch patterns.
3. Hold the power button 3 seconds to pause while vibrating. You can restart the device with the remote directly within 20 minutes, otherwise it will be off. Repeat all above to turn it on.

 
\*The vibrator can work independently without the remote. Just press the power button again to change patterns after standby, and hold for 3s to turn off.

EN

## • USB Magnetic Charging

\*WARNING: Please DO NOT use adaptor with "5V" output  
\*Please make sure your toy is fully charged while the first time

1.Vibrator

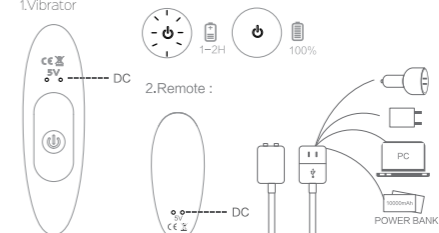

## • Product Cleaning

- Clean Please clean product with warm water or antibacterial soap.
- Wipe Dry the product with clean cloth or towel.
- Store Keep the product in a cool, dry, clean place.
- Attention Never clean this product with organic cleaner containing alcohol, gasoline or acetone. Avoid direct sunlight.

## • Safety

- Do not use it at temperature over 167°F/75 °C.
- Stop using it when any discomfort occurs.
- Do not use it if you find the product unsmooth or damaged.
- Keep out of reach of children.