
User Manual

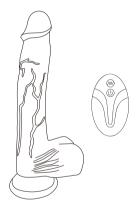

Please take a few minutes to read the instructions before using the

Please charge and clean the product before using it. It's recommended to use the original charging cable only.

Product Specifications


Product Name	Idalis
Product Materials	Liquid silicone
Battery	Li-ion Rechargeable
Using Time	1 Hour
Charging Time	2 Hours
Waterproof	Splash-proof
Net Weight	428 g
Size	220*38 mm

• Size



• Buttons Display

 Vibrator:



Instruction

Controlled with button on vibrator:

- After the product is turned on, press the button again to start and switch between 7 vibrating&thrusting (or swinging) patterns.

Remote control:

After the product is turned on by the (1) button on the vibrator, press the (w) button on remote control to start and switch between 7 vibrating patterns. Press and hold the (w) button for 1.5s to stop vibrating.

After the product is turned on by the button on the vibrator, press the button on remote control to start and switch between 5 thrusting (or swinging) patterns. Press and hold the button for 1.5s to stop thrusting (or swinging).

How to Manually Switch Thrusting and Swinging Patterns

- In the shutdown state, gently bend the shaft (not exceeds 45°), the product will have an angle tilt. When the device is turned on, it will enter into swinging patter.
- In the shutdown state, straighten the shaft to original place, and when the device is turned on, it will enter into thrusting pattern.



Maintenance

- Wash it thoroughly with mild soap and clean water.
- . Air dry or dry it with a clean towel.
- Store it in a cool, dry and dust-free place, avoid direct sunlight.

Attention

- This product is for adult use only; keep out of reach of children.
- It's recommended to use with water-based lubricants.
- Please stop using immediately if you feel uncomfortable during use.