




METIS-15PWG

METIS-18PWG

High Power Active Subwoofer

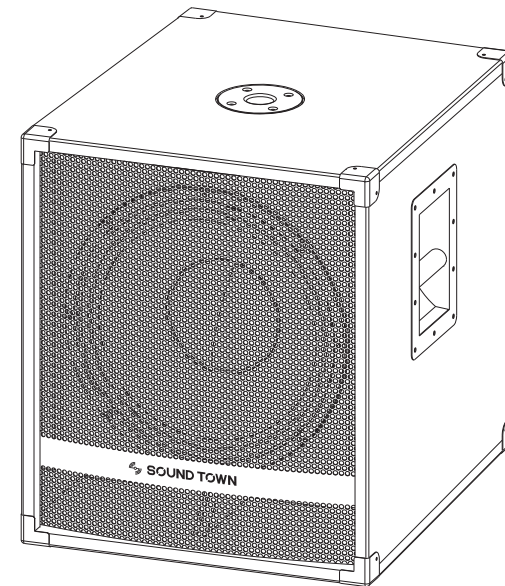

PRODUCT MANUAL



Sound Town Inc.

Los Angeles, California, USA

www.soundtown.com

IMPORTANT SAFETY INSTRUCTIONS

1. Read all safety and operating instructions before using this product.
2. All safety and operating instructions should be kept for future reference.
3. Read and understand all warnings listed on the operating instructions.
4. Follow all operating instructions to operate this product.
5. This product should not be used near water, i.e. Bath tub, sink, swimming pool, web basement etc.
6. Only use dry cloth to clean this product.
7. Do not block any ventilation openings, it should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
8. Do not install this product near any heat sources, such as, radiators, heat registers, stove or other apparatus (including heat producing amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The side blade or the third prong are provided for your safety if the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord being walked on or pinched particularly at Plugs, convenience receptacles and the point where they exit from the apparatus. Do not break the ground pin of the power supply cord.
11. Only use attachments specified by the manufacturer.
12. Use only the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used use caution when moving cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation ports or any other openings.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as, power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
16. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
17. When the MAINS plug, or an appliance coupler is used as the disconnect device, the disconnect device should remain readily operable.
18. Protective Ground Terminal: The apparatus shall be connected to an AC main socket with a protective earth ground connection.



FEATURES

- The SOUND TOWN METIS series powered subwoofer has a built-in high power Class-D amplifier provide various of input connector such as 1/4" / XLR combo and RCA.
- Passthrough and high pass XLR line output provides the flexibility of connecting other apparatus.
- LPF (Low Pass Filter) allows to adjust the frequency filter from 40~160Hz.
- Customized low frequency driver provide powerful and strong bass sound.

In the package

- 1 METIS subwoofer
- 1 User Manual
- 1 Power cable
- 1 Warranty Card


How can we help you?

CONTACT OUR US-BASED SUPPORT TEAM

Simple or complex, your questions are important to us. For service, support or more information, please contact the Sound Town support team:

Email: support@soundtown.com

Rear Panel Instruction

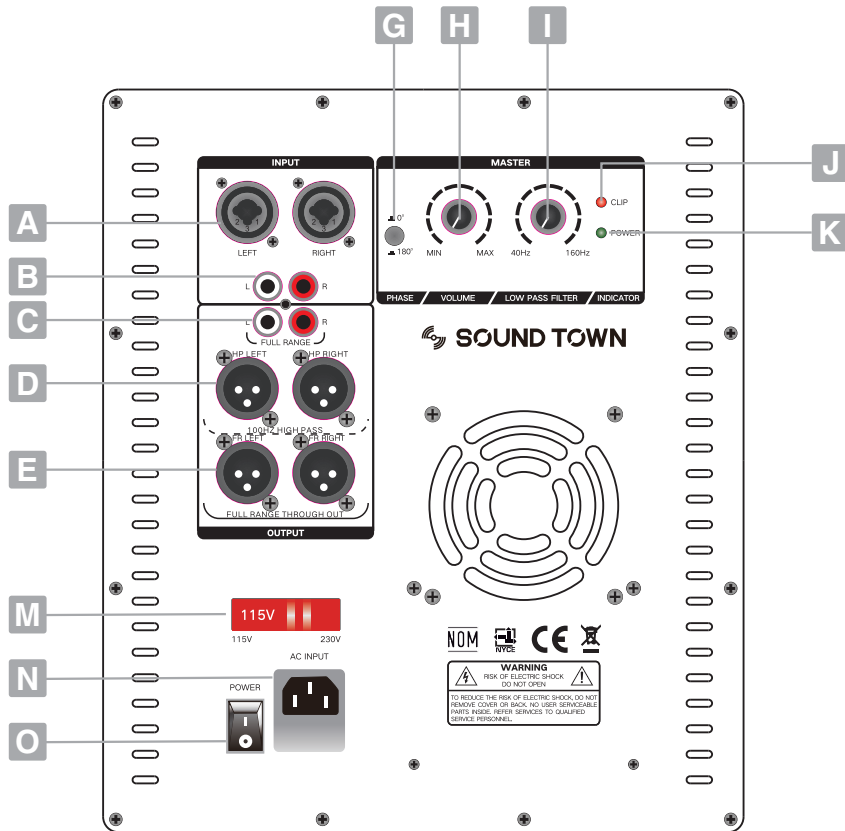

A. Combo Input: Two balanced 1/4"/XLR combo jack A/B are provided. This allows for stereo input from two separate feeds. The subwoofer will work with only one input connected.

B. RCA Input: Two RCA unbalanced input are provided. The subwoofer will work with only one input connected.

C. RCA Output: Full range line through output connector. (Only available when using RCA Input).

D. HP XLR Output : Two XLR connector are provided for output with frequency under 100 Hz filtered out of the signal. (Recommend to output to a full range powered speaker).

E. Full range Output: Two XLR connector are provided for full range signal through out. (Recommend to output to another subwoofer).

G. Polarity control: This button reversed polarity of subwoofer and is dependent on the placement of the subwoofer relative to the speakers.

H. Subwoofer Volume Control: This controls the gain of the input signal. It will raise and lower the volume of the subwoofer. Standard usage is setting this control at 50%.

I. LPF Control: Low Pass Filter, this controls how much high frequency is filtered out of the signal and how much of the higher bass frequency are left in the signal. This does not add bass to the signal, it determines how much high frequency is cut out of the signal.

J. Clip LED: This indicator lights up when the amplifier is near clipping. An occasional flickering is acceptable. If LED is lit continuously, adjust the level control and reduce the output level of connected sources. Failure to do so may lead to premature failure of your speaker.

K. Power LED: This indicator will light when the subwoofer is turned on.

M. Voltage selection: This switch is supplied for moving the unit from 115 voltage (US Standard) to 230 voltage (European Standard). The switch needs to be set on the proper voltage for your area.

N. IEC input: This receptacle is for connecting the included IEC power cable. It is important to supply the proper AC line voltage to the unit. Do not connect to intermittent or faulty power.

O. Power Switch: To turn/off the subwoofer.