

## IMPORTANT SAFETY INFORMATION

The speaker has an internal, rechargeable battery capable of up to 6 hours of continuous audio on a full charge. Even though the speaker may have some charge when first taken out of the box, we recommend full charging your speaker before using the system.

To charge the battery:

1. Set the power switch to the "OFF" position.
2. Connect the speaker to a power outlet using the included power adapter.
3. Keep the system plugged in until the battery indicator changes to green, indicating the battery is fully charged.

The speaker utilizes a sealed lead-acid gel cell battery. When not in use, the battery will slowly self-discharge. If you are planning not to use the speaker for a long period of time, it is advised to full charge the unit before storing. It is also important to charge the unit every six months when not used. This will ensure a healthy battery and extends its life. If the battery is left with a very low charge of an extended period of time, it is possible to recharge the battery to working condition, but the charge time can take over 24 hours.

Please visit our website [www.soundtown.com](http://www.soundtown.com) for more information.



### OPIK SERIES PORTABLE PA SPEAKER

OPIK-8PS  
OPIK-12V2PD  
OPIK-15V2PD  
User Manual



Sound Town Inc. Accepts no liability for any loss which may be suffered by any person who relies either wholly or in part upon any description, photograph, or statement contained herein. Technical specifications, appearances and other information are subject to change without notice.


For the applicable warranty terms and conditions, including additional information regarding Sound Town's limited warranty, please find details online at:

<https://www.soundtown.com/pages/return-warranty>




Please carefully read the user manual before using our products

## PRODUCT INSTRUCTIONS

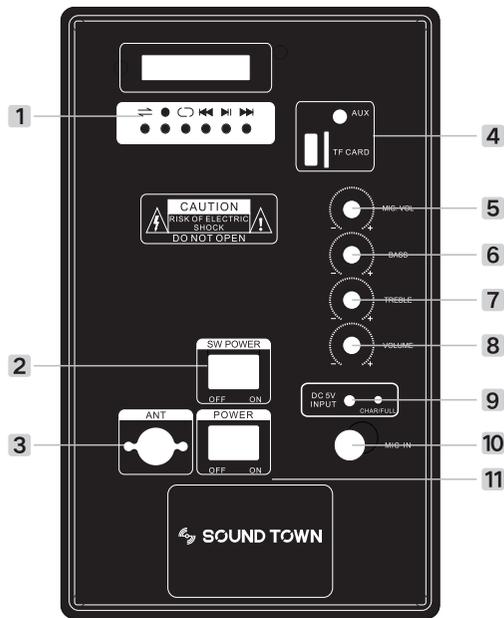


1. ⇄ : INTERCHANGE  
● : REC  
↺ : REPEAT  
⏮ : PREVIOUS SONG  
⏸ : PLAY/PAUSE  
⏭ : NEXT SONG
2. FRONT LED POWER ON/OFF
3. ANTENNA
4. USB/SD CARD/AUX
5. VOLUME CONTROL OF MIC.
6. BASS
7. TREBLE
- \* Bass & treble EQ are only for OPIK-12/15V2PD
8. MASTER VOLUME CONTROL
9. DC 5V INPUT CHARGING/FULL
10. MIC. INPUT
11. POWER ON/OFF

## RECORD FUNCTION INSTRUCTIONS

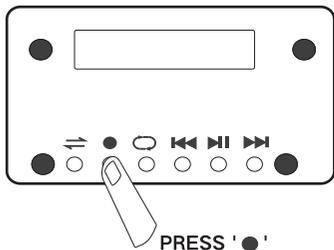

1. Make sure the speaker is powered on. Plug USB flash drive or SD card into the USB/SD card slot.
2. Connect your microphone to the speaker. The Opik-8PS comes with one wired microphone, the Opik-12/15V2PD comes with one wireless microphone, which has been paired with the speaker. Turn on the microphone.
3. Long press the button '●' to start recording. Press the 'INTERCHANGE' button to finish recording. Short press the '●' to play recording.

## REMOTE CONTROL INSTRUCTIONS

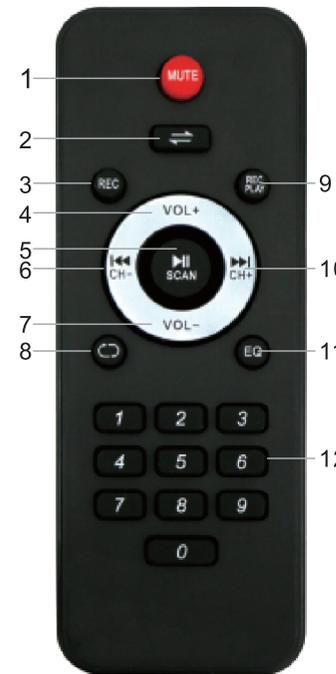

1. MUTE: Press this button to mute the unit.
2. Press this button to toggle between the various input (AUX, USB, SD, FM, BLUETOOTH), long press this button to turn on/off the voice prompt.
3. Press this button to start recording.
4. Press this button to increase the master volume of the unit.
5. Press this button to pause or play the unit when it is on the USB mode. When it's on the FM mode, press this button to auto scan all channels. Long press to change language to Chinese/English for the voice prompt.
6. Press this button to select the previous song/channel.
7. Press this button to reduce the master volume of the unit.
8. Press this button to repeat one/repeat all songs.
9. Press this button to play the recording.
10. Press this button to select the next song/channel.
11. Press this button to select the EQ mode of Normal, Jazz, Rock, Pop, Classical
12. 0-9, Key number for selecting the certain songs in the USB/SD/TF card.

## BLUETOOTH INSTRUCTIONS

1. Press the INTERCHANGE button on the rear panel to launch Bluetooth function. The speaker will become discoverable as 'SOUNDTOWN'.
2. In the setting of your Bluetooth enabled devices, set it to 'discover' available devices. From the Bluetooth device list, select the 'SOUNDTOWN' device.
3. The speaker is now paired with your Bluetooth enabled device.