


Ultra-Compact Powered Line Array Speaker  
(Built in Class D amplifier with DSP)

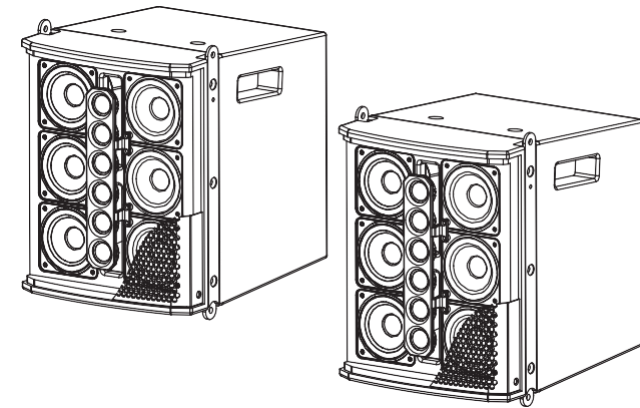

ZETHUS-M3PW  
PRODUCT MANUAL

# IMPORTANT SAFETY INSTRUCTIONS

1. Read all safety and operating instructions before using this product.
2. All safety and operating instructions should be kept for future reference.
3. Read and understand all warnings listed on the operating instructions.
4. Follow all operating instructions to operate this product.
5. This product should not be used near water, i.e. Bathtub, sink, swimming pool, web basement etc.
6. Only use dry cloth to clean this product.
7. Do not block any ventilation openings, it should not be placed flat against a wall or placed in a built-in enclosure that will impede the flow of cooling air.
8. Do not install this product near any heat sources, such as, radiators, heat registers, stove or other apparatus (including heat producing amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The side blade or the third prong are provided for your safety if the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord being walked on or pinched particularly at Plugs, convenience receptacles and the point where they exit from the apparatus. Do not break the ground pin of the power supply cord.
11. Only use attachments specified by the manufacturer.
12. Use only the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used use caution when moving cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Care should be taken so that objects do not fall and liquids are not spilled into the unit through the ventilation ports or any other openings.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way; such as, power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally or has been dropped.
16. WARNING: To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
17. When the MAINS plug, or an appliance coupler is used as the disconnect device, the disconnect device should remain readily operable.
18. Protective Ground Terminal: The apparatus shall be connected to an AC main socket with a protective earth ground connection.

**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE CHASSIS. NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

AVIS: RISQUE DE CHOC ELECTRIQUE-NE PAS OUVRIR.



# FEATURES

- Amazing sound and ample power handling into an ultra-compact line array cabinet.
- Customized HF / LF transducer deliver robust and professional sound quality.
- Built-in Class-D amplifier with DSP provides great system optimization.
- 1/4" & XLR combo input, XLR out for great flexibility and control.
- Multiple flying points provides flexible mounting and flying options.

# In the package

- |   |
|---|
| <ul style="list-style-type: none"> <li style="width: 50%;">• 2 ZETHUS speakers</li> <li style="width: 50%;">• 1 User Manual</li> <li style="width: 50%;">• 2 Power cables</li> <li style="width: 50%;">• 1 Warranty Card</li> </ul> |
|---|


## How can we help you?

CONTACT OUR US-BASED SUPPORT TEAM

Simple or complex, your questions are important to us. For service, support or more information, please contact the Sound Town support team:

Email: [support@soundtown.com](mailto:support@soundtown.com)

# Rear Panel Instruction

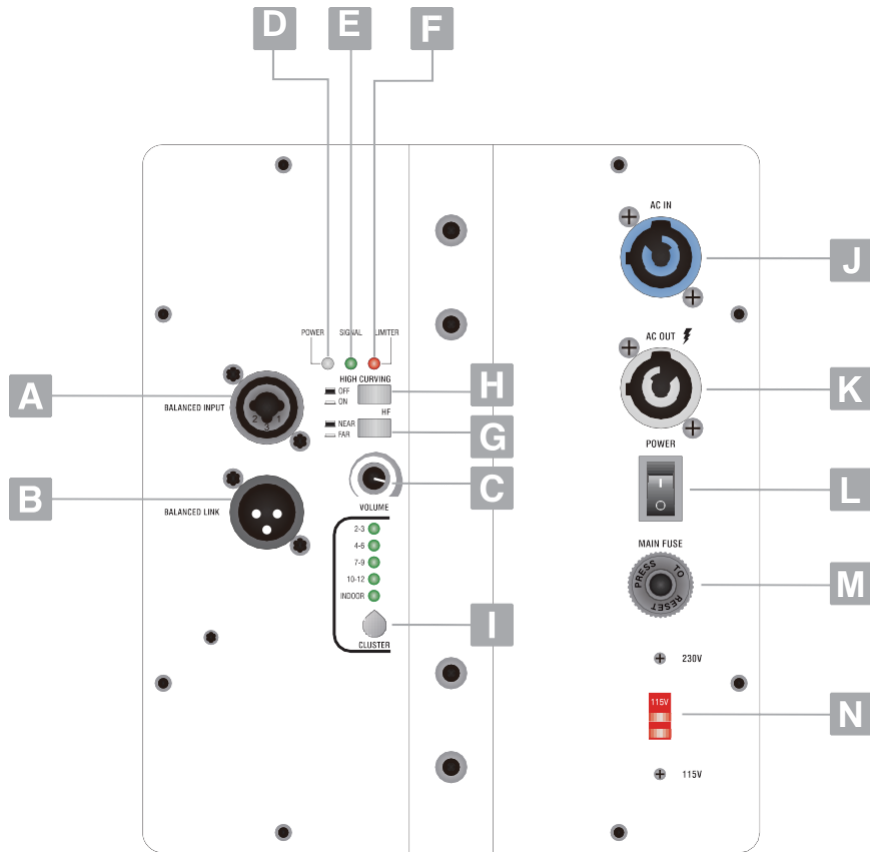

**A. INPUT:** Balanced XLR/1/4" combo jack for line signal input.

**B. OUTPUT:** Balanced XLR male connector for line signal output.

**C. VOLUME CONTROL:** This controls the gain of the input signal. It will raise and lower the volume of the speaker. Standard usage is setting this control at 50%.

**D. POWER LED:** This indicator will light up when the unit is turned on.

**E. SIGNAL LED:** This indicator will blink when there is a signal input.

**F. LIMIT LED:** This indicator lights up when the amplifier is near clipping. An occasional flickering is acceptable. If the LED is lit continuously, adjust the level control and reduce the output level of connected sources. Failure to do so may lead to premature failure of your speaker.

**G. HF:** The switch gives the possibility to set high frequencies correction depending on target distance:  
 - NEAR (used for pole mount applications or near field)  
 - FAR (used for farthest field)

**H. HIGH CURVING:** When this switch is pressed in the 'ON' position, it will trigger a mid-high frequency boost.

**I. CLUSTER:** Press to select 5 different modes of mid-low frequencies correction depending on cluster size  
 - 2~3 modules (used for pole mount applications ground stacking)  
 - 4~6 modules (used for small flow system)  
 - 7~9 modules (used for medium flow system)  
 - 10~12 modules (used for maximum flow configuration)  
 - INDOOR (correction for reverberant indoor rooms)

**J. AC Input:** Neutrik powerCON (A) receptacle for power input. It is important to supply the proper AC line voltage to the unit. Do not connect to intermittent or faulty power.

**K. AC Output:** Neutrik powerCON (B) connector for power output. It is important to supply the proper AC line voltage to the other unit.

**L. Power Switch:** To turn/off the speaker.

**M. FUSE:** 220V/5A fuse.

**N. Voltage selection:** This switch is supplied for moving the unit from 115 voltage (US Standard) to 230 voltage (European Standard). The switch needs to be set on the proper voltage for your area.