




DST 50

USER MANUAL



What's included?

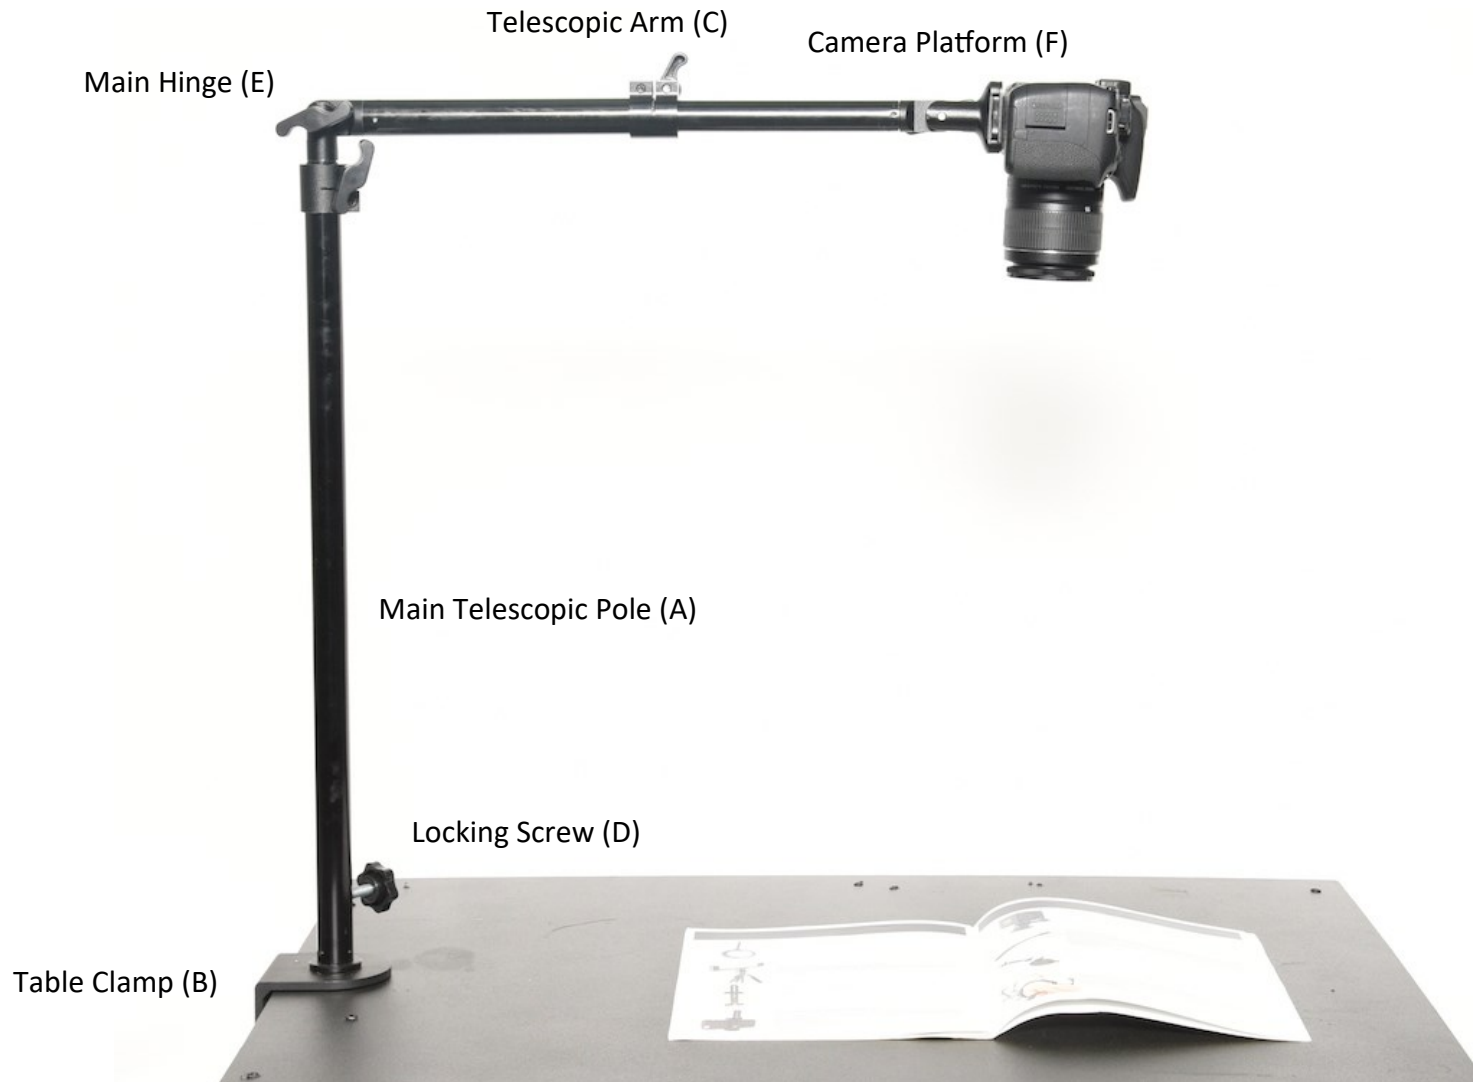

For more information please visit our website: www.glidegear.net



Assembly

- 1 The DST 50 can be mounted into 2 different configurations:
 - Mount onto a C-Stand. The DST 50 does not come with a C-Stand.
 - Mount onto a table/desk using the supplied Table Clamp (B)

Table/Desk configuration:

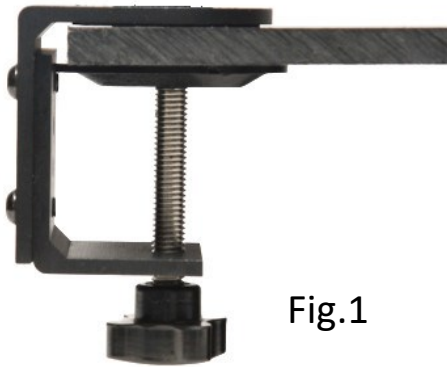


Fig.1



Fig.2

- Mount the Table Clamp (B) to the table or desk you would like to use by tightening the screw at the bottom of the clamp as shown in Fig.1 .
- Slide the Main Telescopic Pole (A) onto the peg on top of the Table Clamp (B).
- Using the Locking Screw (D), secure the Main Telescopic Pole (A) to the peg as in shown in Fig. 2.



Assembly, Cont'd

C-Stand configuration:



- Slide the Main Telescopic Pole (A) onto your C-Stand as in Fig. 3.
- Using the Locking Screw (D), secure the Main Telescopic Pole (A) to the C-Stand.



- 2 Adjust the height of the Main Telescopic (A) by loosening and tightening the pole clamp connecting the 2 telescopic poles as shown in Fig. 4.



Assembly, Cont'd



3 Connect the Telescopic Arm (C) via the Main Hinge (E) as in shown in Fig. 4.

4 Adjust the angle of the Telescopic Arm (C) by loosening and tightening the Main Hinge (E) .

Make sure the Main Hinge (E) is fully locked before moving to the next step.



5 Adjust the length of the Telescopic Arm (C) by loosening and tightening the clamp connecting the poles (Fig. 5).

6 Adjust the angle of the Camera Platform (F) by loosening and tightening the hinge connecting the Camera Platform (C) to the Telescopic Arm (C). See Fig. 5.

7 Make sure all the joints are fully locked into position.
Mount your camera to the Camera Platform (F).



Adjustments

Once assembled, your setup should look like below:

Arm Angle:

Adjust the arm angle by loosening and tightening the hinge connect the arm to the main pole

Arm Length Adjustment:

Loosen and tighten the pole clamps to adjust the length of the telescopic arm

Vertical Adjustment:

Loosen and tighten the pole clamp to adjust the height of the DST 50

Camera Adjustment:

Adjust the camera angle by loosening and tightening the hinge at the base of the Camera Platform



For more information please visit our website: www.glidegear.net