

TMP50

 
PRIOR TO USING THE TMP50, you will need to install a teleprompter application on your cell phone or tablet.

WARNING: Please note that the application must allow mirroring of text to be used with the TMP50.

WARNING: The TMP50 does not come with an application for cell phone or tablet.

The TMP50 can be set on a flat surface or mounted onto a tripod.

When using a tripod, remove the cheese-plate from the tripod head and screw it onto one of the 2 mounting holes at the bottom of the TMP50(Fig. A).

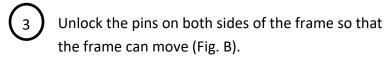

A Rotate the frame towards the back of the TMP50 (Fig. B).

Set the frame in a 45-degree angle and use the screws from 3 to lock it into position (Fig. C).



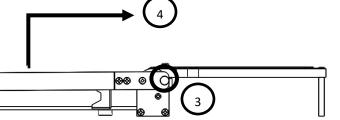


Fig. B

CHECK POINT


Your TMP50 should now look like in Fig C.





TMP50

- Place your tablet or cell phone in landscape orientation between the 2 clamps in front of the frame (Fig. D).
- Position the tablet/cell phone to the desired position by sliding the clamps along the slot (Fig. D).
- Once in position lock the clamps in position using the screw at their bottom (Fig. D).

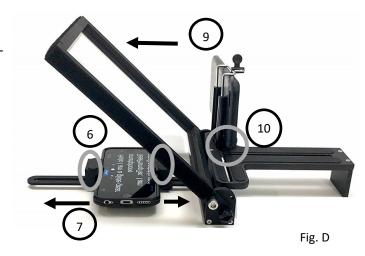

9 When shooting with a camera:

- Mount your camera on the 1/4-20 screw in the back of the TMP50.
- Slide your camera along the slot so that the lens is as close as possible to the screen.

When shooting with a cell phone (Fig. E):

- Use the cell phone holder provided with the TMP50 and mount it on the 1/4-20 screw in the back of the TMP50.
- Slide your camera along the slot so that the lens is as close as possible to the screen

• Use the T-slot to center the phone's camera.

Adjust the black cloth so it covers the camera/cell phone without obstructing your field of view (Fig. F)

FOR MORE INFORMATION:

Please visit our website: www.glidegear.net

Or

Watch our instructional videos on our youtube channel:

https://www.youtube.com/user/

