



STONE DIFFUSER MANUAL



Welcome to a whole new world. Whether you treated yourself to a diffuser (yeah you did) or received it as a gift, we're so excited for you. It's a beautiful way to create ritual throughout your day and to discover which scents you love most. This manual is meant to help you learn the basics about your diffuser and to inspire you to diffuse aromas that are as dynamic as you are.

TABLE OF CONTENTS

Usage / Page 04

Features / Page 07


Maintenance / Page 08

Troubleshooting / Page 10

USAGE

WHAT'S IN THE BOX

Throughout this manual, we refer to the diffuser parts by the names you see below. If you ever need clarification, just reference this diagram.

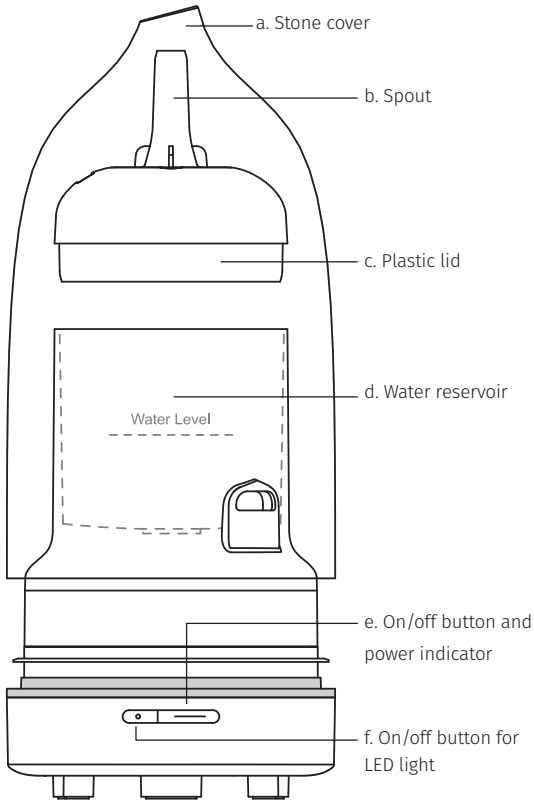

SETTING UP YOUR DIFFUSER

Step 1

Take off the stone cover and then take off the inner plastic lid.

Step 2


Fill up the water reservoir to the fill line and add 20-25 drops of 100% pure essential oils.

Step 3

Place the inner plastic lid back on the reservoir and then slide the stone cover over top by aligning the hole in the top of the cover with the spout.

Step 4

Plug in your diffuser and choose your time setting by clicking the large on/off button at the base. One click turns on a continuous 3-hour setting (green light), while two clicks turns on an intermittent 7.5-hour setting (orange light).

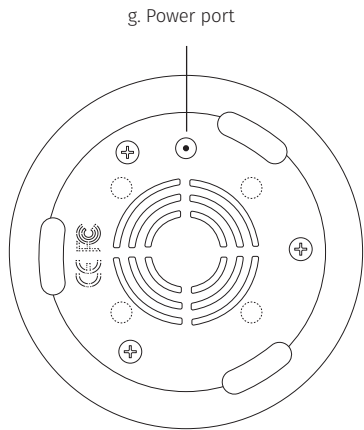

Step 5

The smaller on/off button at the base will turn on the LED light, if you're looking to set the mood.

USAGE

TIMED SETTINGS

3-hour setting:

Click the power button at the base once. You'll see a green light—this means your diffuser will run continuously for 3 hours.

7.5-hour setting:

Click the power button at the base twice. You'll see an orange light—this means your diffuser will run for 30 seconds, then pause for 30 seconds, over a length of 7.5 hours.

HOW MANY DROPS?

For a room of approximately 500 square-feet, we suggest diffusing 20-25 drops of essential oils. You can always add more or less, depending on your scent preferences and how strong you'd like the aroma to be.

FEATURES

Ultrasonic Technology

Our diffuser runs through vibrations (2.5 million vibrations per second) instead of emitting heat. This means the plastic, water, and oils are never heated while diffusing, and that the plastic never interacts with the essential oils.

LED Light

Our diffuser comes with an optional light that gives off a warm, candle-like glow. You can turn it on or off by pressing the smaller button on the base of the diffuser.

Ceramic Stone Cover

Our diffuser features a matte stone cover that is made out of the highest-quality ceramic.

BPA-free Plastic

The water reservoir and inner plastic lid inside our diffuser is made from high-grade, BPA-free plastic.

Safety-off Switch

No need to worry about whether you left your diffuser on—it will automatically turn off once it has run through its timed setting or is out of water.

Voltage

Our diffuser has a voltage of 110-240 volts and is compatible with North American outlets.

MAINTENANCE

Cleaning your diffuser is really simple, but also very important. To keep your diffuser looking and working like new, we recommend cleaning it every 2 weeks or 7-10 uses.

CLEANING THE STONE COVER

Step 1

Remove the stone cover from the base and run the whole piece under warm water.

Step 2

Apply a pea-sized amount of dish soap to the cover and use your fingers to buff out any marks or dirt. Note: do not use fabric or other materials because the stone's surface can pick up fibers.

Step 3

Rinse the diffuser and set it aside to air dry.

CLEANING THE WATER RESERVOIR

Step 1

Unplug your diffuser and remove the stone cover.



Step 2

Take off the inner plastic lid from the water reservoir. Using a damp cloth, wipe the inside of the water reservoir.



Step 3

Plug in the diffuser and fill up the water reservoir halfway. Add 1 tablespoon of white vinegar to the water reservoir and put the plastic lid and stone cover back on.



Step 4

Turn the diffuser on and allow the vinegar to run through the diffuser for about 30 minutes.



TROUBLESHOOTING

If you're having an issue with your diffuser, try these quick fixes first.

If there is no mist coming out of your diffuser:

Make sure the water is not higher than the water line shown on the water reservoir. If this doesn't solve the problem, try emptying the water reservoir and gently wiping it out with a paper towel. Rinse out the inner plastic lid as well, and follow the instructions for cleaning the inside of your diffuser. If there is still no mist coming out, don't hesitate to reach out to us.

If your diffuser is spilling water:

Don't panic! The first thing you should do is turn off your diffuser. Make sure that the inner plastic lid and the stone cover are properly in place. If the diffuser continues to leak or spill water, get in touch with us and we'll happily help.

If there is a little bit of water left in your reservoir after a diffusing cycle:

No need to worry, this is totally normal. You're welcome to simply top it up and start running your diffuser again.

WARRANTY

At vitruvi we believe that everything should have 3 components: functionality, durability, and beauty. That's why we offer a 1-year warranty on all our diffusers. If anything goes wrong with your diffuser within your first year, please reach out to us and we'll be happy to replace it.

REPLACEMENT PARTS

We know life happens—if you need a replacement part for your diffuser, you can order it off our website. You can also reach out to us and we'll help you get what you need to have your diffuser working properly again.

Stone Covers - \$25

Cords - \$10

BPA Free Plastic Lid - \$5

SPECS

Power:	Input: AC 100-240V 50/60Hz 0.5A Output: DC 12V 1A
Power Consumption:	10 W, 100 hrs operation is 1 kw/h
Frequency:	Ultrasonic Vibration 2.5 MHz
Materials:	Stone Cover: Ceramic Base: ABS Plastic Water Reservoir: Polypropylene O-Ring: Silicon Lens: Polycarbonate
Dimensions:	3.4 x 3.4 x 7 in 86 x 86 x 179 mm
Weight:	1.1 lb .52 kg

Get In Touch

Our team would love to chat or help with anything we can!
Give us a call at 1-844-484-8788 or email us at hello@vitruvi.com

VITRUVI