G R A N D T O U R CHRONOGRAPH SERIES









THANK YOU!


Thank you for chosing a watch from Brayur!

Your watch has been designed, assembled and tested in Sweden, with the greatest care and attention to details.

We hope you will enjoy your new watch for many years to come!


Kind regards,

Magnus & Johan, founders

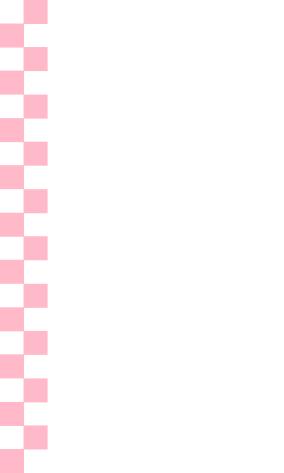


CONTENTS

p.9	Setting the Time &		
	Chronograph Functions		
p.15	Care & Maintenance		
p.21	Specifications		
p.27	Measurements		
p.31	Warranty		
n 35	Contact information		

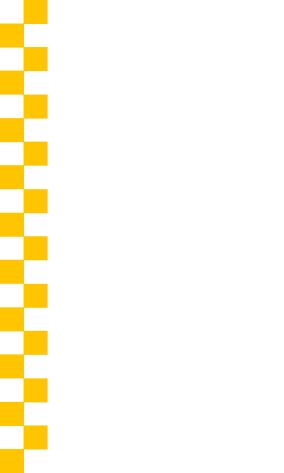

SETTING THE TIME & CHRONOGRAPH FUNCTIONS

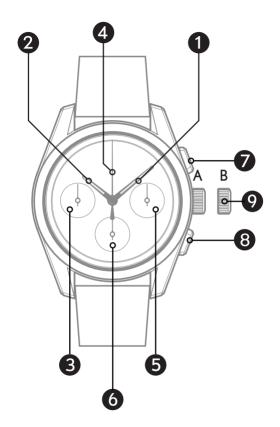

1	Minute hand
2	Hour hand
3	Running seconds
4	60 seconds chronograph
5	15 minute counter
6	12 hour counter
7	Chronograph start/stop
	pusher
8	Chronograph reset pusher
9	Crown with two positions

Setting the time


- 1. Gently pull out the crown (9) to position B to move the hour and minute hands.
- 2. Turn the crown clockwise or counterclockwise to set the correct time. Note that the second hand stops in this position.
- 3. After setting the time, push the crown back to position A for normal use and water protection.

In case your watch has stopped after not being used for a period of time, it's recommended to manually wind it to start. This is done with the crown in position A.

The crown should be turned clockwise, seen from the side, approximately 15-20 turns.

Chronograph function

- 1. Use the upper push button (7) to start and stop the chronograph.
- 2. The center chronograph hand (4) runs when started, and minutes and hours are counted on sub-dials (5 and 6).
- 3. Press the lower push button (8) to reset the chronograph

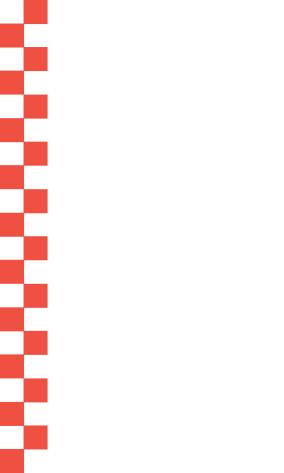

CARE & MAINTENANCE

Please follow these guidelines to get the best performance from your watch.

Movement

If the watch is worn for 12 or more hours daily, the automatic rotor winds the movement, eliminating the need for manual winding. In case the watch has stopped due to non-use, it's advisable to manually wind it using the crown in position A. Rotate the crown clockwise approximately 15-20 turns.

Please note that regular daily wear may not fully wind the movement, and a 62-hour power reserve cannot be guaranteed. For individuals with a sedentary lifestyle, manual winding may be necessary to ensure the watch stays operational.

The accuracy stated in the specifications section may change over time. As a mechanical watch, quartz watch accuracy cannot be expected.

Magnetic fields

Avoid exposing your watch to strong magnetic fields, such as those generated by X-ray machines and loudspeakers, as it can magnetize the watch movement, negatively affecting its performance and accuracy.

Shocks

Avoid exposing your watch to mechanical and thermal shocks as it may damage the delicate moving parts of the watch.

Service

Your watch consists of hundreds of small parts and needs occasional service to maintain its performance and accuracy. Full service is advised every 4-5 years.

Service is performed by an approved watch maker or sent to a Bravur service center. Contact us for more information.

Cleaning

You may use a damp cloth to clean your watch. A tooth brush and some water with mild detergent may be used for a more serious cleaning. Prevent the leather strap from coming in contact with moisture.

Water resistance


Your watch is tested to resist 10 ATM of static pressure in a controlled environment when new. Please note that this is not equivalent to water resistance. 10 ATM means

it's suitable for swimming but not scuba diving. The optional leather strap is not suitable for swimming. Gaskets and seals should be inspected and replaced regularly by a watchmaker to maintain full water resistance.

Note that the crown must be in position A to be protected from water and the chronograph function must not be operated.

Leather strap (optional)

Avoid letting leather straps come in contact with water, as it will shorten their lifespan.

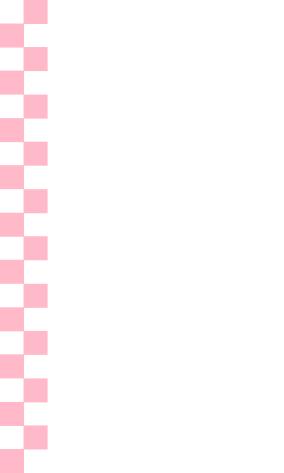

SPECIFICATIONS

Movement

Swiss Made Sellita SW511 b, 27 jewels, rhodium plated, self winding, stop second device, decorated rotor

Power reserveUp to 62 hours

Frequency 28 800 (4 Hz) 8 beats per second

Accuracy
Daily rate +/- 5 s/d
Isochronism (after 24h)
+/- 15 s/d

Sub dials

15-minute counter at 3H, 12-hour counter at 6H and running seconds at 9H.

Case

Stainless steel, 316L, 38.2 mm Some versions: PVD coating

Case back Flat sapphire crystal

Lug width

Crystal


Domed sapphire, inside antireflective coating.

Hands


Hour and minute: Rhodium plated, Super-LumiNova

> Water resistance 10 ATM


HANDBUILT IN BÅSTAD, SWEDEN

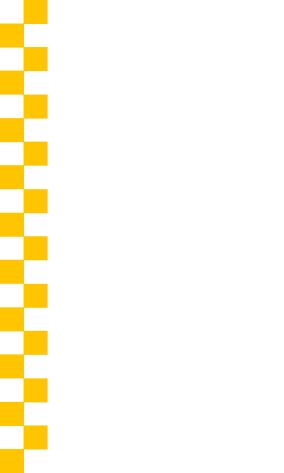

MEASUREMENTS

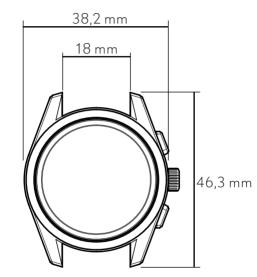



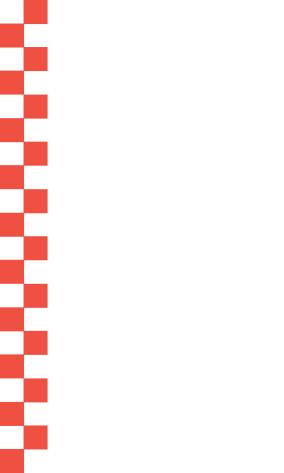

WARRANTY

Your Bravur watch is covered by a comprehensive two-year warranty from the original date of purchase.

The warranty encompasses repairs necessary due to defects in materials or workmanship under normal use.


Bravur's commitments in this regard are limited to repair or replacement at its discretion.

Please note that the warranty excludes the strap/bracelet and damage from excessive wear to the case, plating, crystal, or strap.

It's important to understand that the warranty does not extend to cover periodic service and maintenance.

Any service, maintenance, repairs, or servicing that is improperly

or incorrectly performed will void the warranty. If the service and maintenance, repairs, or servicing require opening the case, it must be conducted by a qualified watchmaker

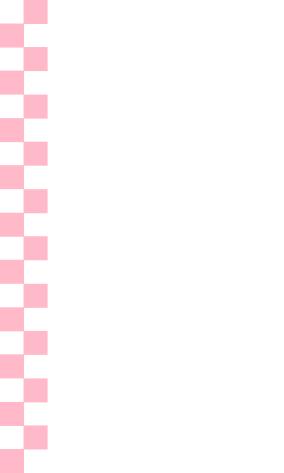

CONTACT INFORMATION

Bravur Watches AB Katarina Bangata 33 116 39 Stockholm Sweden

info@bravurwatches.com

