

## Blower Lubrication, and breather positions

Grease fittings for the **rear** (drive-end) of the blower are located at the back, **next to the pulley**, just in front of the beltguard.  
Use axle grease, injected at the **Zerk fittings** back here.. Pump grease in, until clean grease comes out on the underside, below the Zerk fittings, and wipe away.

Breather cap goes here.

**Fill** plug is here.

**Drain** plugs are here.

**Sight Glass** is here.

Keep oil level at upper half of sight glass.. no higher, no lower, and change the oil.. every 100-200 hours.

In the front oil bath use .. type ISO-150 hydraulic oil, or.. synthetic 75w-90 wt gear oil

call with any question..  
**Sirocco Performance**  
**Vacuums** division of..  
**PressureWasher.net**  
**619-448-8111**

