

Safety Precautions

- 1. Make sure tractor is stopped and in neutral with the transplanter lowered to the ground before getting on and off the unit.
- 2. No operator is allowed to be on the unit as it is raised and lowered.
- 3. No operator is allowed on the transplanter as it is transported to or from the field.
- 4. All operators must be seated before movement begins and remain seated until the transplanter is completely stopped.
- 5. Never leave the transplanter in the raised position.
- 6. Keep all shields and guards in place when operating the transplanter.
- 7. Never attempt repairs or maintenance while the transplanter is in motion.
- 8. Never put the tractor in reverse while the transplanter is on the ground.
- 9. Follow all safety instructions supplied by the tractor manufacturer to which the transplanter is mounted.

MACHINE IMPROVEMENTS

MECHANICAL TRANSPLANTER CO. IS ALWAYS STRIVING TO MAKE IMPROVEMENTS ON THEIR LINE OF EQUIPMENT. MECHANICAL TRANSPLANTER CO. RESERVES THE RIGHT TO MAKE IMPROVEMENTS AND CHANGES AT ANY TIME WITHOUT INCURRING OBLIGATIONS TO MAKE SUCH CHANGES OR ADDITIONS TO EQUIPMENT PREVIOUSLY SOLD.

Limited Warranty

Mechanical Transplanter Company warrants each item of new equipment manufactured by Mechanical to be free from defects in material and workmanship under normal use and service.

The obligation of Mechanical Transplanter Company under this LIMITED WARRANTY is limited to repairing or replacing as Mechanical may elect, and any parts that prove, in Mechanical's judgment, to be defective in material and workmanship within the first season's use or 45 consecutive days after initially placing equipment in operation whichever occurs first. Any outside work or alterations without Mechanical's written approval will render the LIMITED WARRANTY void.

Mechanical's obligation specifically excludes any liability for consequential damages, such as loss of profits, delays, expenses, damage to goods or property used in connection with or processed in or by the product sold, or damage to the product sold from whatsoever cause, whether or not such loss is due to negligence of selling dealer of Mechanical Tranplanter Company.

This limited warranty shall not apply to any item or machine which shall have been operated in a manner not recommended by the Company nor which shall have been repaired, altered, misused, damaged in an accident, neglected, tampered with or used in any way which in the Company's opinion adversely affects its performance and results.

No person is authorized to give any other warranties or to assume any other liability on behalf of Mechanical Transplanter Company, unless made in writing by Mechanical.

This limited warranty covers repair or replacement of Mechanical Transplanter Co. equipment only and does not cover crop loss, downtime, labor, damage to other equipment, etc.

This limited warrantly does not apply to exterior finishes, tires, chain links, bearings, or any other items sold by Mechanical Transplanter Co., but warranted by the original manufacturer except to the extent of their individual manufacturer's warranty.

THIS LIMITED WARRANT IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED. WARRANTIES OF MERCHANT ABILITY AND FITNESS FOR PARTICULAR PURPOSE ARE EXCLUDED, AS ARE ALL OTHER REPRESENTATIONS TO THE USER-PURCHASER, AND ALL OTHER OBLIGATIONS OR LIABILITIES, INCLUDING LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES, ON THE PART OF MECHANICAL OR THE SELLER.

Mechanical Transplanter Company * 1150 Central Avenue * Holland, MI 49423 Phone: 800-757-5268 * 616-396-8738 or Fax: 616-396-3619

Model 90 Mulch Layer Parts List

For units built after 2006

For units built after 2006	
1000BJD	Bearing for 4 Bolt Hub
9003	Shank for Coulter Disc
9003C	Coulter Disc with Hub & Bearing
9003CH4	4 Bolt Hub with Bearing
9003CH6	6 Bolt Hub with Bearing
9003CHB6	Bearing for 6 Bolt Hub
9005	Side Arm
9008	Rear Disc Mounting Bracket
9009	Smooth Stretch Wheel
9009	Smooth Wheel Arm
9012	Dirt Shield
9013	
	Swiveling Roll Holder Arm 3/4" Shaft for Roll Holder
9014	
9015	Unit Pickup Chain
9016L	Tightening Lever
9016LS	Left Arm of Roll Holder
9016RS	Right Arm of Roll Holder
9017	Gauge Wheel
9020	Right Gauge Wheel Bracket
9021	Left Gauge Wheel Bracket
9025	Wooden Cone
90258	Shaft for Wooden Cone
9026	Dirt Shield Mounting Bracket Pla
9027	Dirt Shield Mounting Bracket
9034	ML-8 1/2" U-Bolt
9042	Spring for Roll Brake
9059	Plastic for Leveler
9077	Clamp for Gauge Wheel
9078	Dirt Shield Main Arm
9079	Front Disc Mounting Bracket
9080	Roll Holder Mounting Bracket
9083	Clamp for Side Arms
9084	Leveler Pan
9086	Extra Roll Holder Arm
9088	3-Point Hitch
9090	Leveler Mounting Bracket
9091	3-Point Hitch Support Arm
FH229	3/8x3-1/2" Hex Head Bolt
FH351	1/2x3-1/2" Hex Head Bolt
FH527	3/4x4-1/2" Hex Head Bolt
FH521	3/4x3-1/2" Hex Head Bolt
FMB500	7/8" Machinery Bushing
FSC450	3/4" Set Collar
FSC500	7/8" Set Collar
FUB1221	1/2" U-Bolt for Pan Mount
FUB1224	1/2" U-Bolt for 2x4 Bar
FUB1242	1/2" U-Bolt for 4x2 Bar
FUB12435	1/2" U-Bolt for Gauge Wheel
FUB5824	5/8" U-Bolt for 2x4 Bar

MECHANICAL TRANSPLANTER COMPANY

1150 CENTRAL AVENUE * HOLLAND, MI 49423

PHONE: 616-396-8738 or 800-757-5268 * FAX: 616-396-3619

website: www.mechanicaltransplanter.com * e-mail: mtc@mechanicaltransplanter.com