CLEAN SEEDER OPERATION MANUAL MODEL JP-1


Please read this manual carefully before operating the seeder.



Distributed by: MECHANICAL TRANSPLANTER CO.
1150 Central Ave, Holland, Michigan 49423


ASSEMBLY & OPERATING INSTRUCTIONS

- 1. Check box for the seeder, 2 handle parts and package of sprockets. Your selected seed rollers will typically also be in this box.
- 2. Assemble handle by fastening middle section into the lower arms and tighten with the two thumb screws. Now put the top offset handle on. Adjust height and tighten knob. (See from cover for handle image) The top of front handle can be moved to one side to prevent walking in or on seed bed.

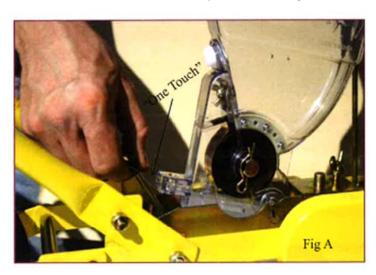


3. To remove the hopper from the seeder frame, simply push down on the "one touch" lever on the back side of the hopper. Lift the hopper up and out with our other hand (Fig A)

4. The seed rollers are easy to install after removing the hopper. Loosen the white thumb screw and pull down on the roller case. Next remove the clip from the sprocket shaft and pull the sprocket shaft and pull the sprocket through the roller and reinstall the clip pin. (Fig B) Adjust the brush so it lightly touches the seed roller to knock off extra seeds. Don't put it too tight as this will cause unnecessary wear. Swing the roller case back up and tighten thumb screw again. (Fig B1)

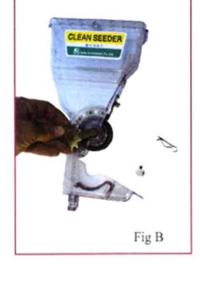



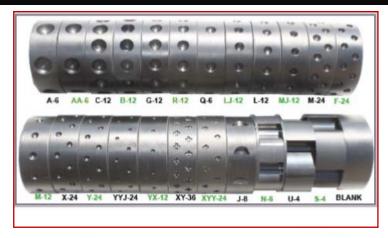

Selecting Seed Rollers

- 5. Individual seeds should be completely cradled within the hole of the roller, laying flush within the edge of the roller. If they are not flush, the seed could get knocked out by the brush, crack, or cause undo friction on the seed guide plate. It will also wear the guide plate quicker.
- 6. For larger seeds, such as larger corn, pea, or bean seeds remove the seed guide plate. (Fig. B2) When using the spreading shoes remove the seed guide plate. This will allow the seeds o fall more freely and also allow multiple seed to drop.
- 7. Our seed list (shown on last page) with the recommended rollers helps to select rollers required, however seeds can vary in size from one variety to another. In that case you may have to use a bigger or smaller roller. If your seed isn't on our list you can send us a sample and we will find a roller. We can custom make rollers by drilling deeper or larger holes.



Setting Spacing



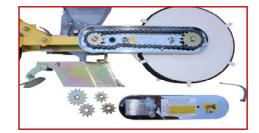


Fig. C

Fig. D

- 8. Spacing is determined by two factors. First, by the number of holes in the seed roller. Second, by using a combination of 6 sprockets that come with the seeder. By manipulating these sprocket combinations, the roller will spin faster of slower per ground speed, spacing the seeds closer or further apart. (Spacing Chart can be found in this manual or on the seeder chain guard)
- 9. First, remove the chain guard, (located by the front drive wheel) by loosening the two thumb screws. Look at the spacing chart on the chain guard.

Spacing Chart for JP Series Seeders * Spacing may change due to soil conditions											
Number of Teeth in Each Sprocket											
Rear Sp	rocket	14	14	13	13	11	11	11	10	10	9
Front Sprocket		9	10	10	11	10	11	13	13	14	14
	3 Hale	20	18	17	15	14	13	11	10	9	8
Number	4 Hole	15	14	13	12	11	10	8	7.5	7	6
of Holes in Seed	6 Hole	10	9	8	7.5	7	6.5	5.5	5	4.5	4
Roller	12 Hole	5	4.8	5	4	3.5	3	2.8	2.5	2.5	2
	24 Hole	2.5	2.5	2	2	1.8	1.5	1.3	1	1	0.5
* Shaded area shows inches between seeds											

Example: (See black circles)


If desired seed spacing is 7", use a 6 hole roller with a 11 tooth sprocket in rear and 10 in front.

- 10. The top two lines across are your sprocket combinations. (blue arrows) The number of holes in the roller corresponds with the red circle. The shaded area are the spacings available (in inches) by re-arranging the various sprockets.
- 11. Use the metal chain tightener when using the smaller sprockets. (Fig C previous page) With the larger sprockets the chain tightener is not needed. Run the chain straight as shown in (Fig D previous page). If there is too much slack, run chain over stud for thumb screw, but without the chain tightener. Be sure to store chain tightener in a safe place when not using.
- 12. For shoe depth adjustment, loosen nut and then loosen bolt just ahead of hopper. Move shoe up or down and retighten bolt, then tighten nut against frame to lock shoe in place. * DO NOT OVER TIGHTEN (Fig E) The soil covering blade can be adjusted for more or less pressure by loosening the screw and resetting. (Fig F)







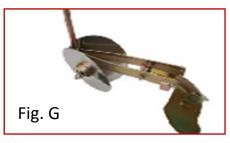

TP-1000D

Double Disk Opener

Used for trashy soil conditions




JSS5—4.72in
Spreading Shoe

Fig. I



JPDS
Double Shoe
One row, two lines of seed at 2"

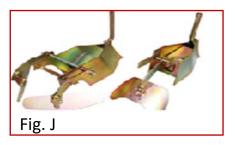


JSS3- 2.95in JSS2-2.36in Spreading Shoe

- 12. The optional double shoe comes with a double shoe guide which has splitter in the middle. By using the 24 or 36 hole rollers, you can have two rows of seeds 2" apart. (Fig H)
- 13. Three spreading shoes are available—2.36", 2.95", and 4.72" wide. By using a 24 or 36" hole rollers (or paddle rollers the N,U or S) many seeds can be spread over a wide area. Used for greens and other crops where a dense amount of seed is needed.

General Tips

- Work soil so ground is loose and level. Roto-tilling is best.
- Optimal speed is about 1.5MPH—Actual seed spacing may vary depending on soil condition and operating speed.
- Check seed rollers for waste or residue build up.
- ♦ Clean roller.
- ♦ Check seed depth.
- ◆ Check for correct seed spacing in field when starting to seed. Seed should be dry.
- Lubricate chain and other moving parts (never the roller)
- Check brush and guide plate for wear. Larger seeds like corn or beans may bridge in hopper.
 Watch for it and tap hopper to keep seeds flowing.

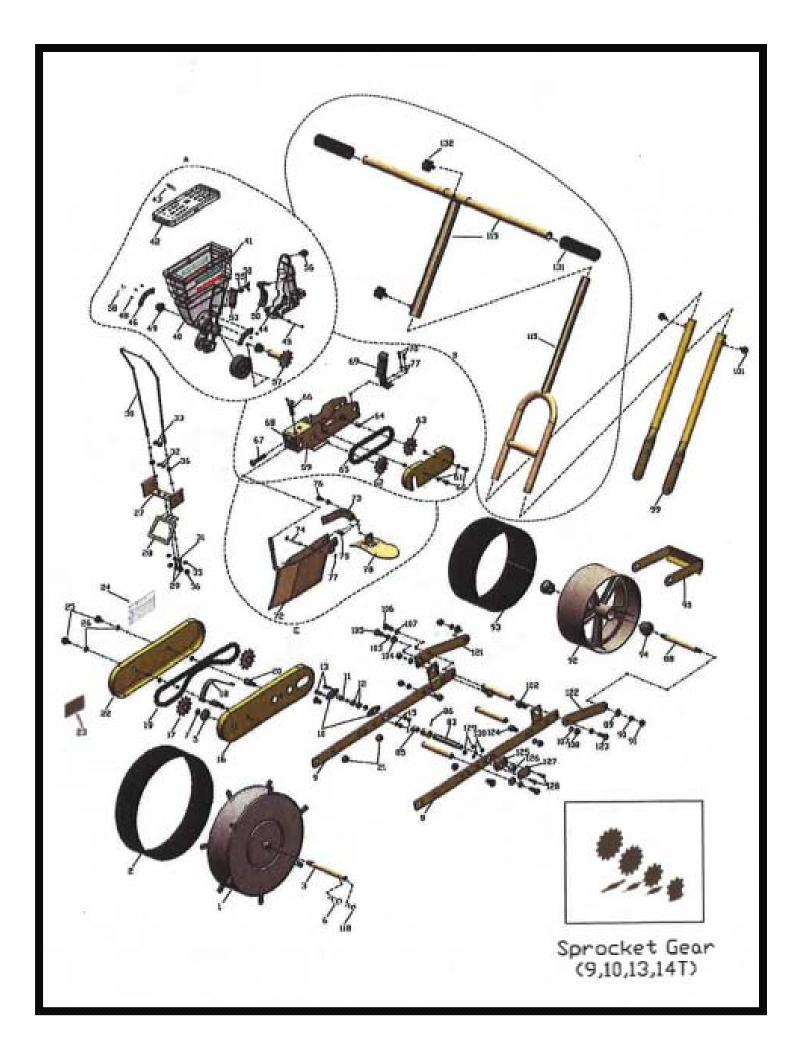

Part List

Part #	Part Name		
JJPA	Hopper Assembly		
JJPB	Hopper Mtg & Drive Assembly		
JJPC	Shoe Assembly		
JJP1	Drive Wheel		
JJP2	Drive Wheel Rubber		
JJP3	Drive Wheel Shaft		
JJP5	Flat Washer M12		
JJP6	Snap Pin 63L		
JJP7	E-Ring		
JJP8	Frame (L)		
JJP9	Frame ®		
JJP10	Bearing Case		
JJP11	Clutch Shaft		
JJP12	Bearing		
JJP13	Bolt (+) M5 x 14		
JJP14	Hex Nut M5		
JJP15	Spring Washer M5		
JJP16	Chain Cover		
JJP17	Chain Gear 11T		
JJP18	Chain Tension Spring		
JJP19	Chain #410 x 50L		
JJP20	Chain Cover Hex Nut 12 x 32L		
JJP21	Flange Nut M8		
JJP22	Chain Cover		
JJP23	Profile Table		
JJP24	Spacing Chart		
JJP25	Knob M6 x 11L		
JJP26	Flat Washer M6		
JJP27	Scraper Stopper		
JJP28	Drive Scraper		
JJP29	Hex Bolt M6 x 12L		
JJP30	Lift Handle		
JJP31	Flat Washer M6 (JJP26)		
JJP32 JJP33	Spring Washer M6		
JJP35	Hex Nut M6 Spring Washer M6		
JJP36	Hex Nut M6		
JJP40	Hopper		
JJP41	Clean Seeder Stickers		
JJP42	Hopper Cover		
JJP43	Spot Seeding Mark Sticker		
JJP44	Hopper Case		
JJP45	Hopper Case Shaft		
JJP46	Roll Rib		
JJP48	(+) Truss Bolt (SUS) M2 x 5		
JJP49	Oil less Bushing		
JJP50	Guide Plate		
JJP51	Guide Plate Protector Cover		
JJP53	Brush		
JJP54	Wing Bolt M5		
JJP55	Flat Washer M5		
JJP56	Knob M5		
JJP57	Hopper Sprocket 10T		
JJP58	Snap Pin 44L		
JJP59	Hopper Block		
JJP60	Hex Bolt M5		
JJP61	Spring Washer M5 (JJP15)		
JJP62	Hex Sprocket 10T		
JJP63	Idle Sprocket 10T		
JJP64	Du Bushing		

	T		
Part #	Part Name		
JJP65	Chain		
JJP66	Wing Bold M6		
JJP67	Hex Bolt M8		
JJP68	Hex Nut M8 (JJP91)		
JJP69	Grip		
JJP70	Hex Bolt (SUS) M4		
JJP71	Spring Washer (SUS) M4		
JJP72	Shoe Less Wing		
JJP73	Shoe Arm		
JJP74	Shoe Head Pin		
JJP75	Torsion Spring		
JJP76	Sem's Bolt M8 x 20L		
JJP77	Sem's Bolt M8 x 15L		
JJP78	Soil Recovering Wing		
JJP79	Guide Shaft (Front)		
JJP80	Sem's Bolt M8 x 15L		
JJP81	Plate Hexagon Head Bolt		
JJP82	Guide Shaft (Back)		
JJP83	Hex Shaft 12 x 94.5L		
JJP84	Clutch Bearing Collar		
JJP85	One Way Clutch Bearing		
JJP86	Spring Pin		
JJP88	Packing Wheel Shaft		
JJP89	Flange Nut M8		
JJP90	Spring Washer M8		
JJP91	Hex Nut M8		
JJP92	Packing Wheel		
JJP93	Packing Wheel Rubber		
JJP94	Packing Wheel Spacer		
JJP95	Scraper		
JJP99	Lower T- Handle Assembly		
JJP101	Knob M6 x 11L		
JJP102	Flange Bolt M8		
JJP103	Spring Washer M8 (JJP90)		
JJP103 JJP104	Flange Bolt M8		
JJP104 JJP105	Spring Washer M8 (JJP91)		
JJP105 JJP106	Hex Bolt M8		
JJP100 JJP107			
	Spring Washer M8 (JJP90)		
JJP108 JJP110	Hex Nut (JJP 91)		
	Sprocket 9 T		
JJP111	Sprocket 10 T		
JJP112	Sprocket 13 T		
JJP113	Sprocket 14 T		
JJP115	T-Handle Bar Assembly		
JJP118	Snap Pin 37L		
JJP121	Packing Wheel Arm (L)		
JJP122	Packing Wheel Arm (R)		
JJP123	Sem's Bolt M8 x 20L		
JJP124	Sem's Bolt M8 x 15L		
JJP125	Bracket		
JJP126	DU Bushing		
JJP127	Bracket Cover		
JJP128	Round Head Cross- Bolt		
JJP129	Hex Nut M5 (JJP14)		
JJP130	Spring Washer M5 (JJP15)		
JJP131	T-Handle Grip		
JJP132	Cap Knob		
JJP133	Hex Bolt M8		
JPDSG	Double Seeding Guide		
JPSG	Seed Guide		

Seed Name / Seed of	Recommended		
Comparable Size:	Roller		
Arugula	YX		
Basil	YYJ		
Bean-Green	N		
Beet	Ü		
Broccoli	Y		
	Y		
Cabbage Carrot	Y		
	MJ		
Carrot (coated) Cauliflower	Y		
Cilantro	MJ		
Chia	YYJ		
Collard	Y		
Corn	A, AA, N		
Cotton	С		
Cucumber	J		
Cut Flower	Send Samples		
Flax	n		
Kale	x		
Lettuce (Coated)	MJ		
Lettuce (Raw)	XY		
Mache	F		
Mustard	YYJ		
Okra	П		
Onion (Coated)	MJ		
Onion (Raw)	х		
Pea	BL		
Pepper	MJ		
Radish	х		
Rutabaga	Y		
Sorghum	MJ		
Sorghum (Coated)	U		
Soy	BL		
Spinach	F		
Sunflower	Send Samples		
Swiss Chard	U		
Tree Seed	Send Samples		
Turnip	YYI		
Blank Roller	Z		
Dialik Kullei	-		

Roller	Hole	Size	Hole Depth
	mm	Inches	
A	13.5	17/32	6.0
AA	12	15/32	6.0
В	10	25/64	7.5
С	11	16-Jul	5.5
R	9	23/64	3.5
G	9	23/64	4.5
Q	8	5/16	3.0
П	7.5	19/64	3.7
П	7	17/64	2.5
MM	6	15/61	2.5
MJ	6	15/64	3.5
M	5	13/64	2.0
F	5	13/64	2.5
x	4	5/32	2.0
Y	3.5	9/64	1.5
YYJ	3	1/8	1.7
YX	2.5	7/64	1.5

Seed Rollers	Available
A-6	\$21.00
AA - 6	\$21.00
BL-12	\$21.00
C-6	\$31.00
C-12	\$21.00
F-6	\$21.00
F-12	\$21.00
F-24	\$21.00
G-6	\$26.00
G-12	\$21.00
J-2	\$21.00
J-4	\$21.00
J-8	\$21.00
L-12	\$21.00
L-24	\$26.00
LJ-6	\$21.00
U-12	\$21.00
⊔-24	\$26.00
M-6	\$21.00
M-12	\$21.00
MJ-4	\$21.00
MJ-6	\$21.00
MJ-12	\$21.00
MJ-24	\$26.00
MM-12	\$21.00
MM-24	\$26.00
N-6	\$31.00
Q-6	\$21.00
Q-12	\$21.00
R-12	\$21.00
R-24	\$26.00
5-4	\$31.00
U-4	\$31.00
X-4	\$21.00
X-6	\$21.00
X-12	\$21.00
X-24	\$26,00
XY-4	\$31.00
XY-12	\$31.00
XY-24	\$31.00
XY-36	\$41.00
XYY-12	\$31.00
XYY-24	\$31.00
XYY-36	\$41.00
X11-30	\$21.00
Y-6	\$21.00
Y-12	\$21.00
Y-12 Y-24	\$26.00
YX-4	\$21.00
YX-4 YX-6	-
YX-12	\$21.00 \$21.00
YX-24	\$26.00
YYJ-6	\$21.00
YYJ-12	\$21.00
YYJ-24	\$26.00
YYX-12	\$21.00
YYX-24	\$26.00
YYX-36	\$31.00
Z-Blank	\$21.00
Custom	\$41.00