


16 POCKETS

Spacing	Sprocket Arrangement
6	A2D
7	A3D
8	A4D
8 ¼	B1D
9 ½	A5D
10 ½	B2D
11	A4C
12	B3D
12 ½	A5C
13 ½	B4D
14 ¼	A6C
16	B3C
17 ½	B5D

18 Tooth on Line Shaft
20 Tooth on Transplanter

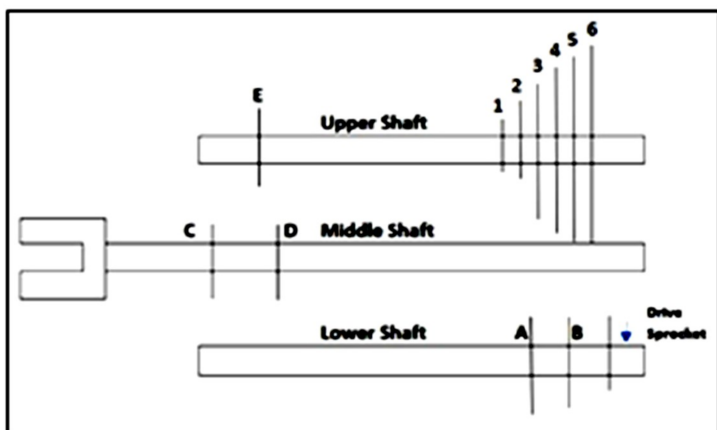

Spacing Chart

Model 1100 Direct Drive Unit

SPACING CHART FOR DIRECT DRIVE 1100 UNIT WITH 16 POCKET CHAIN						
Sprocket on OUTSIDE of Jackshaft	Sprocket on INSIDE of Jackshaft	Number of Teeth on Sprocket on Unit				
		15	17	20	22	24
15	24	6" 15.2 cm	6 1/2" - 7" 17.8cm	7 1/2" - 8" 20.3cm	8 1/2 21.5cm	9" 21.5cm
15	15	8 1/2" 22.8cm	10 1/2" 26.7cm	13" 33cm	15" 38.1cm	17" 40.6cm
17	15	10" 26.7cm	12" 31.7 cm	13" 35.5 cm	15" 38.1 cm	16" 40.6 cm
20	15	12" 30.5 cm	13 " 34.3 cm	15" 38.1 cm	17" 43.2 cm	18 1/2" 47 cm
22	15	13" 33 cm	14" 33.5 cm	18" 39.4 cm	20" 44.5 cm	21" 52 cm
24	15	16" 38.1 cm	17" 45.7 cm	Spacings above 18" use 6 pockets		
<p>Double any of the above spacings by using every other pocket (8 pocket). Make sure HITCH and UNIT are level or parallel to ground when planting.</p>						