 


Assembly Directions for Danoma Fire Pit & Fire Table

#DFPP2544, DRFT3644C

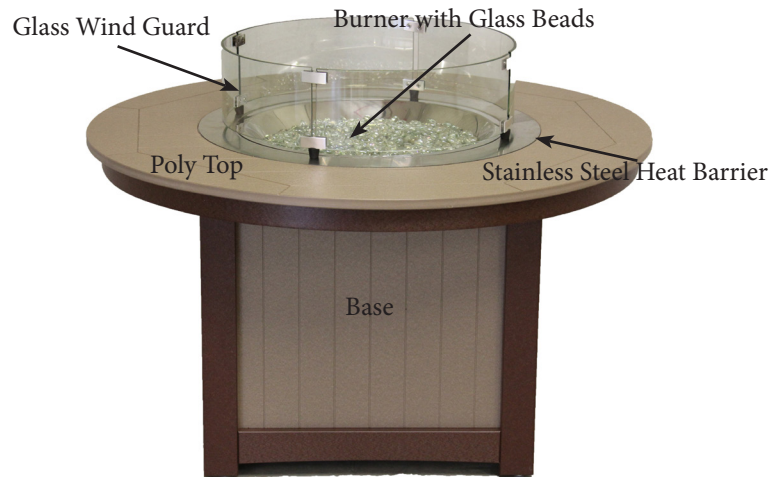

Danoma Fire Table with Poly Top



Danoma Firepit with Poly Top

Package Contents

 
- 1 Top
- 1 Base
- 1 Stainless Steel Heat Barrier (*Poly Top Only*)
- 1 Propane Tank Carrier
- 1 Burner
- 1 Igniter
- 1 Flex Tube
- 1 Burner Assembly
- 1 Glass Wind Guard
- 2 Pkg Glass Beads
- 1 Cover
- 1 Control Panel

Hardware Package

- 4 ¼" x 2½" Allen Head Bolts
- 4 ¼" Flange Nuts
- 4 ¾" Pan Head Screw
- 1 Allen Wrench

Tools/Items Needed:


- Hammer
- 7/16" Wrench
- Allen Wrench (included)
- 1 AAA Battery (not included)
- #2 Square Drive Bit
- Crescent Wrench

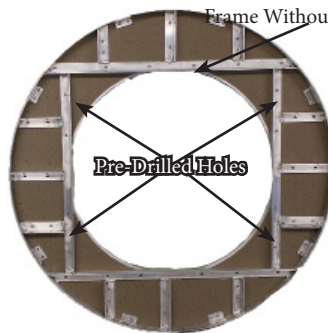


STEP #1 Place Fire Pit Top on Fire Pit Base. (please note place section of top without pre-drilled holes in the aluminum frame above the door of the base).



 STEP#2 Fasten Firepit Top to Firepit Base by inserting ¼" x 2 ½" Allen Head Bolts into pre-drilled holes in frame and base (please note to keep bolt head on outside of base and fasten frame opposite side of door first) and fasten with ¼" flange nuts. Fasten the control panel into routed out space in base panel with ¾" Pan Head Screws.

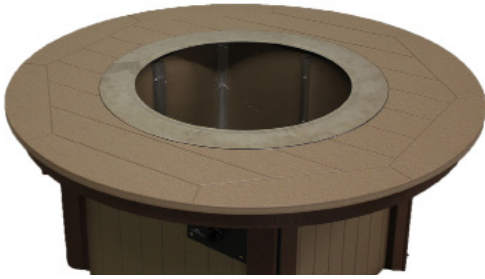

 STEP #3 (Poly Fire Pit Only) Place Stainless Steel Heat Barrier on top of aluminum frame located in the center of Fire Pit top. (please note keep the recessed edge of the Stainless Steel Heat Barrier turned upward). Remove protective sticker from Stainless Steel Heat Barrier.

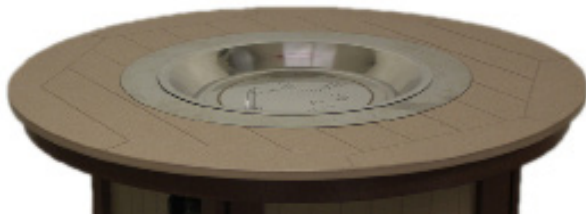

STEP #4 (Poly Fire Pit Only) Place Burner on top of recessed edge of Stainless Steel Heat Barrier.

(Concrete Fire Pit Only) Place Burner in center hole in top.

STEP #5 For installation of Burner, connecting gas, igniter and operation instructions see The Outdoor Great Room Crystal Fire Manual that is included with the burner.



STEP #6 Place Propane tank on Tank carrier and slide into center of base and close door.



STEP #7 Place glass fire gems or crushed glass into the burner and spread evenly throughout bowl. Place Glass Wind Guard (Poly Top Only) around Burner and your Firepit is complete!

Outdoor Fire Pits Proper Care & Maintenance

Poly Material: Poly Fire Pits are made from High Density Polyethylene (HDPE), a recyclable plastic that will never need to be painted or stained. It will not rot or splinter, and it contains an added UV protective agent to resist fading. Poly material is not affected by most corrosive substances, and will not promote bacterial growth.

Cleaning: To maintain the beauty of your Poly Fire Pit, clean it regularly with soap and water. Use only nonabrasive soaps. While most colors need to be cleaned only several times per year, certain colors such as White, (but not limited to this color) need to be cleaned frequently in order to maintain its original beauty. In extreme situations and with colors such as White, spray the material thoroughly with a nonabrasive cleaner then scrub using a soft bristle brush and rinse it off with warm clean water. If needed spray the Poly Fire Pit with a nonabrasive cleaner and wash it using a high pressure washer. Do not place the tip of your pressure washer closer than 12", or it will tear into the poly material. Your pressure washer should not exceed 2,800 PSI.

Melting and Stains: A Glass Wind Guard must be installed on Fire Pits with Poly Tops at all times to keep flames from touching the material and avoid melting. Lighting or burning a fire pit without the glass wind guard installed may result in melting of the poly material and voids the warranty. If any colored liquids such as wine, or soft drinks are spilled on your top, clean immediately to avoid possible stains. Do not place flower pots or any items that will leave stains on fire pit. Do not place hot items directly on the top to avoid melting.

Stainless Steel Components: Stainless Steel Heat Barrier used on Poly Tops to distance flames and heat from the material are 304 grade stainless steel and may rust in normal outdoor conditions and/or coastal areas. In extreme conditions such as coastal areas, it is recommended to regularly rinse Stainless Steel Components with fresh water to help prevent rusting. **When not in use, covering your fire pit with a waterproof fire pit cover is recommended to minimize the chances of rust.**

Burner: See page nine (9) of the Crystal Fire Manual included with the Burner. Carefully read and follow all warnings and instructions regarding use, service and maintenance.



OUTDOOR FIRE PIT WARRANTY

Berlin Gardens, LLC (“Berlin Gardens”) extends the following warranty to the original purchaser of its outdoor fire pit. This warranty applies only to the original owner of the Product and is non-transferable. The warranty is effective starting on the date of purchase.

Polyethylene Fire Pits with a Polyethylene Top are warranted to be free of original defects in workmanship and materials for a period of **ten (10) years** of residential use or **two (2) years** of commercial use. A glass wind guard must be installed on Fire Pits with Polyethylene Tops at all times to keep flames from touching the material and avoid melting. Lighting or burning a fire pit without the glass wind guard installed may result in melting of the polyethylene material and voids this warranty. Polyethylene is a synthetic product and may scratch or fade slightly when exposed to sunlight or stain after prolonged contact with other substances. Some expansion and contraction is to be expected due to extreme changes in humidity and temperature. This warranty also does not cover scratching or chipping of polyethylene, however, this warranty shall not limit any warranties made by the manufacturer for such items which may extend to you. **Stainless Steel Heat Barrier** used on Polyethylene Tops to distance flames and heat from the Polyethylene material are 304 grade stainless steel and may rust in normal outdoor conditions and/or coastal areas. Rusting that does not affect the structural integrity of the Stainless Steel Heat Barrier is not covered by this warranty. When not in use, covering a fire pit with a waterproof fire pit cover is recommended and may minimize but not eliminate the possibility of rust.

At its option, Berlin Gardens will repair or replace these products without charge for materials and labor, providing our inspection indicates that an original defect exists. Should Berlin Gardens choose to replace the product, and the product is no longer available at the time warranty service is required, a substitution of similar performance and equal or greater value will be made. The foregoing shall not be considered defects in materials or workmanship and are not covered under this warranty. Stainless steel fasteners are warranted not to fail structurally for the applicable warranty period. Stainless steel may rust in certain extreme conditions (such as coastal areas) if not maintained. This warranty does not cover rusting fasteners or structural failure due to rusting fasteners, damage caused by unauthorized service or repair, alteration of this product, **abuse or misuse**, normal wear and tear on materials, or any attempt to use the product in a manner or for a purpose other than for which it is customarily intended.

Stainless Steel Burners and all part and components for burners are provided by “The Outdoor GreatRoom Company”. The Outdoor GreatRoom Company warrants this Outdoor GreatRoom Product will be free from defects in material and workmanship for a period of **one (1) year**. Stainless Steel parts and assemblies carry a limited lifetime warranty. Slight rusting on burners and components of the burners are not covered by this warranty. This warranty is subject to the conditions, exclusions and limitations described in the “THE OUTDOOR GREATROOM COMPANY OUTDOOR PRODUCTS LIMITED WARRANTY” found on page 18 of the Crystal Fire instruction manual included with a fire pit burner. Warranty claims for Stainless Steel Burners may be made to Berlin Gardens and Authorized Berlin Gardens Dealers but will be processed by the Outdoor GreatRoom Company and be handled according to The Outdoor GreatRoom Company Warranty.

Glass Wind Guards, Glass Fire Gems, Fire Pit Covers and other Fire Pit Accessories are not covered in any way by this warranty.

Berlin Gardens makes no warranties other than those which are specifically described herein. Berlin Gardens makes no implied warranty of merchantability or implied warranty of fitness for a particular purpose. Some states do not allow limitations of implied warranty so this limitation may not apply to you. In that event, any such implied warranty is limited to that required by law. Berlin Gardens shall not be liable for incidental or consequential damages, including, but not limited to, lost profits or other economic or commercial losses. The sole remedy provided in this warranty is repair or replacement of this product. Any cost of shipping and handling shall be paid by you. Claims for original defects in workmanship or materials shall be made in writing to Berlin Gardens no later than ten (10) days after the expiration of the warranty period at the following address:

Berlin Gardens, LLC
P.O. Box 446
Berlin, Ohio 44610
Phone: (800) 593-3411
Email: customerservice@berlingardensllc.com

Your claim must include a picture and an explanation of the original defect, and include your name, address and telephone number. In the event of a non-warranty repair, you will receive a written estimate prior to any repair work being performed. This warranty gives you specific legal rights and you may have other rights which vary from state to state. As defined by federal law, this is a limited warranty.