

Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (833) 665-6300 or email support@polywoodoutdoor.com





Share your space

We love to see where our furniture ends up — snap a pic and share it on Instagram or Facebook!

#polywood




Watch & Learn

For assembly videos and more, visit youtube.com/polywood



Assembly Instructions

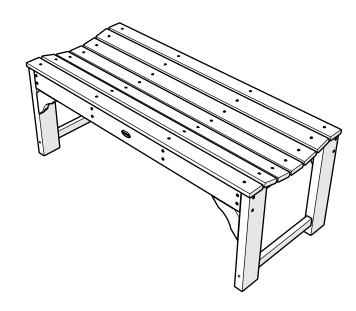

BAB148, BAB160 Traditional Garden Backless Bench



20-Year Warranty

To view our full warranty, please visit polywoodoutdoor.com/warranty

Easily register your product using one of the methods below:

Text POLYWOOD to 71403

Receive a link to register online

- or -


Register on our website

register.polywoodoutdoor.com

- or -

Send a Picture

Take a photo of the icon below and text it to 71403 (US only)

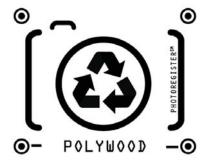



Cleaning Tips

Even POLYWOOD gets dirty — here are some ways to help keep it clean:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

 
TOOLS



Phillips Screwdriver (Screw Gun Recommended) (Not Included)

PARTS

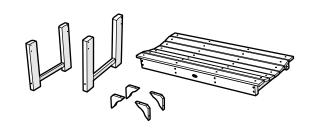







3" Phillips Screw - H10X3

Something missing? Call (833) 665-6300


1

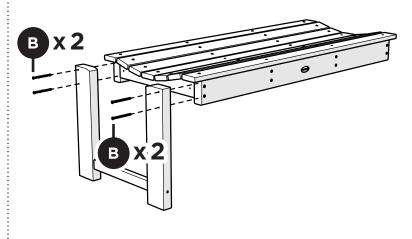


2

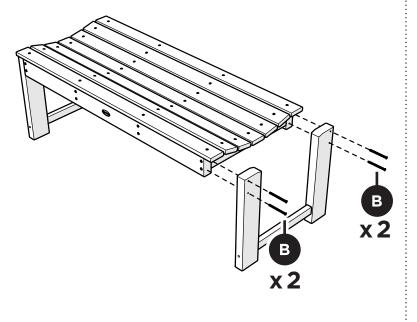

3

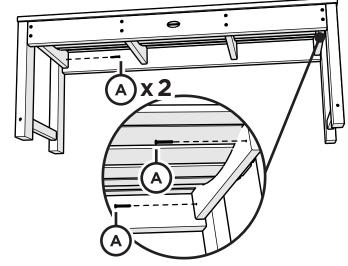

4

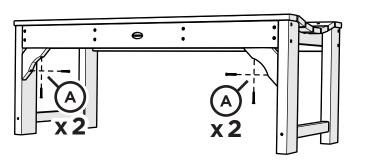

5

