

ACE METHOD: REGULAR MAINTENANCE

| After Each Use | | |
|--|---------------------------------|------------|
| INSTRUCTIONS | PRODUCT | QUANTITY |
| Run spa on clean mode or run jets for 30 minutes | | |
| ☐ Test mineral and chemical levels | FreshWater Salt Test Strips | |
| ☐ Shock water to keep clean and clear | Renew Granular | 1 cap |
| Weekly Maintenance | | |
| INSTRUCTIONS | PRODUCT | QUANTITY |
| Run spa on clean mode or run jets for 30 minutes | | |
| ☐ Prevent scale formation | Defender | 2 oz. |
| ☐ Shock water to keep clean and clear | Renew Granular | 1 cap |
| ☐ Test water levels | FreshWater Salt Test Strips | |
| ☐ If needed, adjust aklalinity and pH | Spa Up/Spa Down | |
| Monthly Maintenance | | |
| INSTRUCTIONS | PRODUCT | QUANTITY |
| Remove filters and soak for 3-12 hours | Filter Clean | |
| Re-install hot tub filters | | |
| Replace Salt Water Cartridge | FreshWater Salt Water Cartridge | |
| Quarterly Maintenance | | |
| | PROPLICE | OLIANITITY |
| INSTRUCTIONS | PRODUCT | QUANTITY |
| Clean ACE Salt Cell | FreshWater ACE Cell Cleaner | |
| ☐ Clean spa cover | Cover Care & Conditioner | |
| ☐ Follow Start-Up instructions every 3-6 months | | |