
ASSEMBLY INSTRUCTIONS

TEAK WICKER SOFA BENCH WITH CUSHION IT-141211T

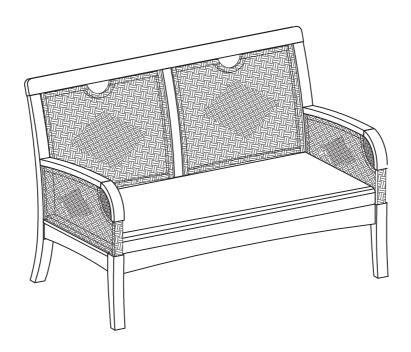

CUSTOMER SERVICE INFORMATION

Please do not return to the store. If any pieces are missing call our toll free number at 1-888-287-4275 from 9:00 am to 5.00 pm CST (Monday to Friday) for replacement parts. For faster service, have the style number handy when calling.

GENERAL INFORMATION & TIPS

- 1. Please read the assembly instructions prior to assembling the bench.
- 2. To avoid damage, assemble the bench on a non-abrasive surface such as carpet.
- 3. Make sure all bolts tightly fastened before the bench is used.
- 4. This bench is not for commercial use.

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.


TOOLS REQUIRED

1. A Phillips screwdriver is necessary for assembly. It's not included in hardware list.




PARTS AND HARDWARE LIST

A1. Right side frame	A2. Left side frame	B. Back rest	C. Seat
QTY: 1 pc	QTY: 1 pc	QTY: 1 pc	QTY: 1 Pc
D. Washer	E. Half Moon Washer	F. Spring Washer	G. 1 1/2" Bolt
QTY: 4 Pcs + 1	QTY: 4 Pcs + 1	QTY: 4 Pcs + 1	QTY: 8 Pcs + 1
H. 7/8" Screw			

 


QTY: 2 pc + 1

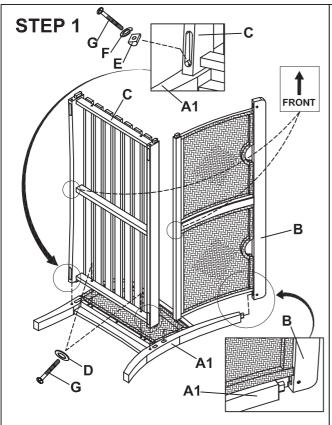


- Attach the Back Rest (B) and Seat (C) into the Right Side Frame (A1). Secure seat with 1 1/2" bolt (G) and Washer (D) on the side support, and also with 1 1/2" bolt (G), Spring Washer (F) and half moon washer (E) on the front and back support, as shown. Tighten all bolts with Philips Screwdriver.
- STEP 2 В **A2** В

-Attach the Left Side Frame (A2) onto pre-assembled part from step 1.

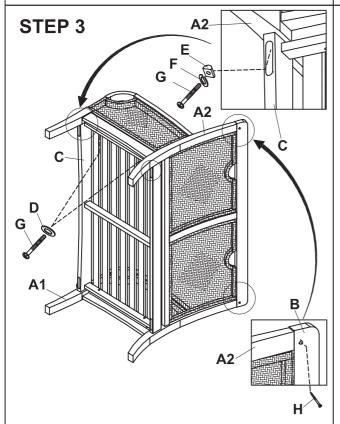

- Secure left side frame (A2) by repeating step 1.
 Secure back of the backrest (B) with 3/4" Screw (H), as shown.
- Tighten all bolts and screws with Philips Screwdriver.

STEP 4

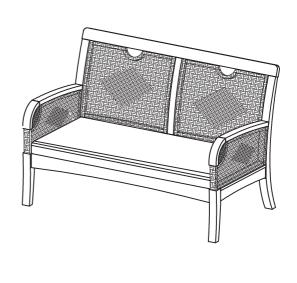

Upright the chair.

- Make sure all parts are correctly installed and all bolts and Screws are tighted completely using screwdriver.
- Install the cushion

THE BENCH IS NOW READY FOR USE.