




**CAMBRIDGE  
CASUAL**

## **ASSEMBLY INSTRUCTIONS**

# **EXTENDABLE DINING TABLE CC-320617**

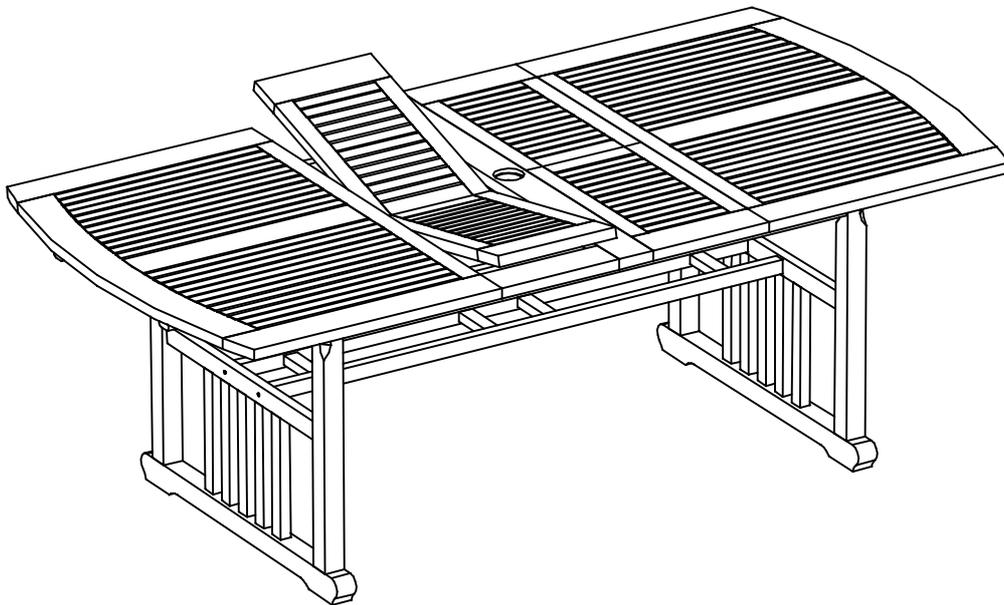

### **CUSTOMER SERVICE INFORMATION**

**Please do not return to the store. If any pieces are missing call our toll free number at 1-888-287-4275 from 9:00 am to 5:00 pm CST (Monday to Friday) for replacement parts. For faster service, have the style number handy when calling.**



**CAMBRIDGE  
CASUAL**

## GENERAL INFORMATION & TIPS



 
1. Please read the assembly instructions prior to assembling the table.
2. To avoid damage, assemble the table on a non-abrasive surface such as carpet.
3. Make sure all bolts tightly fastened before the table is used.
4. This table is not for commercial use.

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.

Allen wrench. For tightening all bolts.  
It's included in hardware list.




## PARTS AND HARDWARE LIST

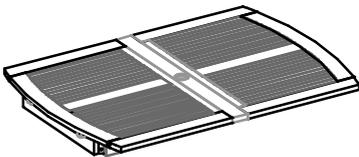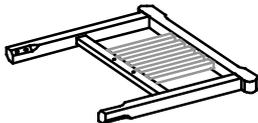A. Table top	B. Leg frame	C. Cross bar
		
QTY: 1 pc	QTY: 2 pcs	QTY: 1 pc
D. 2 3/4" Bolt	E. 1 1/2" bolt	F. Spring Washer
		
QTY: 8 pcs + 1	QTY: 4 pcs + 1	QTY: 8 pcs + 1
G. Washer	H. Umbrella hole plug	
		
QTY: 8 pcs + 1	QTY: 1 set	


# ASSEMBLY INSTRUCTIONS

## STEP 1

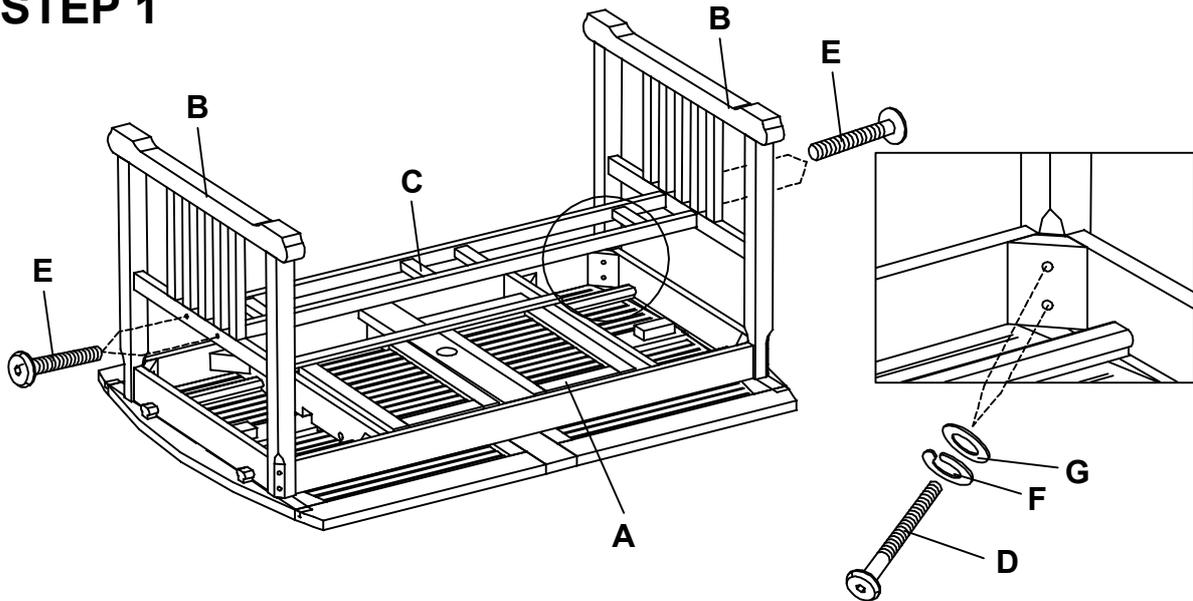


- Put the table (A) face down on a flat non-abrasive surface.
- Attach the leg frames (B) into table top (A) and secure using washers (G), spring washers (F) and 2 3/4" bolts (D) as diagram shown.  
\*\* DO NOT TIGHTEN ALL BOLTS YET.
- Next, attach the cross bar (C) into pre-assembled leg frames (B) and insert 1 1/2" bolts (E) into predrilled holes as shown.
- Make sure all parts are correctly connected and tighten all bolts completely using allen wrench.
- Turn the table upright.

## STEP 2

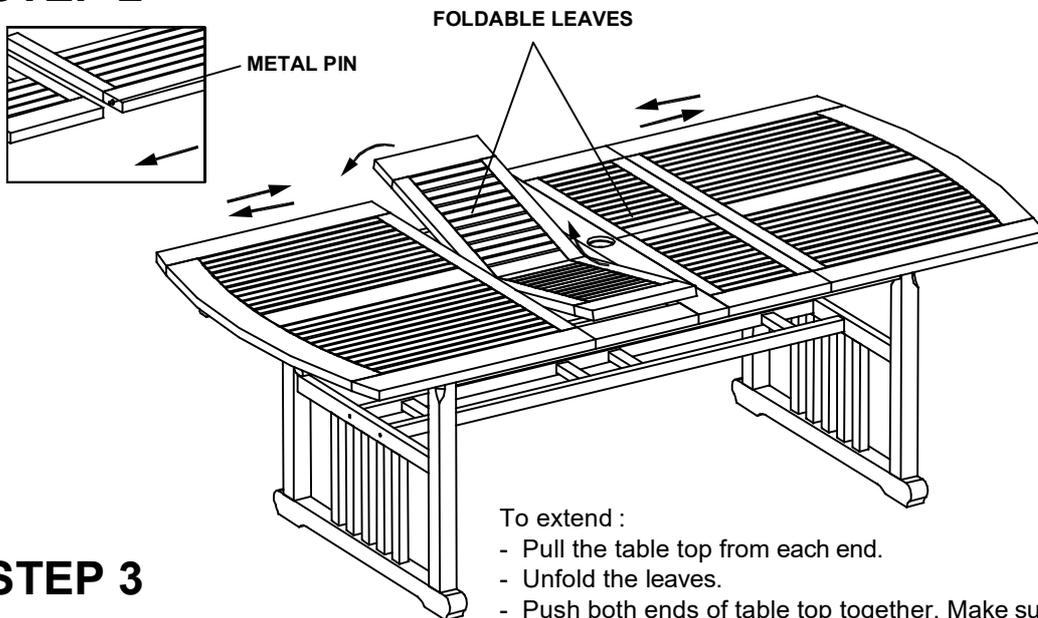

## STEP 3

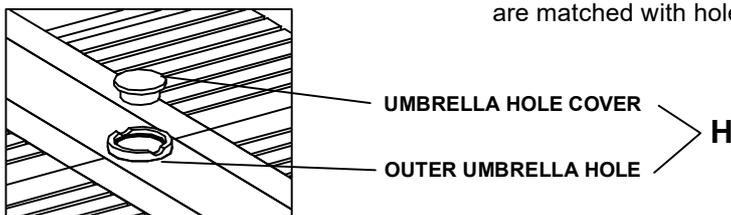

Put the umbrella hole plug (H) into hole of table top (A) as diagram shown.

