 


**ASSEMBLY INSTRUCTIONS**  
**DAYBED SWING**  
**IT-130986NT**

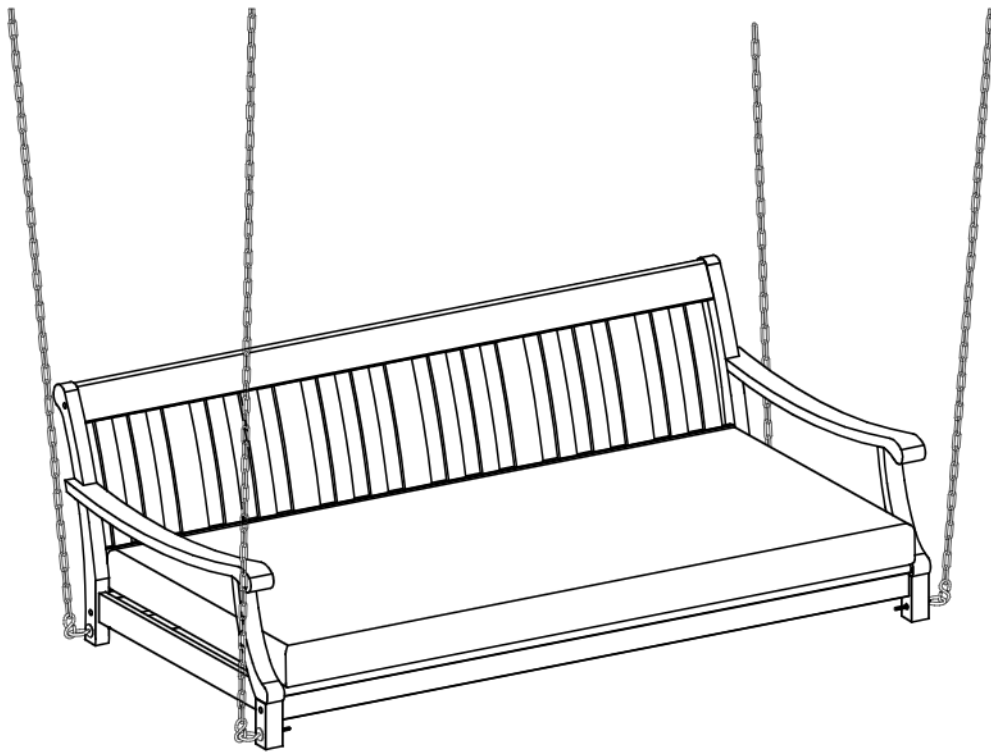

**CUSTOMER SERVICE INFORMATION**

Please email us at [info@cambridge-casual.com](mailto:info@cambridge-casual.com) for assembly tips, report damage, or request parts.  
For faster response, please write down item number, code for missing parts,  
attach the purchase receipt and picture of damaged parts.

 
## GENERAL INFORMATION & TIPS

1. Please read the assembly instructions prior to assembling the swing.
2. To avoid damage, assemble the swing on a non-abrasive surface such as carpet.
3. Make sure all bolts, screws and nuts tightly fastened before the table is used.
4. This swing is not for commercial use.

 
 
 
 







 

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts, screws and nuts.

### TOOLS REQUIRED

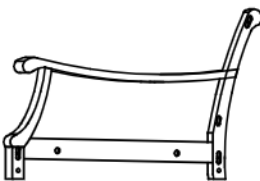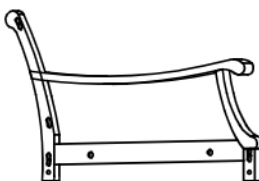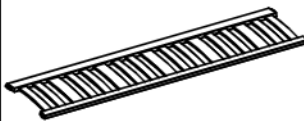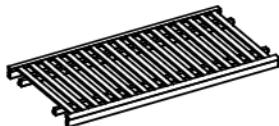 
1. 8" Philips screwdriver (Not provided).  
- For tightening all bolts and screws.
2. Rubber Mallet (Not provided).  
- For tapping in the wooden caps.



## PARTS AND HARDWARE LIST


A1. Right side frame	A2. Left side frame	B. Back support	C. Seat	
				
Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc	
D. 1 1/4" Bolt	E. 1 1/2" Bolt	F1. Chain with short bolt	F2. Chain with long bolt	
				
Qty : 4 Pcs+1	Qty : 2 Pcs +1	Qty : 2 Pcs	Qty : 2 Pcs	
G. Washer	H. Nut	I. Wooden cap	J. Wrench	K. 1 3/4" Screw
				
Qty : 4 Pcs+1	Qty : 4 Pcs	Qty : 6 Pcs +1	Qty : 1 Pc	Qty : 4 Pcs + 1

## STEP 1

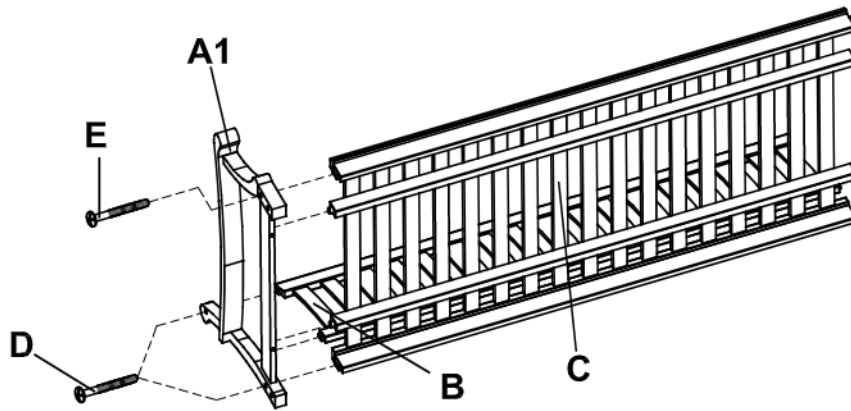


Attach backrest (B) and seat (C) into right side frame (A1). Secure Seat (C) using 1 1/2" bolt (E) and backrest (B) using 1 1/4" bolts (D).

## STEP 2

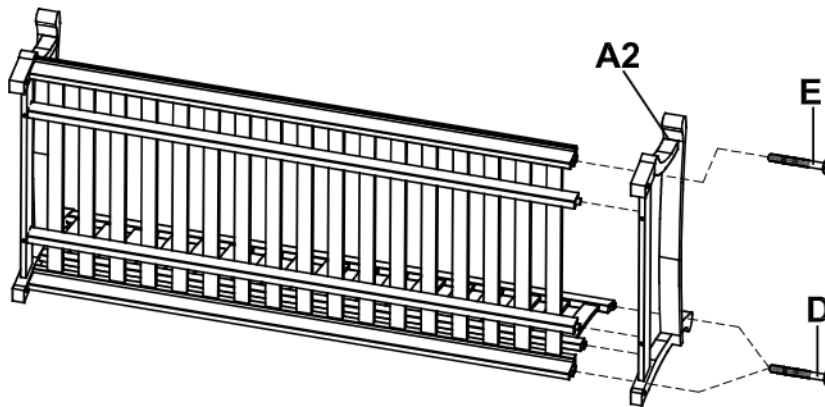 


Attach Left side frame (A2) to the assembly from step 1, secure using 1 1/2" bolt (E) and Backrest (B) using 1 1/4" bolts (D).

## STEP 3

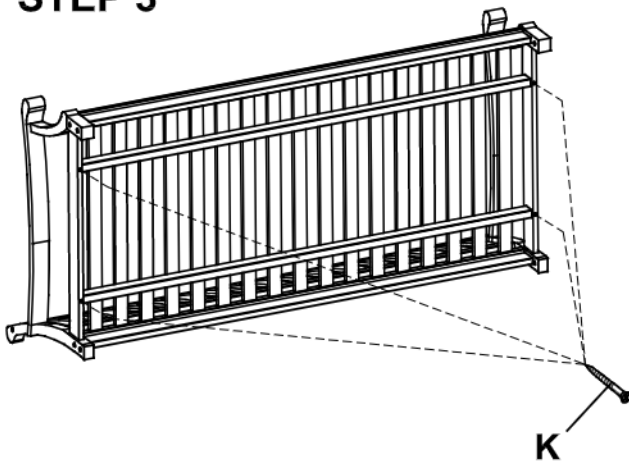 


Secure seat (C) and side frame (A1&A2) using 1 3/4" screws (K). As shown.

## STEP 4

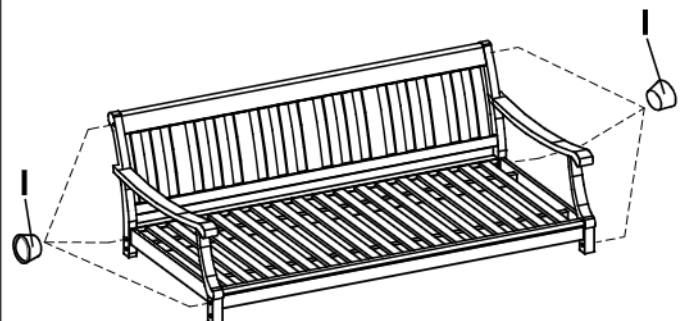 


Tap in the wooden caps (I) to cover bolts head using rubber mallet.

## Step 5

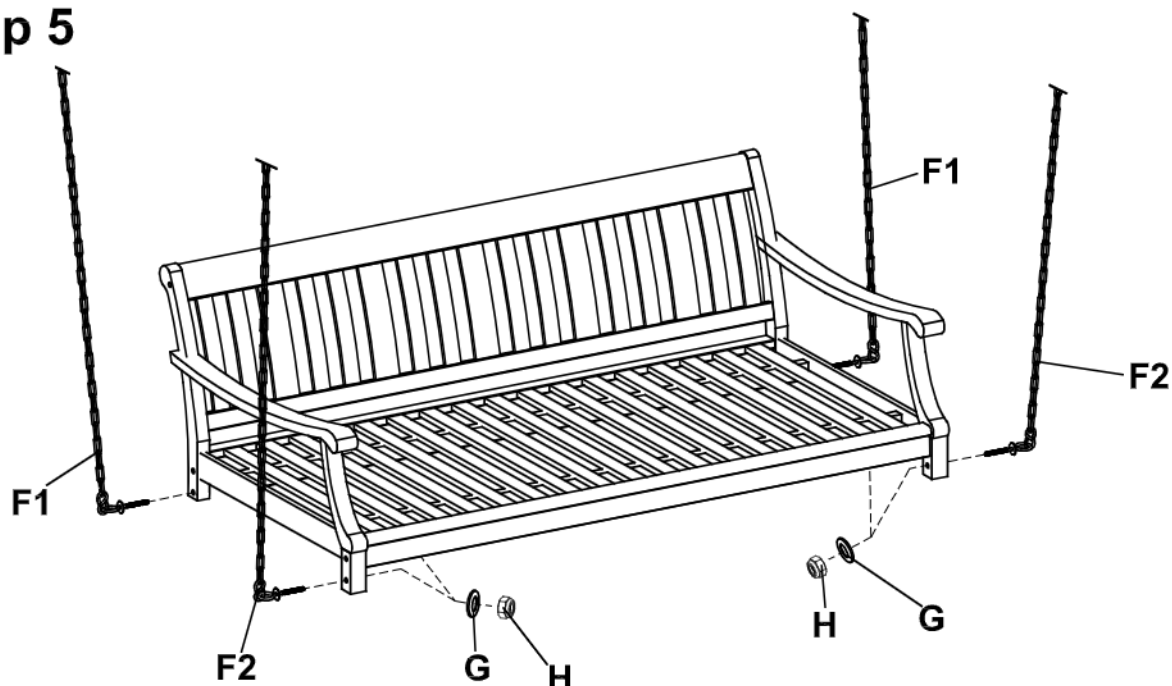 

Install the chain with long bolt (F2) to front of side frame (A1 & A2), and chain with short bolt (F1) to the back of side frame (A1 & A2). secure using washer (G) and Nut (H), as diagram shown.



## Step 6

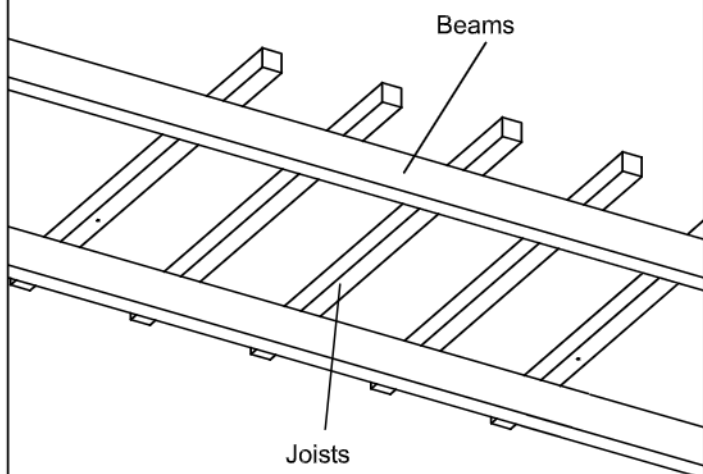 

How to install the swing hanger


Find the right beam or joist.  
Make sure the joist or beams are strong and can support the swing length and weight capacity.  
If unsure of the strength or location of the joists or beams, contact a professional contractor.

## Step 7

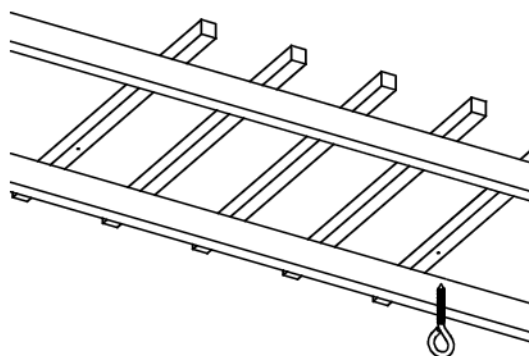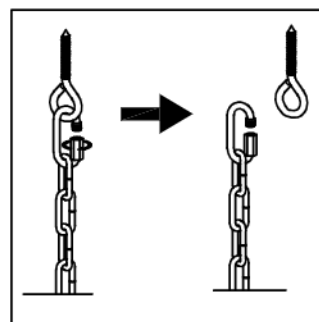  



Remove the hanger screw from the chain kit for easy installation.

## Step 8

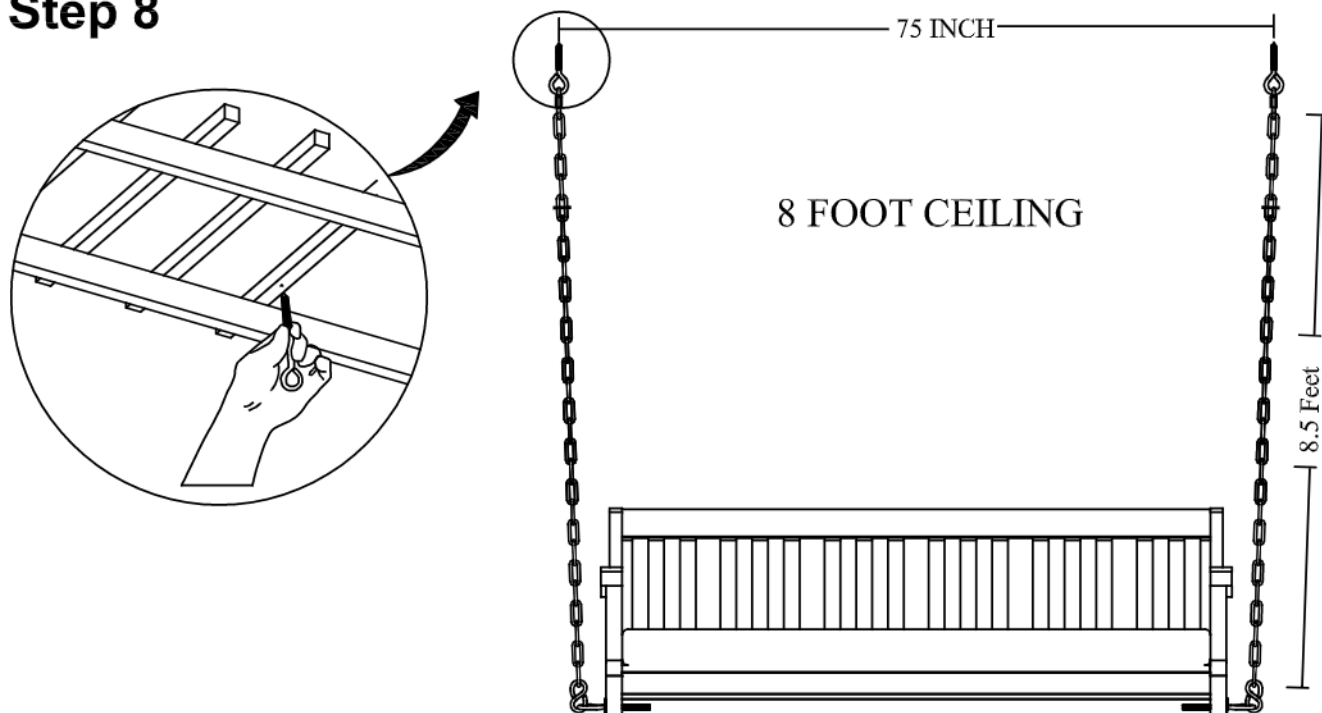 

Attach the front hanger screws with a distance of 5 inches beyond the actual swing length (75 inches). then the 35 inch rear hanger screw. Mark the first two points the hanger screw will go. Next, measure the swing length plus 1-2 inches and mark the other two places. The next step, pre-drill pilot holes using Ø6mm drill bit size and attach the screw to the joist or beam.

## Step 9

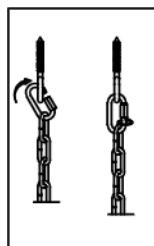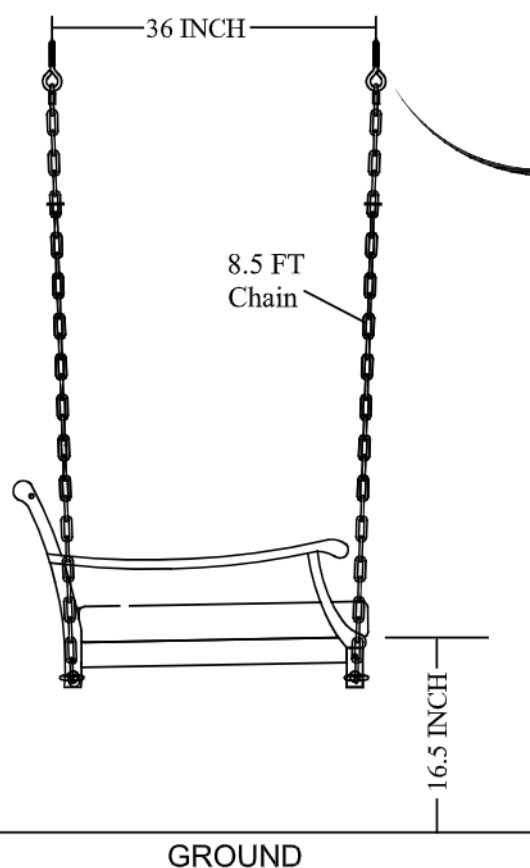  

To hang up the swing  
How to hang the daybed swing

Set the swing down on the ground under the swing hangers. Have someone lift one side of the swing and link the carabiner onto the hanger screws. Next, follow the same step for the other side. Make sure the swing is level.

Adjust the swing to your comfort, making sure it is level. Recommended height is 16.5 inch from the bottom of the seat to the ground.

### NOTICE :

Install not less than 6 feet from any obstruction such as fence, garage, house, over hanging branch laundry lines or electrical wire.

Check the ceiling for any signs of cracking or warping. If you notice any damage, remove your swing and consult a professional contractor or structural architect.

## **MAINTENANCE**

Wood is a living material that continues to respond to climate condition even after being made into a piece of furniture.

After assembly rub the furniture with soft rag to remove any residual dust. Wood is a natural material whose appearance will change when left outdoors. This product has been treated prior to leaving the factory. To clean, use mild soap and warm water. Do not use abrasive material, cleansers or bleach products, Dry thoroughly with soft cloth,

Even though this piece of furniture is extremely durable and long lasting, to prolong life we recommend bringing it indoors during freezing temperatures. Place it at a shaded area and do not leave it in standing water or on wet ground.

Do not put hot items directly on furniture surface.

Do not store furniture in areas that have central heating or cooling vents to prevent excessive drying of the wood. This will decrease the furniture's longevity.

Do not write on furniture without a padded barrier to protect the surface.

In order to maintain the product's durability, please read carefully.

**Do not leave your furniture in puddles of water or on wet ground.**

**Cover your furniture during winter months or move into covered storage, if in wet climates.**

**The manufacturer supports protection of the world's forest resources and is diligent in sourcing legally harvested wood.**

Thank you

The manufacturer

# **1 year Limited Warranty**

The furniture is warranted to be free from defects in material and workmanship of the original product when purchased from one of our authorized dealers. If a product fails and is under the terms of our limited warranty, the item will be replaced, usually for a small fee. In the case of discontinued models, an item of similar quality and style will be offered to the customer.

- **1 year limited frame warranty**  
Frames are warranted to be free from defects in material and workmanship. Fading or discoloring caused by putting the product under sunlight or rain is not covered by this limited warranty. Damage to the frame due to improper assembly or exposure to water and sub-freezing temperatures is not covered. ( Do NOT allow water to accumulate inside frame )
- **Finish**  
The finish is warranted against peeling, cracking, or blistering for a period of 1 year, provided the unit has not been scratched or abraded. Scratches and chips resulting from normal wear and use are not covered. Peeling resulting from exposure to elements is not covered.
- **Fabric**  
Fabrics / cushions are warranted against separation at the seams and fading under normal usage and exposure conditions for a period of 1 year. Mildew and fading or discoloration resulting from exposure to the elements, chemicals, or from spills is not covered. (Please refer to care and maintenance for proper cleaning instructions)

Warranty Exclusions : Furniture used for commercial, contractor or any non-residential purposes, clearance items, display models or items purchased “as is”, freight damage, furniture damaged by acts of nature, vandalism, fire, abuse, lack of proper care and maintenance, or improper assembly, straps and fabric against fading or discoloration from exposure to elements, oil spills, fluids or chemicals; glass against breakage; hardware against corrosion or rusting; buckling or splitting of tubing resulting from exposure to water and freezing temperatures. Also excluded: loss of use or time, inconvenience, money, travel, packaging or any other consequential or incidental damages. In no event shall the manufacturer's responsibility exceed the value of the replacement product.

Warranty is to the original purchaser when items are purchased from one of our authorized retailers and is not transferable. All warranty claims must be submitted with a dated register receipt within the warranty period. Should replacement of the warranty item be unavailable, the manufacturer reserves the right to substitute items of our choice that are of similar style and quality. For quality control purposes and verification, we reserve the right to request photography of the damage item(s). The terms of this warranty are subject to change without notice.