


Panic Button Remote



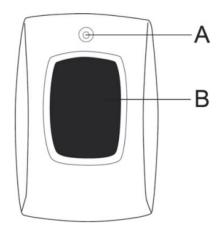


- A. LED Indicator
- B. Panic Button

Button Functionality


- 1. Press and hold the panic button for approximately 2 seconds. When the LED illuminates RED, a signal is transmitted to the hub
- 2. The hub receives the signal and sounds the siren*

Inserting and replacing the battery

- A. Top cover
- B. Flat head screwdriver

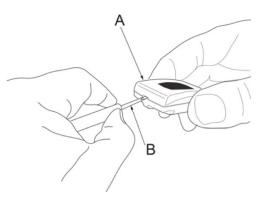

- 1. Insert a small, flathead screwdriver into the opening on the panic button and remove the top cover
- 2. Gently insert the flathead screwdriver between the battery and one of the metal clips in the battery compartment removing the old battery
- 3. Insert the replacement battery with the positive (+) sign facing up

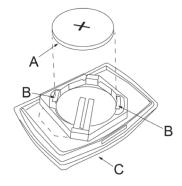

- A. Battery
- B. Metal clips
- C. Battery compartment

For additional information, please contact us

Constellation Connect Support | 1.888.918.7128 | support@constellationconnect.com | constellationconnect.com/contact

^{*}Customers with the Constellation Connect Professional Monitoring Service will immediately be contacted by the monitoring center



Pairing with your Constellation Connect Hub

- 1. Enter the device wizard on your mobile app or through your online account
- 2. Select Panic Button Remote from the list of available devices
- 3. Follow the in-app or on-screen instructions to begin the pairing process on your hub
- 4. Press and hold the button on the Panic Button Remote until the LED turns solid red
- 5. Your Panic Button Remote is successfully connected to your Constellation Connect Hub and will appear as a device in the device list
- 6. (Optional) Follow the on-screen instructions to name your remote and assign it to a room

For additional information, please contact us