 


Keypad

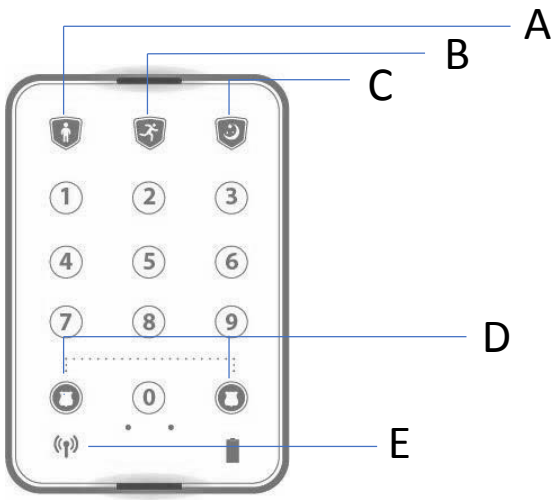

- A. Home
- B. Away
- C. Stay
- D. Panic shield buttons
- E. Network Icon

Button Functionality

Home - Press this button followed by your pin code to **Disarm** your hub

Away - Press this button followed by your pin code to **Arm** your hub

 
Stay - Press this button followed by your pin code to engage **Stay** your hub

Panic shield buttons - When pressed both buttons simultaneously, it will engage panic mode

Inserting and replacing the battery

Remove the battery cover and the mounting bracket (if installed) by sliding it downward

Remove the Pull Tab to activate the CR123A batteries as shown

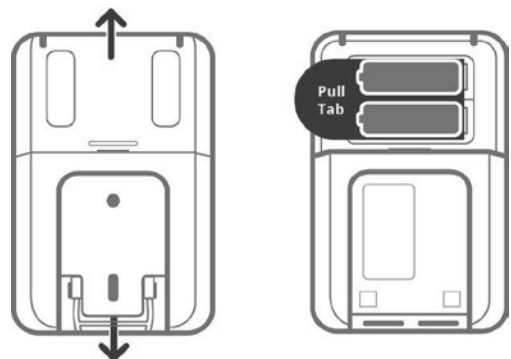

The network icon on the bottom left will start blinking, indicating that the keypad is ready to join the network. The keypad will automatically be detected, the network icon will turn OFF

Note: When the keypad is not joined to a network, the network icon will flash. Once it is joined, the network icon will become solid anytime the keypad is awake



For additional information, please contact us

Constellation Connect Support | 1.888.918.7128 | support@constellationconnect.com | constellationconnect.com/contact

Pairing with your Constellation Connect Hub

1. Enter the device wizard on your mobile app or through your online account
2. Select Keypad from the list of available devices
3. Follow the in-app or on-screen instructions to begin the pairing process on your hub

Adding Pin Codes

1. Go to your hub's interface and click on **Devices > Centralite 3-Series Settings**
 2. Click Add pin code, and enter your PIN Name and the PIN Code and press save pin code
 3. Click Back > PIN Codes to see your existing PIN Codes list
- Note: You can use any of the previously programmed codes on your Centralite 3400-G keypad to Disarm your hub

For additional information, please contact us

Constellation Connect Support | 1.888.918.7128 | support@constellationconnect.com |
constellationconnect.com/contact