



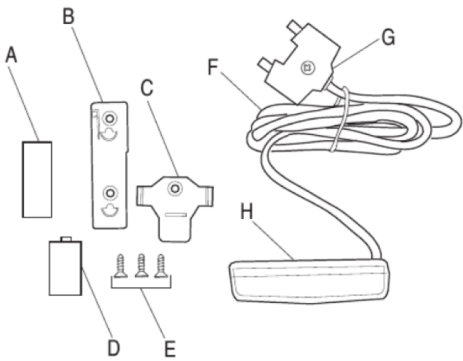


# Combination Flood – Water Temperature Sensor

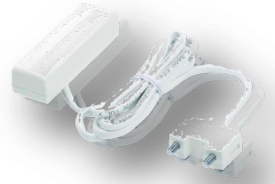

- A. Double Stick Tape Strip
- B. Sensor Mounting Plate
- C. Probe Mounting Plate
- D. 3V Lithium Battery
- E. Phillips-head screws
- F. Flood probe cord
- G. Flood probe
- H. Transmitter with integrated temperature sensor


### Battery insertion

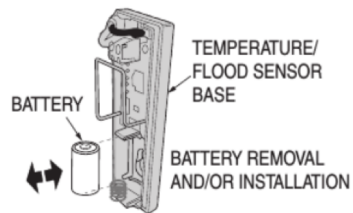

1. Insert the provided battery
2. Close sensor by replacing cover

### Mounting the Sensor

**Note:** Mounting the sensor can be done using the double sided tape strip or the provided screws and mounting plate (recommended)

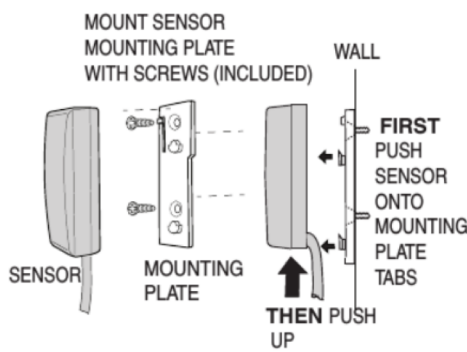


1. Position the mounting plate onto the nearest wall
2. Use the double sided tape or included hardware to fix the mounting plate in place
3. Attach the sensor to the mounting plate, then slide it up to lock to the plate

**For additional information, please contact us**

Constellation Connect Support | 1.888.918.7128 | support@constellationconnect.com  
constellationconnect.com/contact

**Note:** The Flood Probe must be mounted at floor level using the probe mounting plate and screw included as shown in the picture below.

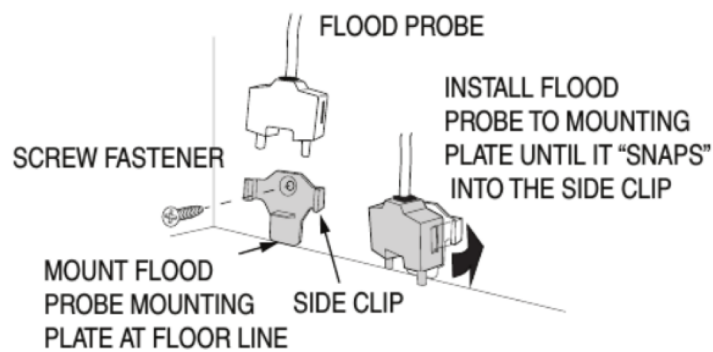

### Pairing with your Constellation Connect Hub

1. Enter the device wizard on your mobile app or through your online account
2. Select Combination Flood Temp Sensor from the list of available devices
3. Follow the in-app or onscreen instructions to begin the pairing process on your hub
4. Your Combination Flood Temp Sensor is successfully connected to your Constellation Connect Hub and will appear as a device in the device list
5. (Optional) Follow the online instructions to name your remote and assign it to a room

**For additional information, please contact us**

Constellation Connect Support | 1.888.918.7128 | support@constellationconnect.com |  
constellationconnect.com/contact