



# Rize Adjustable Beds Headboard Kit Instructions: King and California King Sizes

For Rize Beds Made in 2018 and Later (Excluding the Aviada and Tranquility)

## Headboard Kit Includes:

- 2 Inner Headboard Brackets
- 2 Outer Headboard Brackets
- 2 Washers
- 2 Screws


Hardware to attach headboard to brackets is not included.




## Instructions



Step 2: Figure A

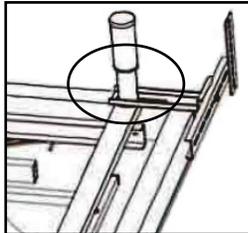

Step 4: Figure A

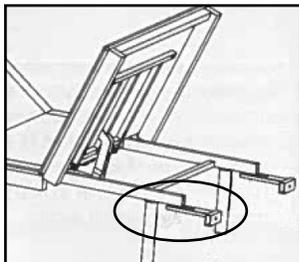

Step 5: Figure A



Step 7: Figure A

1.) Remove your mattress and retainer bar from the adjustable base. Flip the adjustable base upside down.

2.) Your bed frame will have two round panels under the head section of the bed where the legs are attached. (round panels shown in Step 2: Figure A). Remove the leg from round panel.

3.) Place the inner headboard bracket onto the round panel.

4.) Align the long open slot of the inner headboard bracket with the screw hole of the round panel. Screw the leg through the inner headboard bracket and into the round panel (Step 4: Figure A).

*The inner headboard bracket can be adjusted for optimal distance. We recommend leaving a distance of 1.5" to 2" between the bed base and the headboard bracket.*

5.) When both inner headboard brackets are installed, flip bed over to the upright position. The brackets should appear as they do in Step 5: Figure A.

6.) Use the wireless remote to elevate the head of the bed so the frame of the adjustable bed and inner headboard bracket are reachable.

7.) Attach the outer headboard bracket to the inner headboard bracket by using one screw and one washer (Step 7: Figure A). The width of the outer headboard bracket should align to the width of your headboard.

8.) Repeat on other side.

9.) Attach your headboard onto the vertical section of the outer headboard brackets by using a bolt, nut, and washer (**all attachment hardware should be included with your headboard and is not included with the adjustable bed**).

*The slots of the vertical end of the outer headboard brackets should align with the slots on the leg of your headboard. If the slots are not aligning, you can adjust the width by unscrewing the outer headboard bracket to realign with your headboard's slots.*



Underneath View of Assembled Headboard Bracket