




# RIZE® CONTEMPORARY REMOTE PROGRAMMING INSTRUCTIONS

## HOW TO SYNCH TWO BEDS TO ONE REMOTE

YOUR ADJUSTABLE BED IS PRE-PROGRAMMED TO YOUR REMOTE. HOWEVER, TO OPERATE TWO ADJUSTABLE BASES TOGETHER, YOU MUST PAIR BOTH TO ONE REMOTE. MAKE SURE YOUR FIRST ADJUSTABLE BASE IS PLUGGED IN BEFORE FOCUSING ON YOUR SECOND ADJUSTABLE BASE. PLEASE FOLLOW THE STEPS BELOW TO COMPLETE THE PAIRING:

LEARN BUTTON

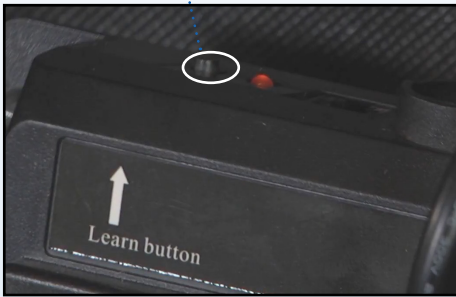

LED LIGHT



**STEP 1:** INSERT BATTERIES INTO THE HAND REMOTE CONTROL (USE TWO AA BATTERIES - INCLUDED).

**STEP 2:** MAKE SURE YOUR ADJUSTABLE BED IS PLUGGED INTO A WORKING GROUNDED OUTLET OR SURGE PROTECTOR.

**STEP 3:** LOCATE THE CONTROL BOX ON THE UNDERSIDE OF THE BED. HOLD DOWN THE LEARN BUTTON FOR 3 SECONDS.

**STEP 4:** THE LED LIGHT WILL ILLUMINATE. THIS MEANS THAT THE RF FREQUENCY CODE SETTING FUNCTION HAS BEEN ACTIVATED.

**STEP 5:** PRESS ANY BUTTON ON THE REMOTE CONTROL.

**STEP 6:** WHEN THE RECEIVER LIGHT FLASHES, THE RF FREQUENCY CODE LEARNING PROCESS IS COMPLETE.



## HOW TO SYNCH ONE REMOTE WITH TWO BEDS

**STEP 1:** FOLLOW STEPS 1 THROUGH 6 ABOVE FOR 1 HAND CONTROL AND 1 BED.

**STEP 2:** REPEAT THE STEPS FOR THE OTHER BED USING THE SAME HAND CONTROL.