



# RIZE® EDGE HT REMOTE PROGRAMMING INSTRUCTIONS

## HOW TO SYNCH TWO BEDS TO ONE REMOTE

YOUR ADJUSTABLE BED IS PRE-PROGRAMMED TO YOUR REMOTE. HOWEVER, TO OPERATE TWO ADJUSTABLE BASES TOGETHER, YOU MUST PAIR BOTH TO ONE REMOTE. MAKE SURE YOUR FIRST ADJUSTABLE BASE (BASE A) IS PLUGGED IN BEFORE FOCUSING ON YOUR SECOND ADJUSTABLE BASE (BASE B). PLEASE FOLLOW THE STEPS BELOW TO COMPLETE THE PAIRING:



**STEP 1:** PLUG IN BASE B TO A GROUNDED POWER OUTLET (SURGE PROTECTOR IS RECOMMENDED). LOCATE THE CONTROL BOX ON THE UNDERSIDE OF THE BED. ONCE PLUGGED IN, THE LED LIGHT ON THE CONTROL BOX WILL BLINK THREE TIMES, WHICH INDICATES THE CONTROL BOX HAS ENTERED LEARNING MODE. LEARNING MODE LASTS SEVEN SECONDS.



**STEP 2:** DURING LEARNING MODE, USE REMOTE A TO PRESS THE “HEAD UP” AND “FOOT UP” KEYS TOGETHER FOR THREE SECONDS.

**STEP 3:** THE LED LIGHT ON THE CONTROL BOX WILL LIGHT UP AND REMAIN ON, WHICH MEANS THE PAIRING IS SUCCESSFUL.

NOW BASE A & B WILL FUNCTION WITH REMOTE A AND THE PAIRING OF THE TWO ADJUSTABLE BASES IS COMPLETE.

## HOW TO RESET YOUR PRE-PROGRAMMED REMOTE

**STEP 1:** UNPLUG THE BED FROM THE POWER SOURCE.

**STEP 2:** PRESS AND HOLD THE FLAT BUTTON (WITHOUT RELEASE) TO CONTINUE SENDING SIGNAL.

**STEP 3:** PLUG IN THE BASE AND WAIT FOR 7 SECONDS, THEN RELEASE THE FLAT BUTTON. THE CONTROL BOX MUST RECEIVE FLAT SIGNAL FROM THE REMOTE FOR AT LEAST 5 SECONDS AFTER THE AC POWER IS PLUGGED BACK IN.

THE RESET IS COMPLETE.

