



RIZE® TRANQUILITY REMOTE PROGRAMMING INSTRUCTIONS

HOW TO SYNCH TWO BEDS TO ONE REMOTE

YOUR ADJUSTABLE BED ARRIVES PRE-PROGRAMMED TO THE INCLUDED REMOTE. IF YOU WANT TO OPERATE TWO ADJUSTABLE BASES TOGETHER, YOU MUST PAIR BOTH TO ONE REMOTE. PLEASE FOLLOW THE STEPS BELOW TO COMPLETE THE PAIRING:



STEP 1: MAKE SURE BOTH BASES ARE PLUGGED IN AND ARE NEXT TO EACH OTHER. MOVE BOTH BEDS TO A FLAT POSITION USING THE “FLAT” BUTTONS.

STEP 2: ON THE CONTROL BOX FOR THE SECOND BED, PRESS THE PAIRING BUTTON TWICE. THE LED LIGHT WILL TURN ON.

STEP 3: ON THE REMOTE FOR THE FIRST BASE, PRESS THE FOOT UP AND FOOT DOWN BUTTONS AT THE SAME TIME.

STEP 4: HOLD BOTH BUTTONS UNTIL THE LIGHT ON THE CONTROL BOX TURNS OFF (ABOUT 30 SECONDS). BOTH BASES WILL NOW OPERATE TOGETHER USING ONE REMOTE.

TO HAVE EACH BED OPERATE SEPARATELY AGAIN, SEE THE INSTRUCTIONS BELOW.



HOW TO RE-CONNECT A REMOTE TO YOUR BED

IF YOU HAVE A REPLACEMENT REMOTE, OR HAVE TWO BASES PAIRED TO ONE REMOTE THAT YOU WOULD LIKE TO OPERATE SEPARATELY, YOU WILL NEED TO RESET THE REMOTE CONTROL(S).

STEP 1: KEEP THE BED(S) PLUGGED IN AND MAKE SURE THAT YOU CAN REACH THE CONTROL BOX(ES). THE DISTANCE BETWEEN THE CONTROL BOX AND THE REMOTE SHOULD BE NO MORE THAN 6 FEET.

STEP 2: ON THE CONTROL BOX, PRESS THE PAIRING BUTTON TWICE. THE LED LIGHT WILL TURN ON.

STEP 3: ON THE REMOTE, PRESS THE HEAD UP AND HEAD DOWN BUTTONS AT THE SAME TIME. HOLD UNTIL THE LIGHT ON THE CONTROL BOX TURNS OFF. THE BASE IS NOW PAIRED TO THAT REMOTE.

STEP 4: IF YOU ALSO HAVE A SECOND BED BASE THAT YOU WANT TO OPERATE SEPARATELY, COMPLETE THE STEPS ABOVE FOR THE SECOND BASE AND REMOTE.